



YAMAHA

OWNER'S SERVICE MANUAL

PW80T

LIT-11626-18-30

3RV-28199-1E

⚠ WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

YAMAHA

LIT-CALIF-65-01

PW80T

OWNER'S SERVICE MANUAL

©2004 by Yamaha Motor Corporation, U.S.A.

1st Edition, April 2004

All rights reserved. Any reprinting or unauthorized use without the written permission of Yamaha Motor Corporation U.S.A. is expressly prohibited.

Printed in Japan.

P/N. LIT-11626-18-30

NOTICE

Some data in this manual may become outdated due to improvements made to this model in the future. If there is any question you have regarding this manual or your machine, please consult your Yamaha dealer.

INTRODUCTION

Congratulations on your purchase of the Yamaha PW80.

This model represents the product of many years of Yamaha experience in the production of fine sporting, touring, and pacesetter racing machines. You can now appreciate the high degrees of craftsmanship and reliability that have made Yamaha a leader in these fields. This manual will provide you with a good basic understanding of the features, operation, and basic maintenance and inspection items of this vehicle. If you have any questions regarding the operation or maintenance of your machine, please consult your Yamaha dealer.

Particularly important information is distinguished in this manual by the following notations:



The Safety Alert Symbol means **ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!**



Failure to follow **WARNING** instructions could result in severe injury or death to the machine operator, a bystander, or a person inspecting or repairing the machine.



A **CAUTION** indicates special precautions that must be taken to avoid damage to the machine.

NOTE:

A **NOTE** provides key information to make procedures easier or clearer.

⚠ WARNING

- READ THIS MANUAL CAREFULLY FOR INSTRUCTIONS ON HOW TO PROPERLY OPERATE THIS MACHINE.
- ADULT INSTRUCTION AND SUPERVISION ARE REQUIRED.
- THIS MODEL IS PROVIDED WITH A POWER REDUCTION PLATE FOR THE BEGINNING RIDER. DO NOT REMOVE THESE ITEMS UNTIL THE ADULT SUPERVISOR HAS JUDGED THE RIDER TO BE PROFICIENT.
- WEIGHT OF THE RIDER SHOULD NOT EXCEED 40 kg (88 lb).
- ALWAYS WEAR A HELMET AND SUITABLE PROTECTIVE CLOTHING WHEN RIDING.
- DO NOT TOUCH ANY MOVING PARTS OR HEATED AREAS.
- ALWAYS PERFORM PRE-OPERATION CHECKS. REFER TO PAGE 5.
- THIS MACHINE IS DESIGNED TO CARRY THE OPERATOR ONLY. NO PASSENGERS.
- THIS MACHINE IS DESIGNED FOR OFF-ROAD USE ONLY. IT IS NOT SUITABLE FOR ON-ROAD USE.

IMPORTANT NOTICE

This machine is designed for off-road use only by young operators under adult instruction and supervision. It is illegal for this machine to be operated on any public street, road, or highway. Off-road use on public lands may be illegal. Please check local regulations before riding.

⚠ SAFETY INFORMATION

1. **GASOLINE IS HIGHLY FLAMMABLE:**
 - * Always turn off the engine when refueling.
 - * Take care not to spill on the engine or exhaust pipe/muffler, when refueling.
 - * Never refuel while smoking or in the vicinity of an open flame.
2. If you should swallow some gasoline or inhale a lot of gasoline vapor, or allow some gasoline to get in your eye(s), see your doctor immediately. If any gasoline spills on your skin or clothing, immediately wash it with soap and water, and change your clothes.
3. Always turn off the engine before leaving the machine unattended. When parking the machine, note the following:
 - * The engine and exhaust pipe(s)/muffler(s) may be hot. Park the machine in a place where pedestrians or children are not likely to touch the machine.
 - * Do not park the machine on a slope or soft ground; the machine may overturn.
4. When transporting the machine in another vehicle, be sure it is kept upright and that the fuel cock is turned to the "OFF". If it should lean over, gasoline may leak out of the carburetor or fuel tank.
5. Never start your engine or let it run for any length of time in a closed area. The exhaust fumes are poisonous and may cause loss of consciousness and death within a short time. Always operate your machine in an area with adequate ventilation.
6. Always wear a helmet, gloves, boots, trousers, and jacket for motocross riding.


FOR THE PARENTS

Since this model is intended for beginning riders, it is equipped with a safety device that let you limit the operating speed of the machine; the power reduction plate. It limits the output of the engine.

As your child's riding skills improve, you can remove the power reduction plate. Since removal of this plate will result in a significant increase in power.

Please use this safety device to match the machine's output to your child's riding skills.

- A power reduction plate is provided in the cylinder exhaust port. Removal of this plate adds to the vehicle output power.

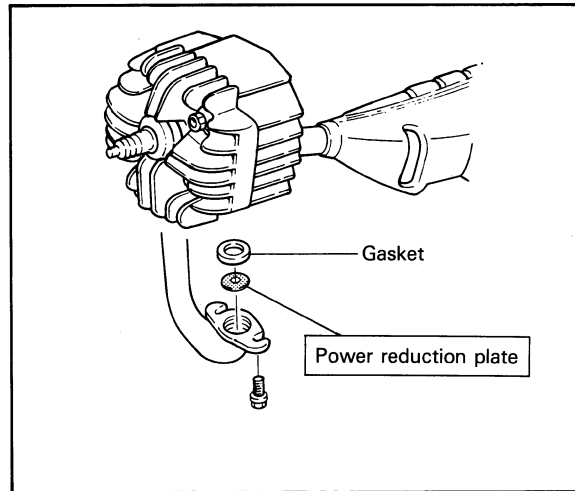

YAMAHA MOTOR CORPORATION, U.S.A. OFF-ROAD MOTORCYCLE LIMITED WARRANTY

Yamaha Motor Corporation, U.S.A. hereby warrants that each new Yamaha off-road motorcycle purchased from an authorized Yamaha motorcycle dealer in the continental United States will be free from defects in material and workmanship for the period of time stated herein, subject to certain stated limitations.

THE PERIOD OF WARRANTY for Yamaha off-road motorcycles shall be ninety (90) days from the date of purchase, with no mileage limitation.

MODELS EXCLUDED FROM WARRANTY include those machines used for non-Yamaha-authorized renting, leasing, or other commercial purposes.

DURING THE PERIOD OF WARRANTY any authorized Yamaha motorcycle dealer will, free of charge, repair or replace, at Yamaha's option, any part adjudged defective by Yamaha due to faulty workmanship or material from the factory. Parts used in warranty repairs will be warranted for the balance of the product's warranty period. All parts replaced under warranty become property of Yamaha Motor Corporation U.S.A.

GENERAL EXCLUSIONS from this warranty shall include any failures caused by:

- a. Competition or racing use (except TY models used for sanctioned trials).
- b. Installation of parts or accessories that are not qualitatively equivalent to genuine Yamaha parts.
- c. Abnormal strain, neglect, or abuse.
- d. Lack of proper maintenance.
- e. Accident or collision damage.
- f. Modification to original parts.
- g. Damage due to improper transportation.

SPECIFIC EXCLUSIONS from this warranty shall include parts replaced due to normal wear or routine maintenance.

THE CUSTOMER'S RESPONSIBILITY under this warranty shall be to:

1. Operate and maintain the motorcycle as specified in the appropriate Owner's Manual, and
2. Give notice to an authorized Yamaha motorcycle dealer of any and all apparent defects within ten (10) days after discovery, and make the machine available at that time for inspection and repairs at such dealer's place of business.

WARRANTY TRANSFER: To transfer the warranty from the original purchaser to any subsequent purchaser, it is imperative that the machine be inspected and registered for warranty by an authorized Yamaha motorcycle dealer. In order for this warranty to remain in effect, this inspection and registration must take place within ten (10) days after transfer. An inspection and registration fee will be charged for this service.

YAMAHA MOTOR CORPORATION, U.S.A. MAKES NO OTHER WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH EXCEED THE OBLIGATIONS AND TIME LIMITS STATED IN THIS WARRANTY ARE HEREBY DISCLAIMED BY YAMAHA MOTOR CORPORATION, U.S.A. AND EXCLUDED FROM THIS WARRANTY.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALSO EXCLUDED FROM THIS WARRANTY ARE ANY

INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING LOSS OF USE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

YAMAHA MOTOR CORPORATION, U.S.A.
P. O. Box 6555
Cypress, California 90630

WARRANTY QUESTIONS AND ANSWERS

- Q. What costs are my responsibility during the warranty period?
A. The customer's responsibility includes all costs of normal maintenance services, non-warranty repairs, accident and collision damage, and oil, oil filters, air filters, spark plugs, and brake shoes or pads.
- Q. What are some examples of "abnormal" strain, neglect, or abuse?
A. These terms are general and overlap each other in areas. Specific examples include: Running the machine out of oil; sustained high-rpm, full-throttle use; operating the machine with a broken or damaged part which causes another part to fail; damage or failure due to improper or careless transportation and or tie down; and so on. If you have any specific questions on operation or maintenance, please contact your dealer for advice.
- Q. Does the warranty cover incidental costs such as towing or transportation due to a failure?
A. No. The warranty is limited to repair of the machine itself.
- Q. May I perform any or all of the recommended maintenance shown in the Owner's Manual instead of having the dealer do them?
A. Yes, if you are a qualified mechanic and follow the procedures specified in the Owner's and Service Manual. We do recommend, however, that items requiring special tools or equipment be done by a Yamaha motorcycle dealer.
- Q. Will the warranty be void or cancelled if I do not operate or maintain my new motorcycle exactly as specified in the Owner's Manual?
A. No. The warranty on a new motorcycle cannot be "voided" or "cancelled." However, if a particular failure is caused by operation or maintenance other than as shown in the Owner's Manual, that failure may not be covered under warranty.
- Q. What responsibility does my dealer have under this warranty?
A. Each Yamaha motorcycle dealer is expected to:
1. Completely set up every new machine before sale.
2. Explain the operation, maintenance, and warranty requirements to your satisfaction at the time of sale, and upon your request at any later date.
In addition, each Yamaha motorcycle dealer is held responsible for his setup, service and warranty repair work.
- Q. Is the warranty transferable to second owners?
A. Yes. The remainder of the existing warranty can be transferred upon request. The unit has to be inspected and re-registered by an authorized Yamaha motorcycle dealer for the warranty coverage to remain effective.

CUSTOMER SERVICE

If your machine requires warranty service, you must take it to any authorized Yamaha motorcycle dealer within the continental United States. Be sure to bring your warranty registration identification or other valid proof of the original date of purchase. If a question or problem arises regarding warranty, first contact the owner of the dealership. Since all warranty matters are handled at the dealer level, this person is in the best position to help you. If you are still not satisfied and require additional assistance, please write:

YAMAHA MOTOR CORPORATION U.S.A.
CUSTOMER RELATIONS DEPARTMENT
P.O. Box 6555
Cypress, California 90630

When contacting Yamaha Motor Corporation, U.S.A. don't forget to include any important information such as names, addresses, model, V.I.N. (frame number), dates, and receipts.

CHANGE OF ADDRESS

The federal government requires each manufacturer of a motor vehicle to maintain a complete, up-to-date list of all first purchasers against the possibility of a safety-related defect and recall. This list is compiled from the purchase registrations sent to Yamaha Motor Corporation, U.S.A. by the selling dealer at the time of your purchase.


If you should move after you have purchased your new motorcycle, please advise us of your new address by sending a postcard listing your motorcycle model name, V.I.N. (frame number), dealer number (or dealer's name) as it is shown on your warranty identification, your name and new mailing address. Mail to :

YAMAHA MOTOR CORPORATION, U.S.A.
WARRANTY DEPARTMENT
P.O. Box 6555
Cypress, California 90630


This will ensure that Yamaha Motor Corporation, U.S.A. has an up-to-date registration record in accordance with federal law.

⚠ SAFETY INFORMATION


1. Don't ride it on the street.

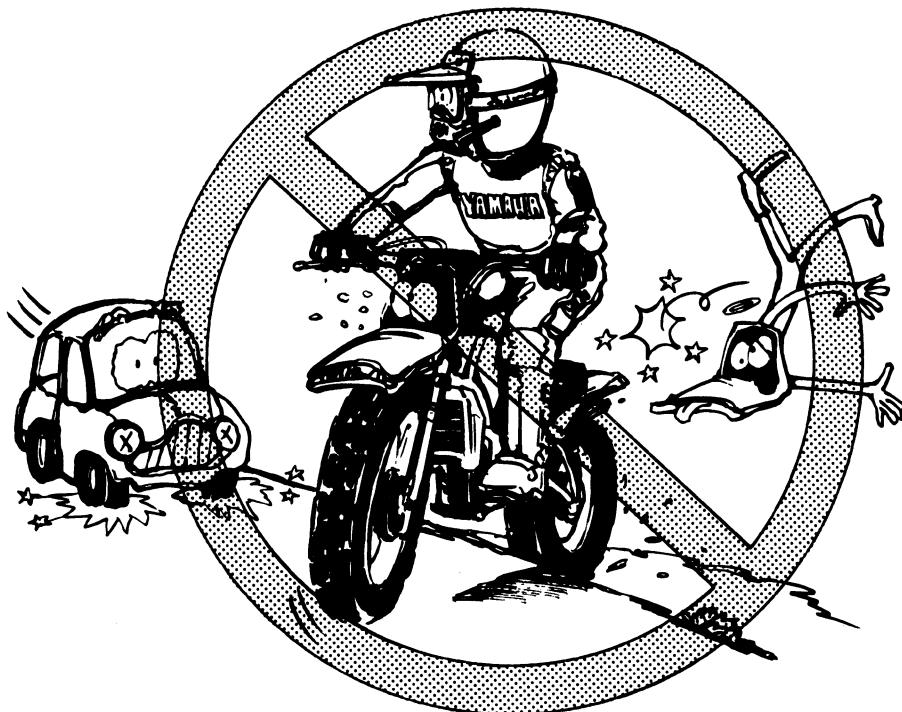


2. Don't run the engine inside a building.

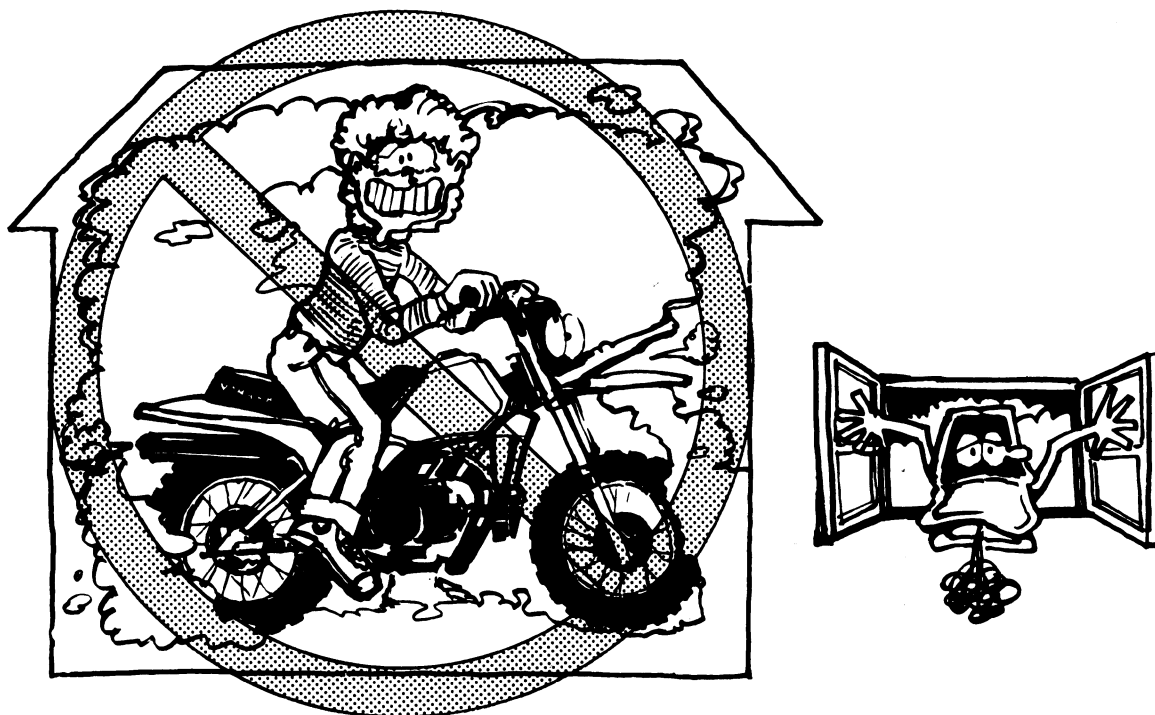


3. This is a one-seater motorbike. Don't give any person a ride.

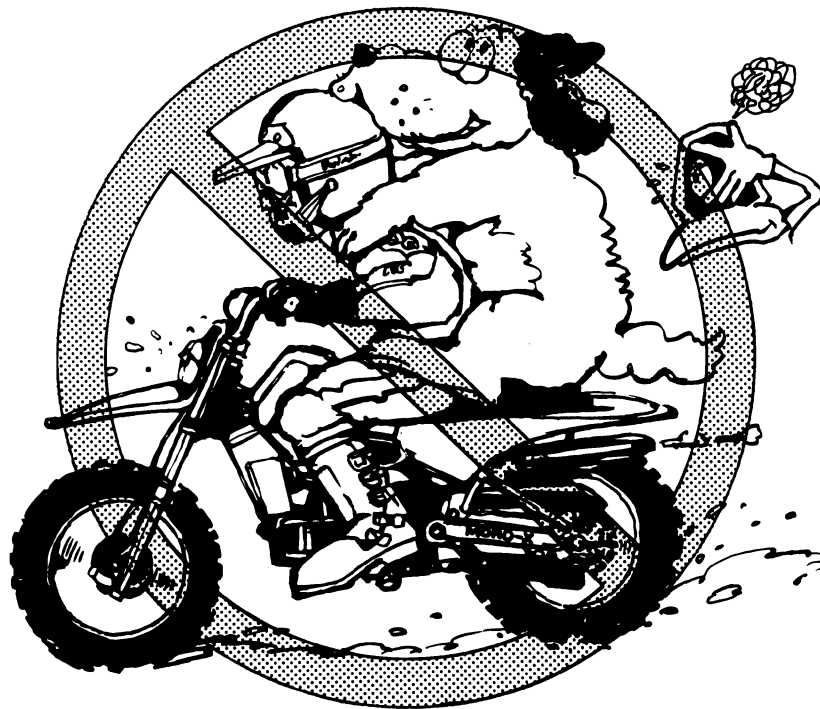

4. Let's learn how to ride properly. Ask your parents for any question.

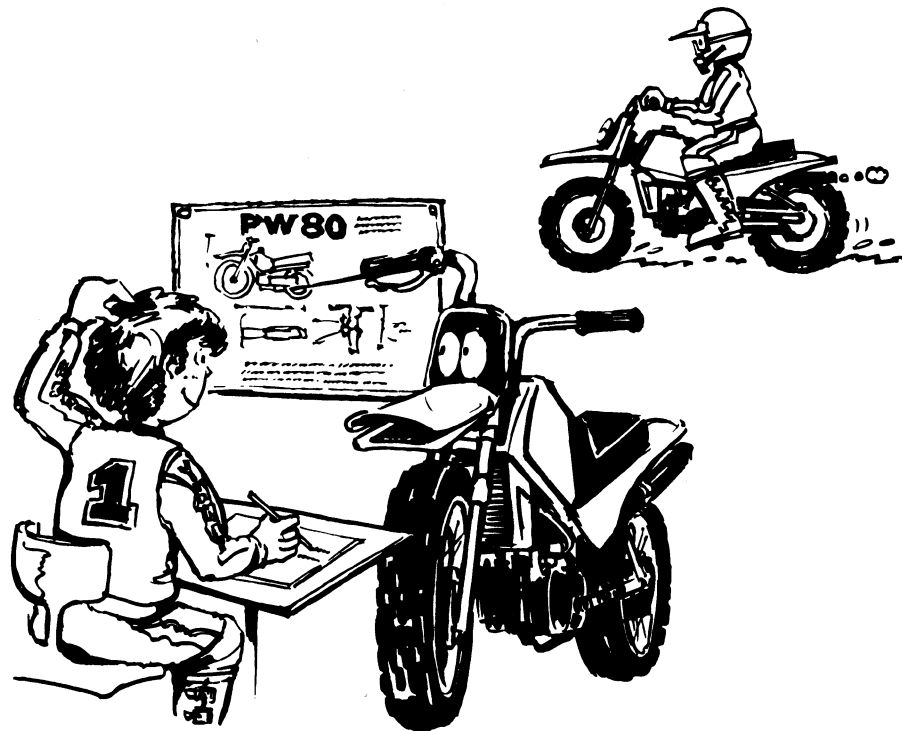


5. When riding the machine, be sure to wear a helmet as illustrated.

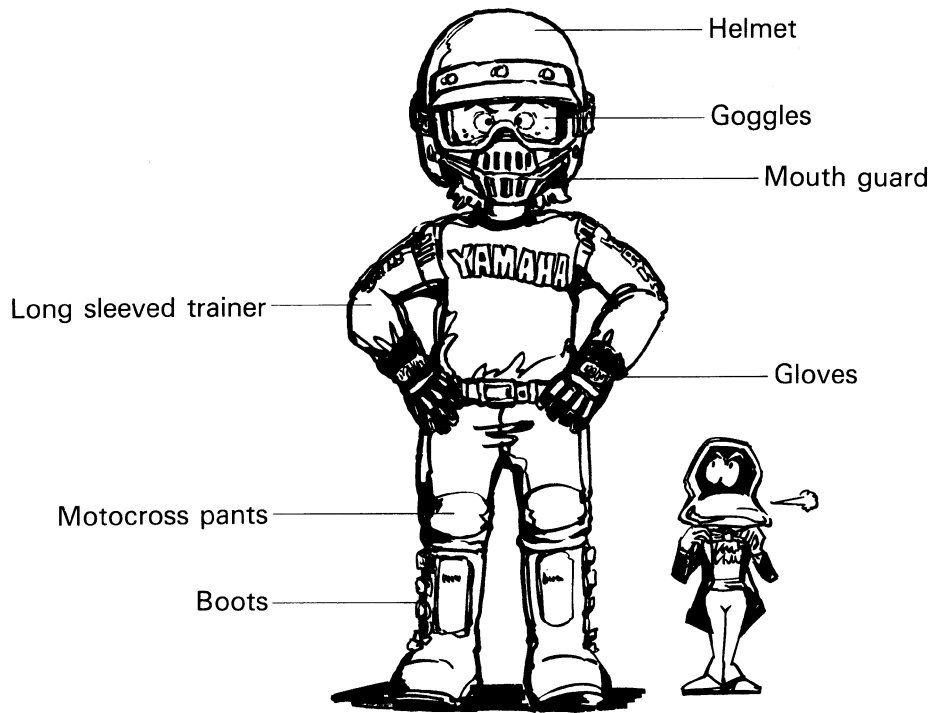


6. When going for riding, be sure to be with your family. Never go alone.




7. Before riding the machine, ask your parents to check the machine very carefully.

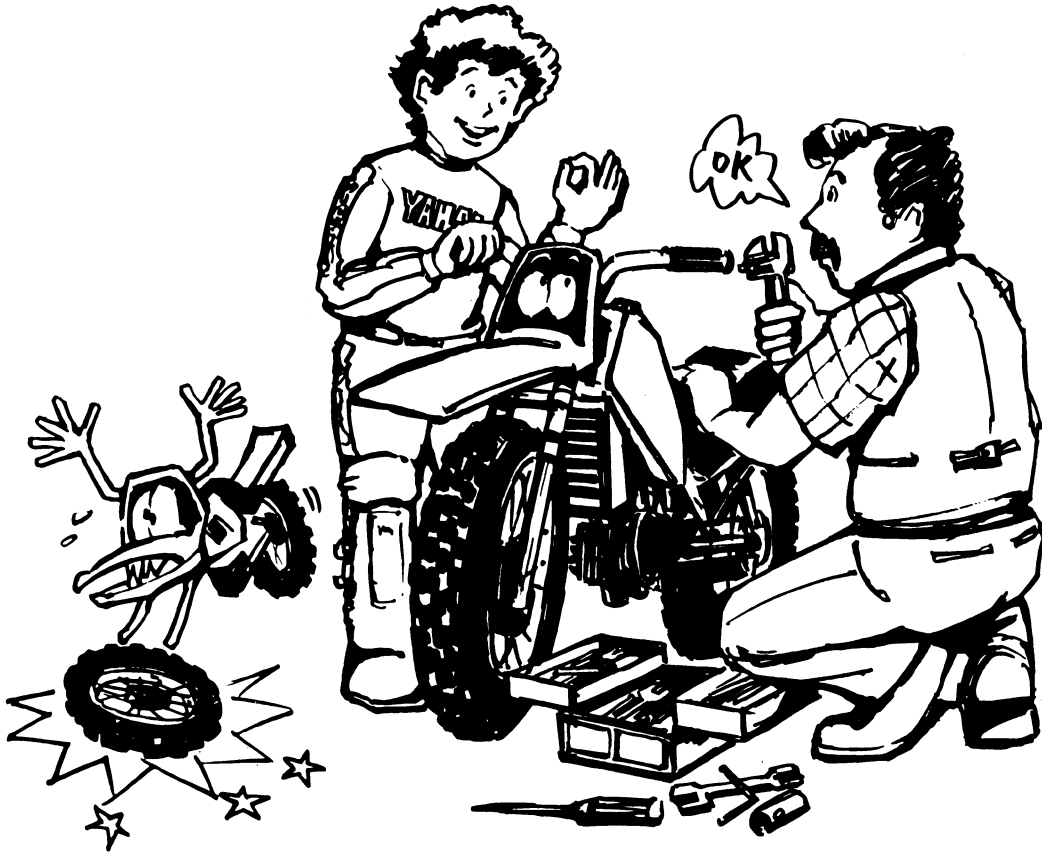


8. Don't touch the areas shown below, or you'll get burnt in the hand.

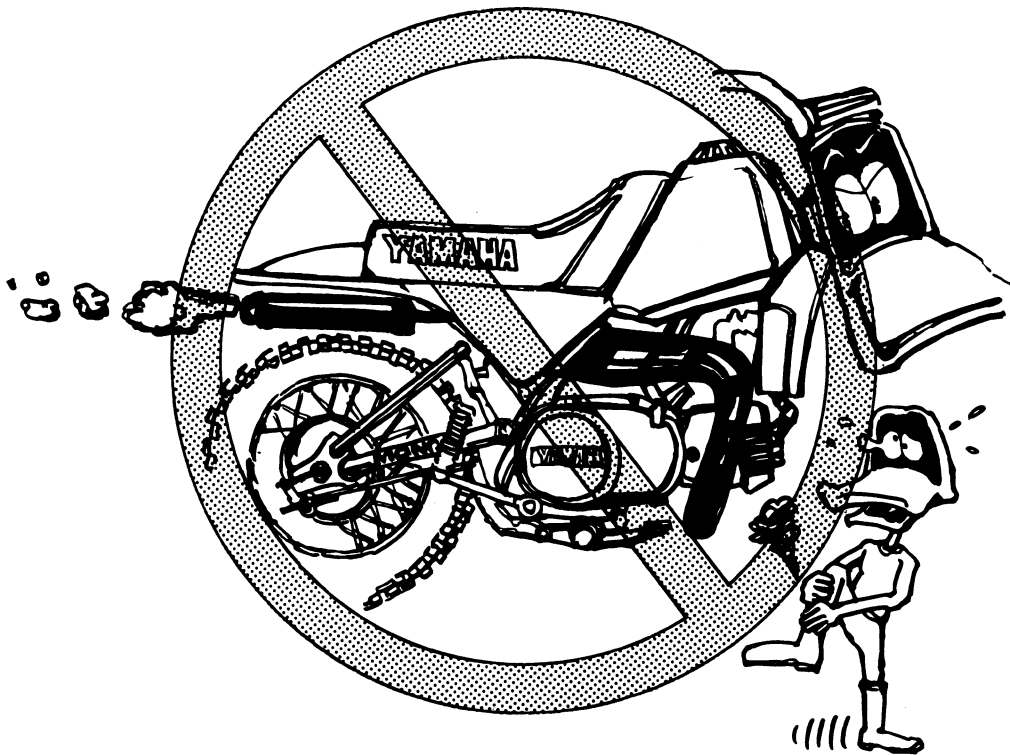

9. Don't touch rotating or moving parts.

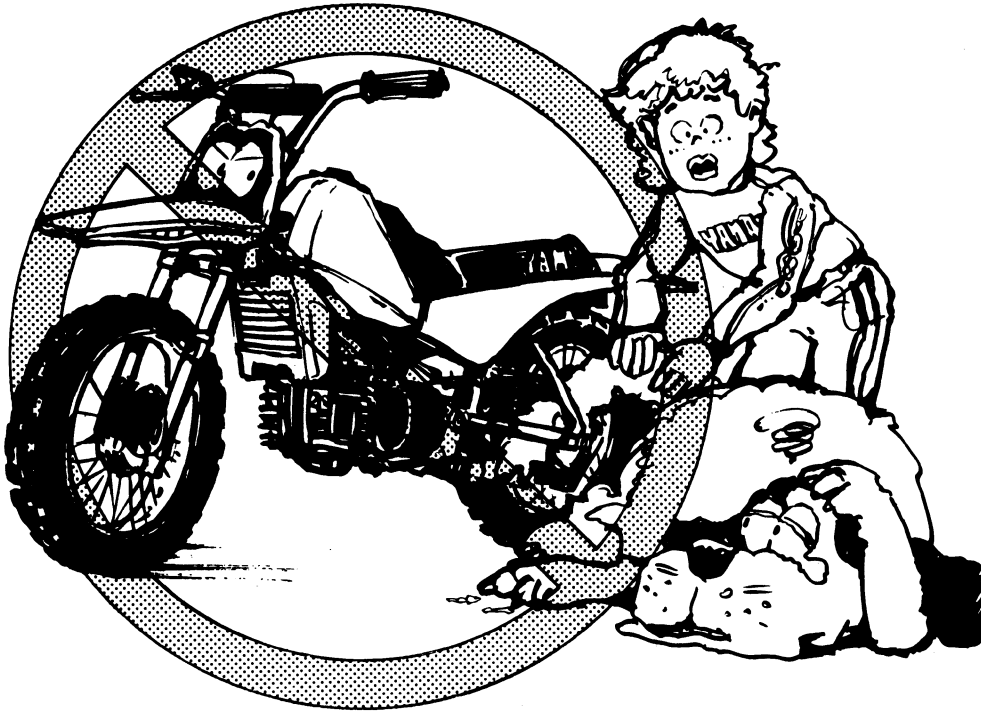

10. Before starting the engine, be sure to shift the transmission into neutral.

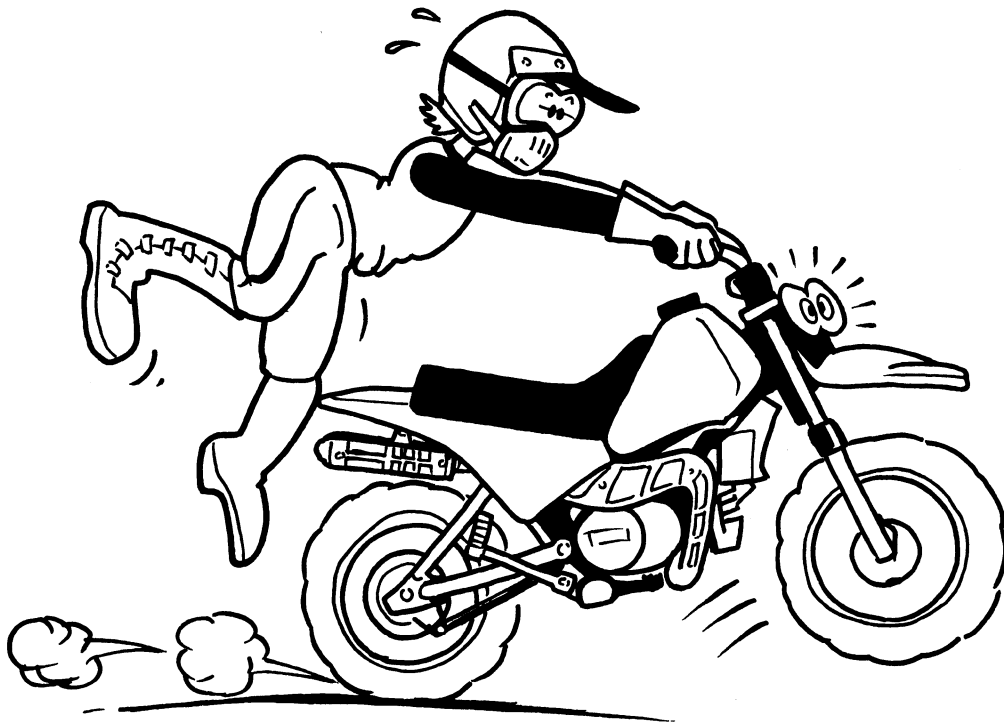


CONTENTS


GENERAL INFORMATION	1
DESCRIPTION	1
MACHINE IDENTIFICATION	1
CONTROL FUNCTIONS	2
FUEL AND OIL	3
PRE-OPERATION CHECKS	5
STARTING AND OPERATION	6
PERIODIC MAINTENANCE AND ADJUSTMENT	7
MAINTENANCE AND LUBRICATION SCHEDULE CHART	7
SPECIAL TOOLS	8
ADJUSTMENT	10
MAINTENANCE AND MINOR REPAIRS	19
PREPARATION FOR SERVICE	19
ENGINE	19
CHASSIS	31
MISCELLANEOUS	37
ELECTRICAL COMPONENTS AND WIRING DIAGRAM	37
TROUBLESHOOTING	40
CLEANING AND STORAGE	41
SPECIFICATIONS	42
CABLE ROUTING	50
NOISE REGULATION	52
MAINTENANCE RECORD	52

GENERAL INFORMATION


DESCRIPTION

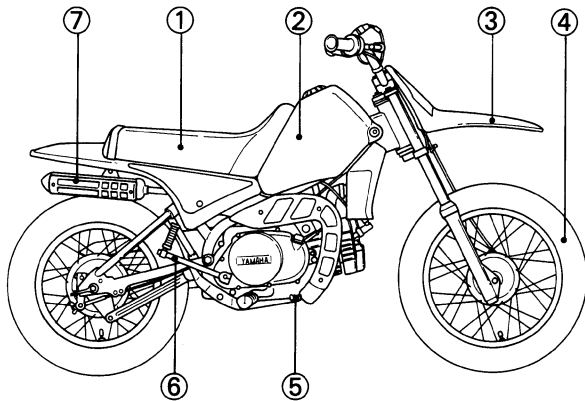

- | | |
|-----------------|-----------------|
| 1. Seat | 5. Brake pedal |
| 2. Fuel tank | 6. Kick starter |
| 3. Front fender | 7. Muffler |
| 4. Front wheel | |

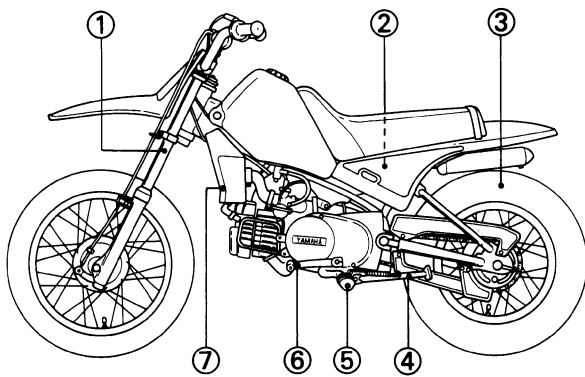

- | | |
|-------------------------|----------------|
| 1. Front fork | 5. Footrest |
| 2. Monocross suspension | 6. Shift pedal |
| 3. Rear wheel | 7. Air filter |
| 4. Sidestand | |

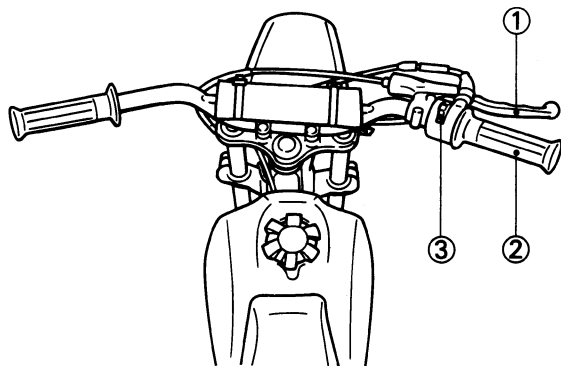


- | |
|-------------------------|
| 1. Front brake lever |
| 2. Throttle grip |
| 3. "ENGINE STOP" switch |

MACHINE IDENTIFICATION

VEHICLE IDENTIFICATION NUMBER

The vehicle identification number is stamped into the steering head pipe.

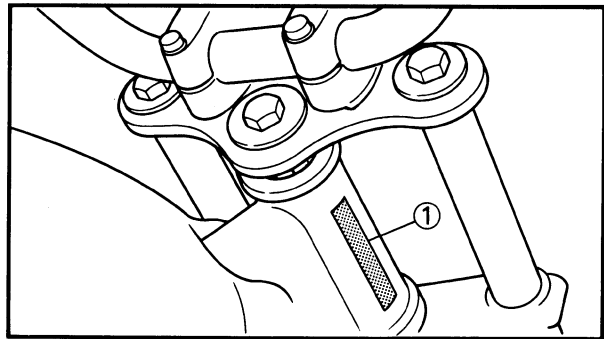


1. Vehicle identification number

NOTE:

The vehicle identification number is used to identify your machine and may be used to register your machine with the licensing authority in your state.

ENGINE SERIAL NUMBER

The engine serial number is stamped on the left side of the engine on top of the crankcase.

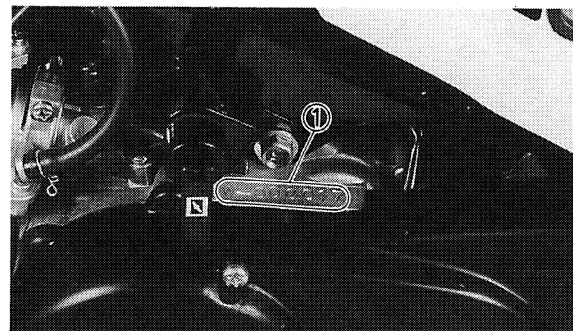

1. Engine serial number


NOTE:

The first digits of these numbers are for model identifications; the remaining digits are the unit production number.

Keep a record of these numbers for reference when ordering parts from a Yamaha dealer.

MODEL LABEL

The model label ① is affixed to the frame under the rider's seat. This information will be needed to order spare parts.

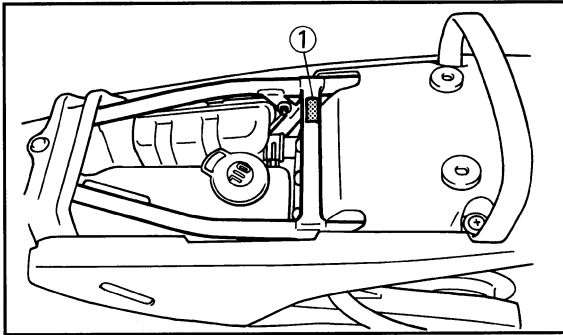

1. Model label

CONTROL FUNCTIONS

⚠ WARNING

Before riding this machine, become thoroughly familiar with all operating controls and their function.


Consult a Yamaha dealer or other qualified mechanic regarding any control or function you do not thoroughly understand.

NOTICE:

This machine is designed strictly for competition use only. It is not equipped with highway approved lighting. Off-road use on public land may be illegal.

"ENGINE STOP" SWITCH

Make sure that the engine stop switch is positioned to "RUN". The engine switch has been equipped to ensure safety in an emergency such when the machine is upset or trouble takes place in the throttle system. The engine will not start or run when the engine stop switch is turned to "OFF".

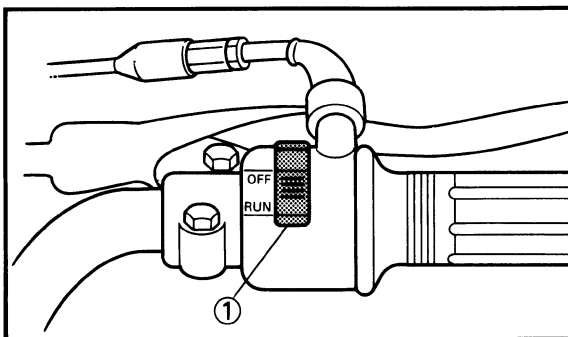

1. "ENGINE STOP" switch


FUEL COCK

The fuel cock supplies fuel from the tank to carburetor while filtering the fuel. The fuel cock has the three positions:

OFF: With the lever in this position, fuel will not flow. Always return the lever to this position when the engine is not running.


ON: With the lever in this position, fuel flows to the carburetor. Normal riding is done with the lever in this position.

RES: This indicates reserve. If you run out of fuel while riding, move the lever to this position. **FILL THE TANK AT THE FIRST OPPORTUNITY. BE SURE TO SET THE LEVER TO "ON" AFTER REFUELING.**

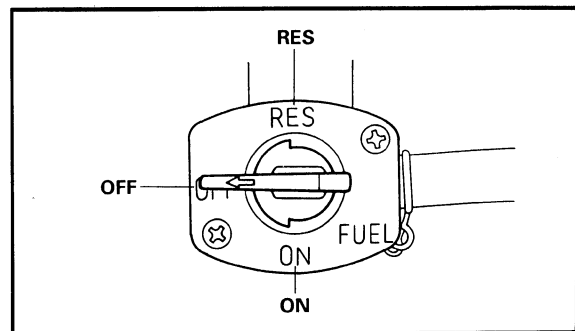

FRONT BRAKE LEVER


The front brake lever is located on the right handlebar, pull it toward the handlebar to activate the front brake.

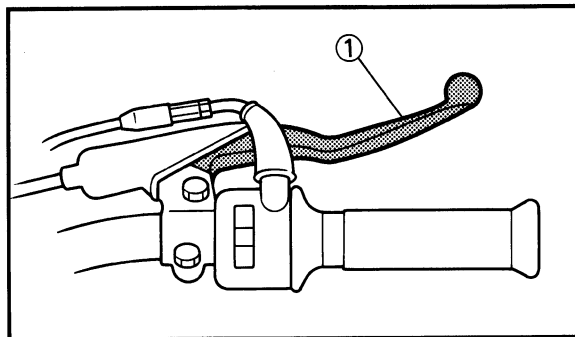

1. Front brake lever

REAR BRAKE PEDAL


The rear brake pedal is on the right side of the machine. Press down on the brake pedal to activate the rear brake.

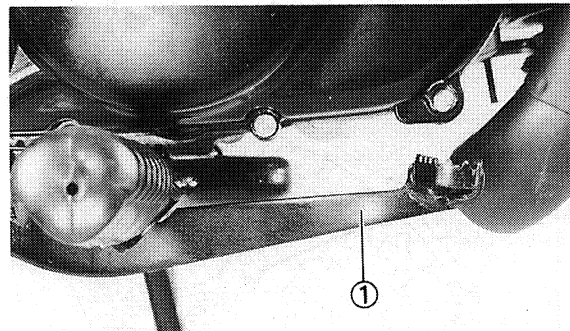

1. Rear brake pedal

SHIFT PEDAL

The gear ratios of the constant mesh 3-speed transmission are ideally spaced. The gears can be shifted by using the shift pedal on the left side of the engine.

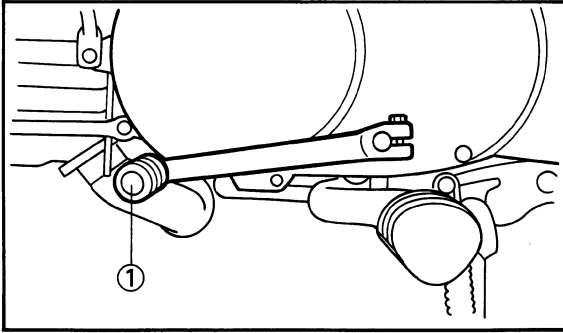


1. Shift pedal

STARTER LEVER (CHOKE)

When cold, the engine requires a richer air/fuel mixture for starting. A separate starter circuit, which is controlled by the starter lever, supplies this mixture.

Pull the lever out to open the circuit (for starting) and push the lever in to close the circuit.

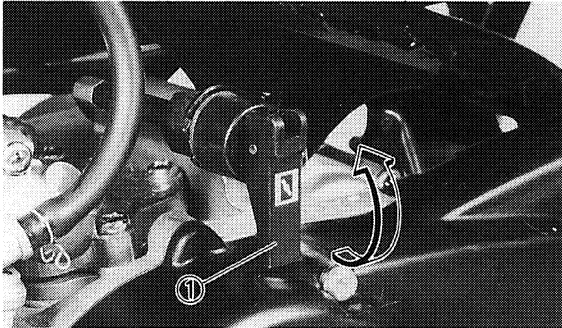


1. Starter lever

KICK STARTER

⚠ WARNING

Before starting the engine, be sure to shift the transmission into neutral.

Rotate the kick starter ① away from the engine. Push the starter down lightly with your foot until the gears engage, then kick smoothly and forcefully to start the engine.

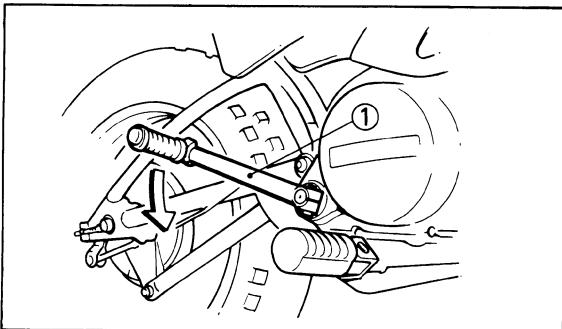


1. Kick starter

FUEL TANK CAP

Remove the fuel tank cap by turning counter-clockwise.

⚠ WARNING

Do not overfill the fuel tank. Avoid spilling fuel on the hot engine.

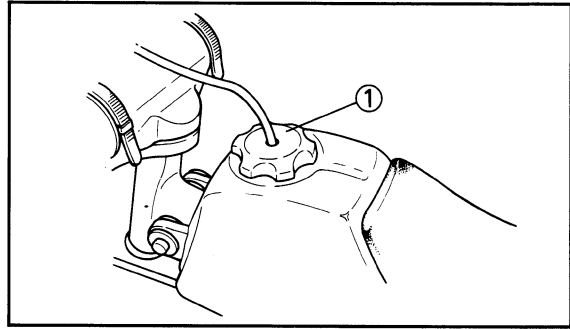

1. Fuel tank cap


FUEL AND OIL

FUEL

Use regular gasoline. Always use fresh, name brand gasoline.

⚠ WARNING

Do not overfill the fuel tank. Avoid spilling fuel on the hot engine. Do not fill the fuel tank above the bottom of the filler tube as shown in the illustration or it may overflow when the fuel heats up later and expands.

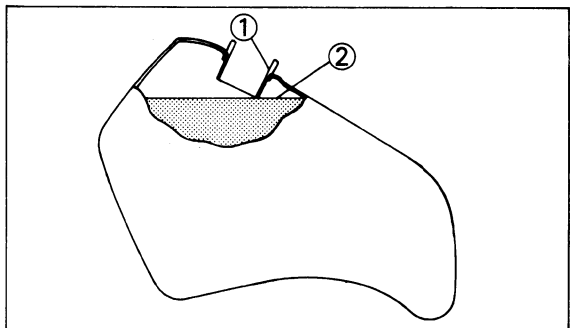

1. Filler tube

2. Fuel level

Recommended fuel:

UNLEADED GASOLINE ONLY

Fuel tank capacity:

Total:

4.9 L (1.08 Imp gal, 1.29 US gal)

Reserve:

1.0 L (0.22 Imp gal, 0.26 US gal)

Your Yamaha engine has been designed to use regular unleaded gasoline with a pump octane number $([R + M]/2)$ of 86 or higher, or research octane number of 91 or higher. If knocking or pinging occurs, use a different brand of gasoline or premium unleaded fuel. Unleaded fuel will give you longer spark plug life and reduced maintenance cost.

ENGINE OIL (OIL TANK)


Make sure there is sufficient engine oil in the oil tank. If necessary add oil.

Recommended oil:

Yamalube 2-S or air-cooled
2-stroke engine oil

Oil tank capacity:

0.95 L (0.84 Imp qt, 1.00 US qt)

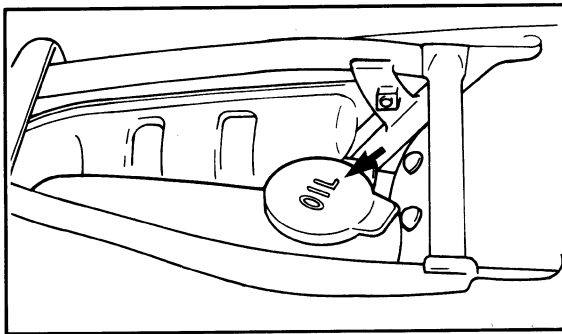


TRANSMISSION OIL

The only servicing for you to do is to check and fill the transmission lubricating oil. The transmission dip stick is located right above the kick starter. To check the level, warm the engine up for several minutes, screw the dip stick completely out and then just rest the stick in the hole.

NOTE:

When checking transmission oil level with the dip stick, let the unscrewed dip stick just rest on the case threads. Also, be sure the machine is positioned straight up.

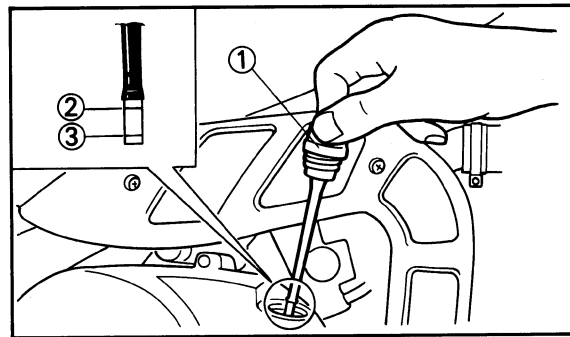

1. Dip stick
2. Maximum level
3. Minimum level

Recommended oil

Yamalube 4 (10W30)
or SAE 10W30 type SE motor oil

Oil capacity:

Total amount:


0.75 L (0.66 Imp qt, 0.79 US qt)

Periodic oil change:

0.65 L (0.57 Imp qt, 0.69 US qt)

The dip stick has a Minimum and Maximum mark, and the oil level should be between the two. If the level is lower, then add sufficient oil to raise it to the proper level.

On the bottom of the engine there is a drain plug. Remove it and drain all the transmission oil out. Reinstall the drain plug (make sure it is tight). Add oil through the dip stick hole.

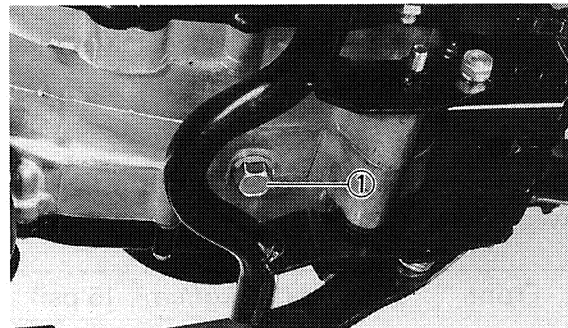

1. Drain plug

Drain plug torque:

20 Nm (2.0m•kg, 14 ft•lb)

NOTE:

Do not add any chemical additives. Transmission oil also lubricates the clutch and additives could cause the clutch to slip.

PRE-OPERATION CHECKS

Item	Routine	Page
Brake	Check operation/adjustment	5, 14
Transmission oil	Change oil as required	4
Drive chain	Check alignment/adjustment/lubrication	15
Spark plug	Check color/condition	10
Throttle	Check for proper throttle cable operation	5, 12
Air filter	Foam type — must be clean and damp w/oil always	11 ~ 12
Wheels and tires	Check pressure/runout/spoke tightness/bead stopper/axle nuts	5, 16, 31 ~ 34
Fittings/fasteners	Check all — tighten as necessary	5, 46, 47, 49

NOTE:

Pre-operation checks should be made each time the machine is used. Such an inspection can be thoroughly accomplished in a very short time; and the added safety it assures is more than worth the time involved.

 WARNING

If any item in the PRE-OPERATION CHECK is not working properly, have it inspected and repaired before operating the machine.

BRAKE (FRONT AND REAR)

Check for correct play in the brake lever and pedal and make sure they are working properly. Check the brakes at low speed shortly after starting out. If the play is correct, make an adjustment.

WHEEL

Check the wheel runout and damage, and check the tightness of spokes.

TIRES

Check the tire pressure and check the tires for wear.

Front	100 kPa (1.0 kgf/cm ² , 15 psi)
Rear	100 kPa (1.0 kgf/cm ² , 15 psi)

THROTTLE GRIP

Turn the throttle grip to see that it operates properly and that the play is normal. Make certain the throttle springs are closed when released.

“ENGINE STOP” SWITCH

Start the engine and make sure the “ENGINE STOP” switch functions properly.

FITTINGS/FASTENERS

Always check the tightness of chassis fittings and fasteners before a ride. Use the chart on page 46, 47 and 49 to find the correct torque.

STARTING AND OPERATION

CAUTION:

Prior to operating the machine, perform steps listed in pre-operation check list.

⚠ WARNING

Never start your engine or let it run for any length of time in a closed area. The exhaust fumes are poisonous and can cause loss of consciousness and death within a short time. Always operate your machine in an area with adequate ventilation.

STARTING A COLD ENGINE

⚠ WARNING

Before starting the engine, be sure to shift the transmission into neutral.

1. Turn the fuel cock to "ON".
2. Operate the starter (choke) and completely close the throttle grip.
3. Slide the "ENGINE STOP" switch to the "RUN".
4. Kick the kick starter with full strength to start the engine.
5. After the engine starts, warm up for one or two minutes. Make sure the starter (choke) is returned to the original position before riding.

STARTING A WARM ENGINE

To start a warm engine, refer to the "Starting a cold engine" section. The starter (choke) should not be used. The throttle should be opened slightly.

CAUTION:

See "Break-in Section" prior to operating engine for the first time.

WARMING UP

To get maximum engine life, always "warm-up" the engine before starting off. Never accelerate hard with a cold engine! To see whether or not the engine is warm, see if it responds to throttle normally with the starter (choke) turned off.

⚠ WARNING

Before starting off, be sure to turn up or remove the side stand.

Failure to retract the side stand completely can result in a serious accident when you try to turn a corner.

ENGINE BREAK-IN

1. Prior to starting, fill fuel tank with gasoline and oil tank with specified oil.
2. Allow engine to warm up. Check engine idling speed. Check operating controls and engine stop switch operation.
3. Operate machine in lower gears at moderate throttle setting for 3~5 minutes. Check spark plug condition.
4. Allow engine to cool. Repeat procedure, running for 5 minutes. Very briefly, shift to higher gears and check full throttle response. Check spark plug condition.
5. Allow engine to cool. Repeat procedure, running for 5 minutes. Full throttle and higher gears may be used, but avoid sustained full throttle operation. Check spark plug condition.
6. Allow engine to cool. Remove top end and inspect. Remove "high" spots on piston with No. 600 grit, wet sandpaper. Clean, and carefully reassemble.
7. Check entire unit for loose or misadjusted fittings/controls/fasteners.
8. Re-start engine and check through entire operating range thoroughly. Stop. Check spark plug condition. Re-start. After 10~15 minutes operation, machine is ready to ride.

PERIODIC MAINTENANCE AND ADJUSTMENT

MAINTENANCE AND LUBRICATION SCHEDULE CHART

The maintenance and lubrication schedule chart should be considered strictly as a guide to general maintenance and lubrication intervals. You must take into consideration that weather, terrain, geographical locations, and a variety of individual uses all tend to demand that each owner alter this time schedule to match his environment. For example, if the machine is continually operated in an area of high humidity then all parts must be lubricated much more frequently than shown on the chart to avoid rust and damage. If you are in doubt as to how closely you can follow these time recommendations, check with the Yamaha dealer in your area.

Lubrication intervals

Item	Remarks	Type	Initial (hour)				Thereafter every (hour)		
			10	20	40	80	40	80	160
Transmission oil change	Warm engine before draining	Yamalube 4-cycle oil or SAE 10W30 type SE motor oil		○	○			○	
Drive chain	Lube/ Adjust as required Remove/ Clean/ Lube/ Adjust	Yamalube Chain and Cable Lube or SAE 10W30 motor oil	See service notes						
Control cables	All apply thoroughly	Yamaha Cable Lube or WD-40			○	○		○	
Throttle grip and housing	Apply lightly	Yamaha Cable Lube or WD-40				○		○	
Brake pedal shaft	Apply lightly	Yamaha Cable Lube or WD-40			○			○	
Stand shaft pivot	Apply lightly	Yamaha Cable Lube or WD-40			○			○	
Front forks	Drain completely	Yamaha fork oil 20 wt or equivalent				○		○	
Steering ball race	Inspect thoroughly/ Pack moderately	Medium-weight wheel bearing grease				○			○
Wheel bearings	Do not over-pack yearly or ...	Medium-weight wheel bearing grease				○	○	○	

Periodic maintenance intervals

Item	Remarks	Initial (hour)				Thereafter every (hour)		
		10	20	40	80	40	80	160
Brake system (complete)	Check / Adjust as required — repair as required		○	○		○		
Clutch	Check / Adjust as required		○	○		○		
Spark plug	Inspect / Clean or replace as required	○	○	○		○		
Spark arrester	Clean					○		
Wheels and tires	Pressure / Runout / Spoke — tension	○	○	○		○		
Fittings and fasteners	Tighten before each trip and / or	○	○	○		○		
Drive chain	Tension / Alignment (No.1)	○	○	○		○		
Air filter	Wet type — clean / Replace as required (No.2)		○	○	○	○		
Fuel cock	Clean / Flush tank as required	○		○		○		
Ignition timing	Adjust / Clean or replace as required		○	○	○		○	
Autolube pump	Check / Adjust / Air bleeding	○	○	○		○		
Carburetor adjustment	Check / operation / Timings		○	○	○		○	
Carburetor overhaul	Clean / Repair as required / Refit / Adjust							○
Cylinder compression	Preventive maintenance check		○	○	○		○	
Decarbonize engine	Includes exhaust system			○			○	

SERVICE NOTES:

No. 1. DRIVE CHAIN: In addition to tension and alignment, chain must be lubricated every 0.5~1.0 hour. If unit is subjected to extremely hard usage and wet weather riding, chain must be checked constantly. See "Lubrication Intervals" for additional details.

No. 2. AIR FILTER: Remove and clean filter every 20~40 hours.


SPECIAL TOOLS

The following special tools are required to perform maintenance, adjustments, and repairs on your machine. These tools can be obtained through your Yamaha dealer.

FOR ENGINE SERVICE


1. Dial Gauge
P/N. YU-3097

This tool is used for adjusting the oil pump stroke.

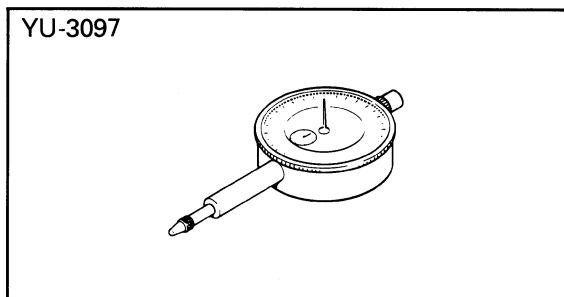


2. Inductive Timing Light
P/N. YM-33277-A

This tool is necessary for checking the ignition timing.

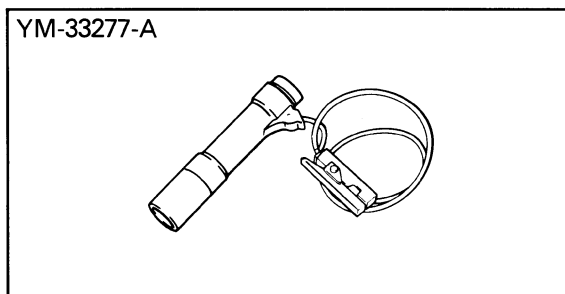

3. Rotor Holding Tool
P/N. YU-1235


This tool is used when loosening or tightening the flywheel magneto securing nut.

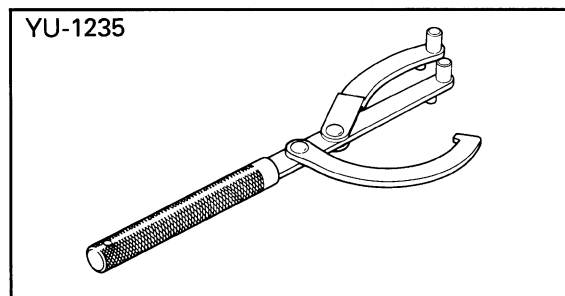

FOR CHASSIS SERVICE

1. Ring Nut Wrench
P/N. YU-1268


This tool is used to loosen or tighten the steering ring nut.

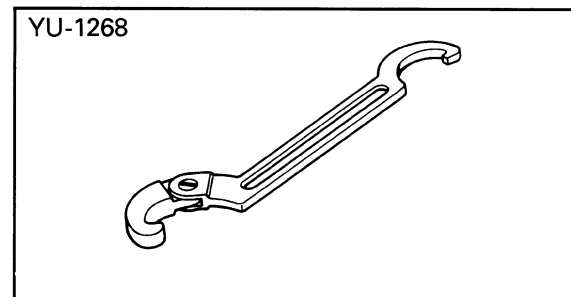

FOR ELECTRICAL SERVICE


1. Yamaha Pocket Tester
P/N. YU-3112-C

Use this tool to inspect the coil resistance, output voltage and amperage.

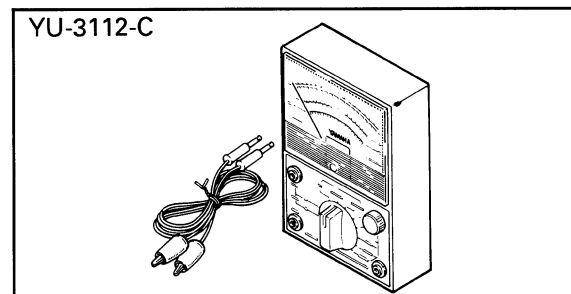


2. Dynamic Spark Tester
P/N. YM-34487

This instrument is necessary for checking the ignition system components.

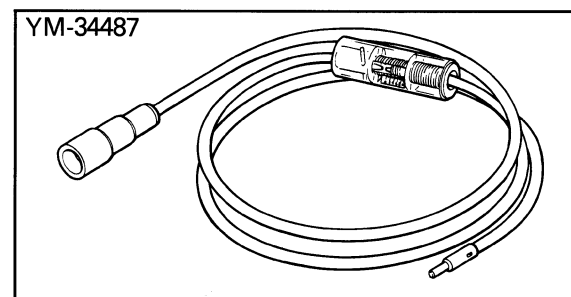

LUBRICATION

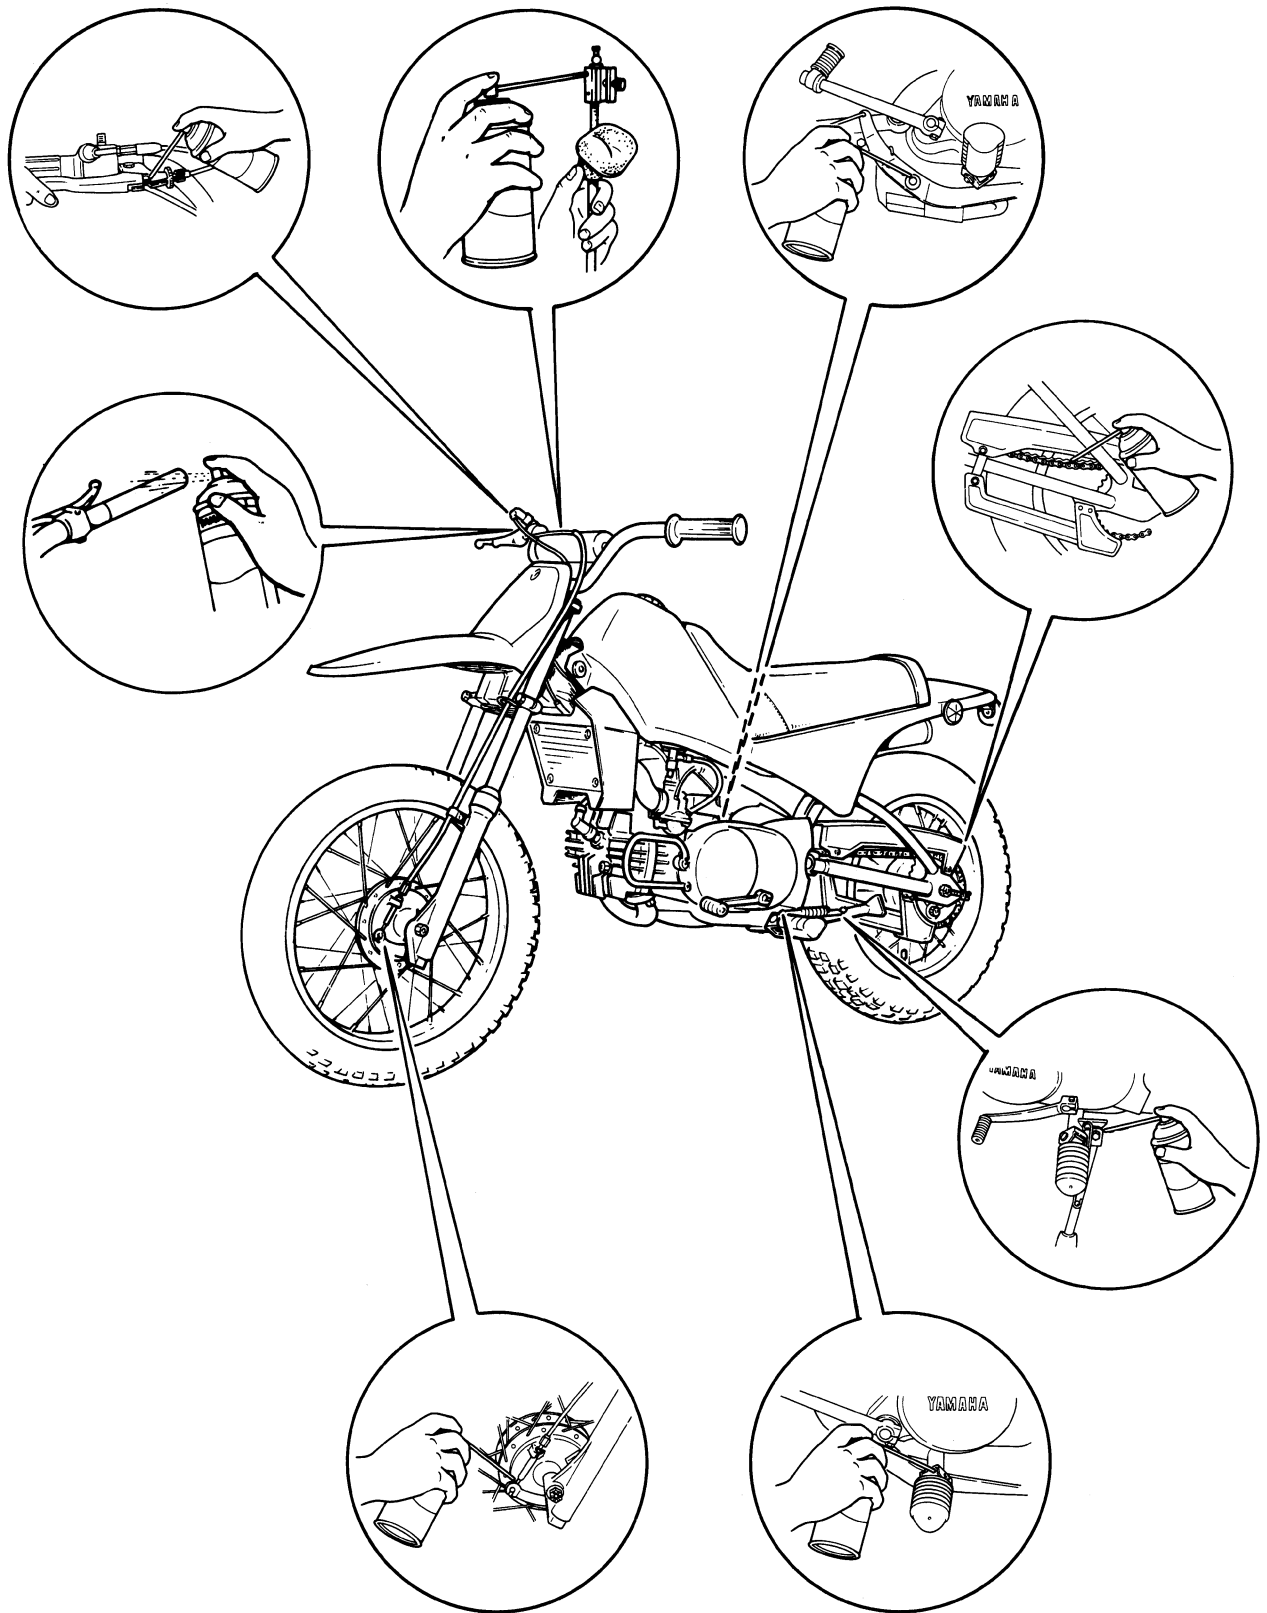

ADJUSTMENT


WARNING

The engine, exhaust pipe(s), and muffler(s) will be very hot after the engine has been run. Be careful not to touch them or to allow any clothing item to contact them during inspection or repair.

SPARK PLUG

Standard spark plug:
BP6HS (NGK) or W20FP
(DENSO)

1. Measure the electrode gap with a wire thickness gauge.

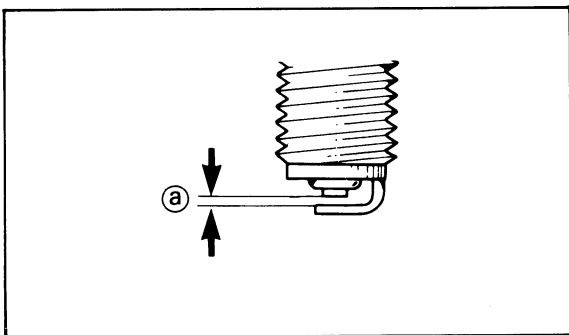

a. Electrode gap

Adjustment can be made by bending the side electrode.

Electrode gap:
0.6 ~ 0.7 mm (0.024 ~ 0.028 in)

When installing the plug, always, clean the gasket surface and use a new gasket. Wipe off any grime from the threads and torque the spark plug properly.

Spark plug torque:
25 Nm (2.5 m · kg, 18 ft · lb)

2. The insulator must be a medium-to-light tan color. If not, check carburetion, ignition timing and gas-oil mixing ratio. If the porcelain is a very dark brown or black color, then a plug with a hotter heat range may be required.


This situation is quite common during the engine break-in period. However, use the standard plug. If the insulator tip shows a very light tan or white color or is actually pure white or if the electrodes show signs of melting, then a spark plug with a colder heat range is required.

NOTE:

If a torque wrench is not available when you are installing a spark plug, a good estimate of the correct torque is 1/4 to 1/2 turns past finger tight. Have the spark plug torqued to the correct value as soon as possible with a torque wrench.

IGNITION TIMING CHECKING

1. Ignition timing is checked with Inductive Timing Light by observing the position of the stationary punch mark on the stator and the punch mark on the rotor.

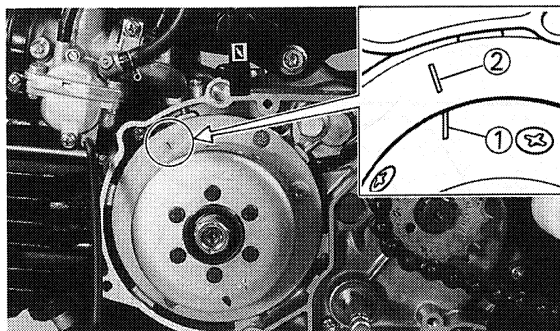

1. Punch mark

2. Stationary punch mark

2. Using a Inductive Timing Light, check to see that the stationary punch mark and punch mark on the flywheel magneto are aligned.
 - a. Remove the crankcase cover (L).
 - b. Connect the timing light to the spark plug lead.
 - c. Start the engine and keep it running at the specified speed. Use a tachometer for checking.


- d. While running the engine at the specified speed, check to see that the stationary punch mark is aligned with the punch mark. If the marks are out of alignment, check to see that the woodruff key is broken or flywheel assembly is out of alignment.

Ignition timing: 20.6°/4,000 r/min

AIR FILTER CLEANING


The most critical aspect of routine maintenance on a racing machine is proper air filter maintenance. The air filter on a motocross must be serviced after every practice session and moto to ensure maximum engine performance and life. For convenience, many racers prepare two or three spare air filters ahead of time and simply switch filters between practices and motos. Follow these instructions to service foam air filters correctly:

1. Remove the cleaner case cap.

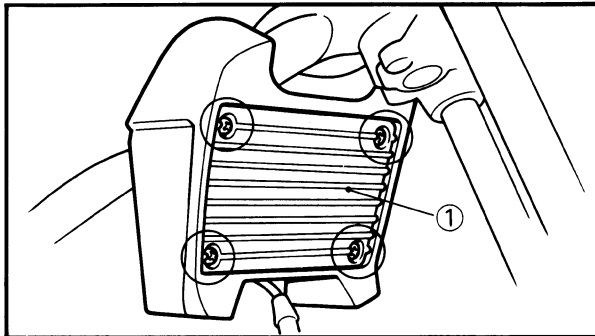

1. Cleaner case cap


2. Pull out the element and guide from the cleaner case cap.

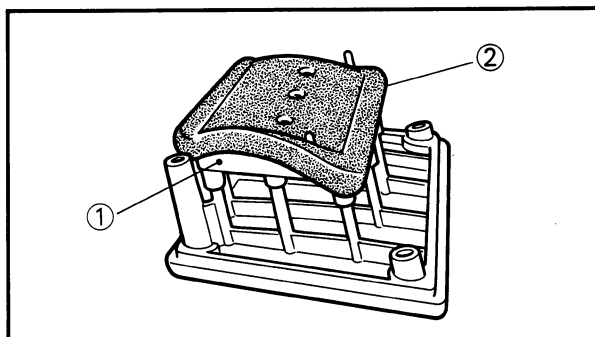


1. Guide

2. Air filter element

3. Using uncontaminated cleaning solvent, thoroughly wash the filter element; wash it gently to avoid damage.

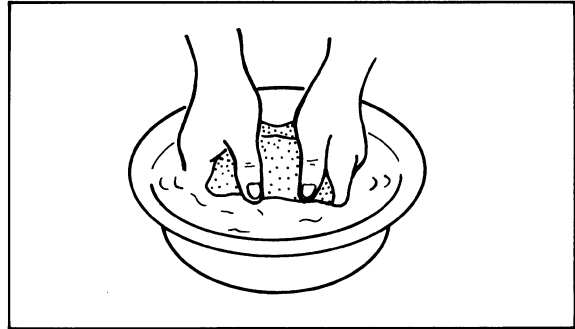


4. Squeeze the solvent from the filter element.

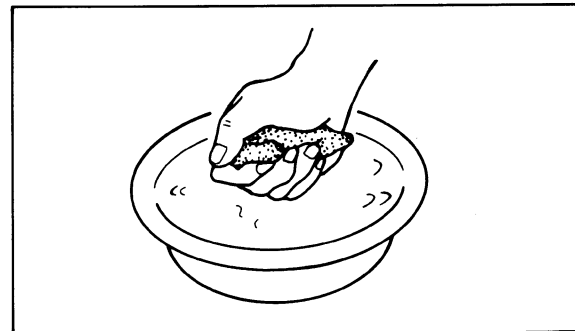

CAUTION:

Do not twist or wring the filter element, as it can easily be torn or otherwise damaged.

5. Using liquid dishwashing detergent and water, again wash the air filter element. Rinse the element with water, squeeze it, and allow the element to dry completely.
6. Pour a liberal amount of high-quality, foam-air-filter oil into a plastic bag. Put the filter element in the bag and thoroughly work the oil into the element.

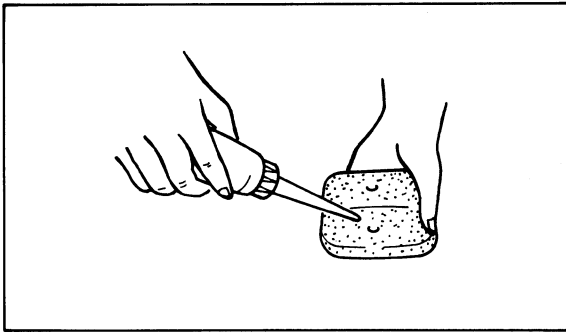


Recommended oil: Foam-air-filter oil

If for any reason you should use another type, use air cooled 2-stroke engine oil.

CAUTION:

Never use motor oil on a foam air filter element. Motor oil will not remain suspended in the filter element.

7. Remove the filter element from the plastic bag and squeeze out the excess oil. Again, avoid twisting or wringing the air filter element. The element should be damp, but not dripping, with oil.

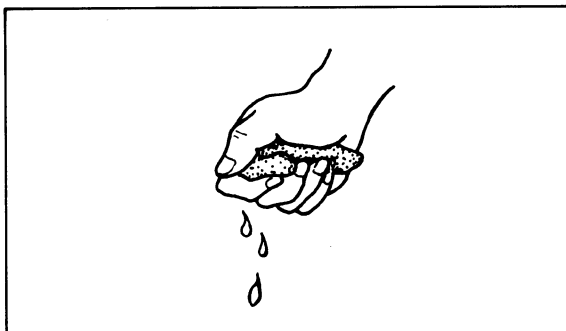

8. Reinstall the filter in the machine, and make sure the sealing surface of the filter is seated properly. Complete reassembly of the machine, and check all the fittings for tightness.

NOTE:


Each time filter element maintenance is performed, check the air inlet to the filter case for obstructions. Check the air cleaner joint rubber to the carburetor and manifold fittings for an air-tight seal. Tighten all fittings thoroughly to avoid the possibility of unfiltered air entering the engine.

CAUTION:

Never operate the engine with the air filter element removed. This will allow unfiltered air to enter, causing rapid wear and possible engine damage. Additionally, operation without the filter element will affect carburetor jetting with subsequent poor performance and possible engine overheating.

THROTTLE CABLE ADJUSTMENT

Check the play in turning direction of throttle grip. The play should be 3~5 mm (0.12~0.20 in) at grip flange, loosen the lock nut and turn the cable adjuster to make the necessary adjustment. Tighten the lock nut.

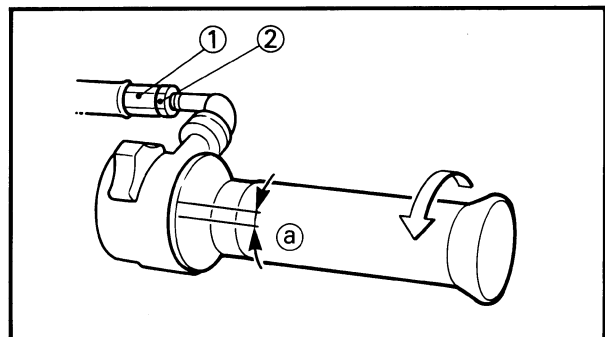


1. Adjuster 2. Lock nut a. Free play

Free play (a):
3~5 mm (0.12~0.20 in)

IDLE SPEED ADJUSTMENT

1. Turn the pilot air screw in until lightly seated.
2. Back out 1 and 1/2 turns. Start the engine and warm it up.

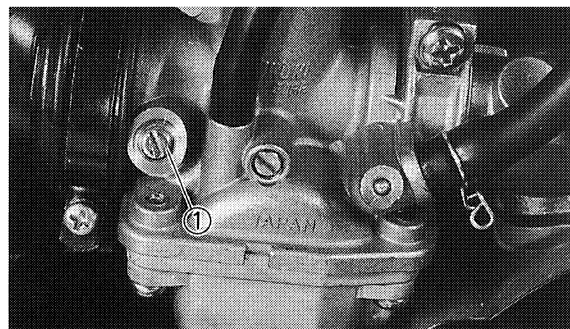


1. Pilot air screw

Pilot air screw:
1-1/2 turns out

3. Turn the throttle stop screw until idle is at desired r/min.

4. Turn the pilot air screw in or out until the idle speed is at the highest possible r/min.
5. Turn the throttle stop screw in or out until idle speed is at desired r/min.

Idle speed:
1,650 ~ 1,750 r/min

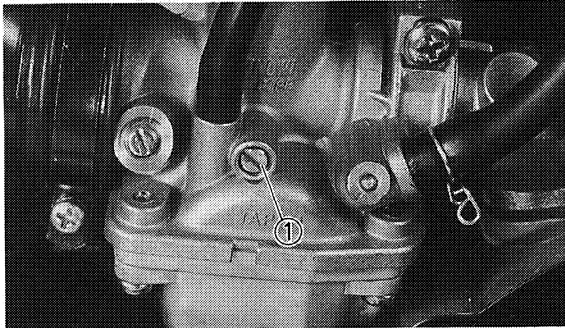

1. Throttle stop screw


If the engine, when warm, hesitates after adjusting as described, turn the idle air mixture screw in or out in 1/4 turn increments until the problem is eliminated.

NOTE: _____

Pilot air and throttle stop screws should be adjusted so that engine response from idle position is rapid and without hesitation.


AUTOLUBE PUMP

1. Cable adjustment
 - a. Remove the grommet from the oil pump cover.
 - b. Start the engine.
 - c. When the throttle cable becomes tight and the engine begins to run faster, hold the throttle grip steady and check to see that the match mark on the adjust pulley is aligned with the pump case mark. If not, loosen the pump cable locknut and make adjustment by turning the adjuster.

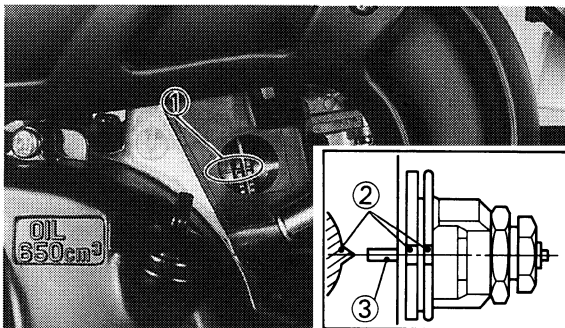

1. Set position
3. Pump case mark

2. Mark

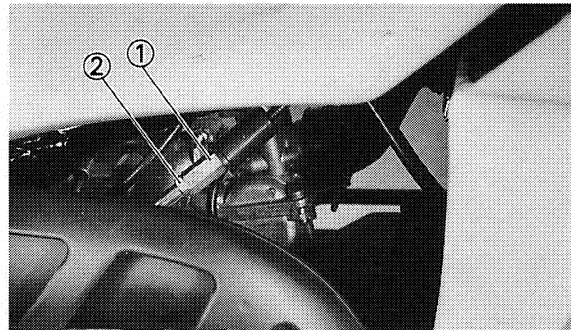

1. Adjuster
2. Lock nut


NOTE: _____

After adjusting, be sure to tighten the lock nut completely.

2. Air bleeding

The oil pump just be bled after the oil pipe or oil pump is reinstalled.

- a. Remove the oil pump cover.
- b. Remove the bleeder bolt.
- c. When the bleeder bolt is removed, oil containing air bubbles flows out. Let the oil flow out until air bubbles completely disappear, and reinstall the bleeder bolt.

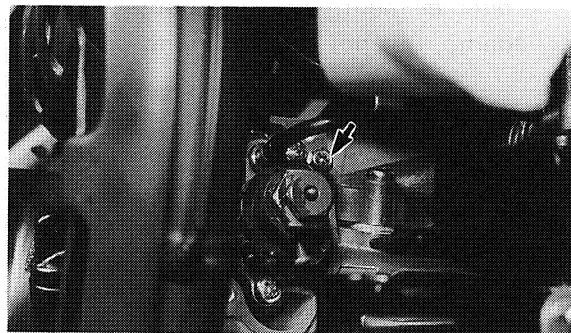


NOTE: _____

- Place a rag or oil can under the engine.
- Add the Autolube oil to the oil tank before bleeding.
- Thoroughly clean the engine exterior of oil.

3. Minimum plunger stroke adjustment

- a. Set the dial gauge as illustrated, and check to see if the plunger stroke is correct while keeping the engine idling.

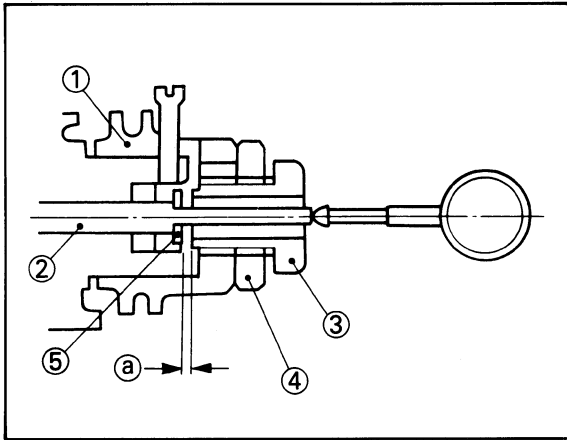

- 1. Adjust pulley
- 2. Plunger
- 3. Adjusting bolt
- 4. Lock nut
- 5. Adjusting plate
- a. Min. stroke


- b. To adjust the plunger stroke, first loosen the lock nut.
- c. Turn the adjusting bolt in or out for proper adjustment.
Turning the adjusting bolt clockwise decreases the plunger stroke; while turning counterclockwise increases the plunger stroke.
- d. When the correct stroke is attained, tighten the lock nut.

Minimum stroke	0.40 ~ 0.45 mm (0.016 ~ 0.018 in)
Maximum stroke	1.00 ~ 1.10 mm (0.039 ~ 0.043 in)


FRONT BRAKE ADJUSTMENT

Front brake cable free play can be adjusted to suit rider preference, but a minimum free play of 10 ~ 20 mm (0.39 ~ 0.79 in) should be maintained. Free play can be adjusted at handlebar lever and brake shoe plate.

1. Loosen the lock nut on the brake lever holder and then, fully turn the adjuster in.
2. Loosen the lock nut on the shoe plate and turn the adjuster in or out until proper adjustment is achieved.
3. Unless the shoe plate adjuster helps bring a proper play, turn the lever holder adjuster.
4. Tighten the lock nuts.

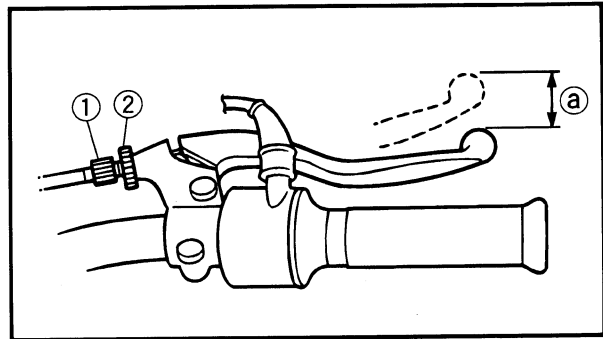

- 1. Adjuster
- 2. Lock nut
- a. Free play

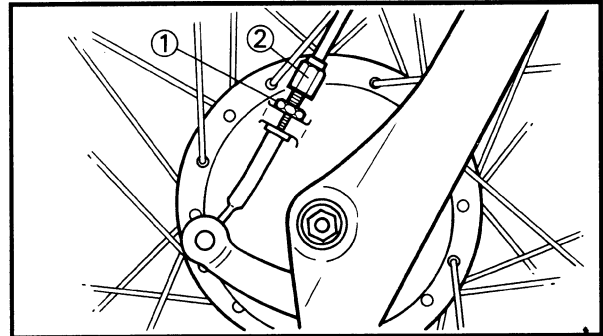


- 1. Lock nut
- 2. Adjuster

Free play (a):
10 ~ 20 mm (0.39 ~ 0.79 in)

REAR BRAKE ADJUSTMENT

The rear brake should be adjusted so the end of the brake pedal moves 20 ~ 30 mm (0.8 ~ 1.2 in). To adjust, turn the adjuster on the brake rod clockwise to reduce play; turn the adjuster counterclockwise to increase play.

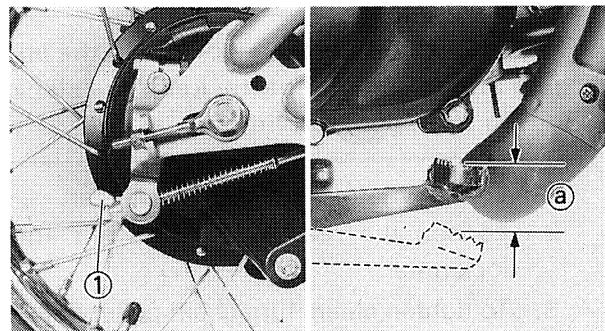

- 1. Adjuster
- a. Free play

Free play (a):
10 ~ 20 mm (0.39 ~ 0.79 in)


DRIVE CHAIN SLACK CHECK

NOTE:

Before checking and/or adjusting, rotate rear wheel through several revolutions and check tension several times to find the tightest point. Adjust chain tension with rear wheel in this "tight chain" position.

Elevate the rear wheel by placing the suitable stand under the engine.

Then measure the play at the bottom of the chain at a point midway between the drive and driven sprockets.

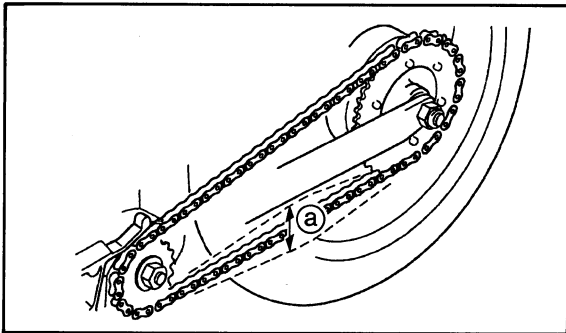

a. Drive chain slack

The normal vertical deflection is approximately 40~53 mm (1.6~2.1 in). If the chain deflection is not as specified, adjust the chain tension.


Drive chain slack (a):
40 ~ 53 mm (1.6 ~ 2.1 in)

DRIVE CHAIN SLACK ADJUSTMENT

CAUTION

Too small chain slack will overload the engine and other vital parts; keep the slack within the specified limits.

1. Loosen the rear brake rod adjuster.
2. Loosen the rear wheel axle nut and lock nuts.
3. To tighten chain, turn chain puller adjusting nut clockwise. To loosen chain, turn adjusting nuts counterclockwise and push wheel forward. Turn each adjusting nut exactly the same amount to maintain correct axle alignment. (There are marks on each side of rear arm and on each chain puller; use them to check for proper alignment.)

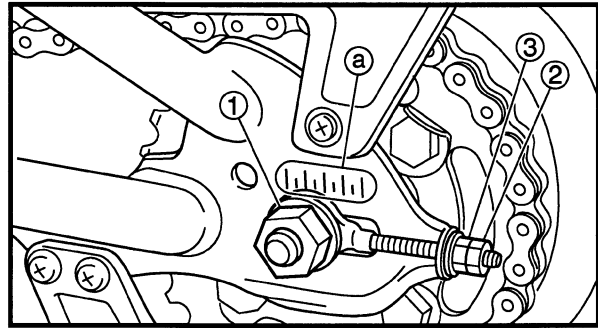

1. Rear wheel axle nut
2. Lock nut
3. Adjusting nut
- a. Marks for alignment

4. After adjusting, be sure to tighten the rear wheel axle nut.

Tightening torque:
60 Nm (6.0 m·kg, 43 ft·lb)

5. Also tighten the lock nuts against the rear arm.

Tightening torque:
7 Nm (0.7 m·kg, 5.1 ft·lb)

6. In the final step, adjust the play in the brake pedal.

DRIVE CHAIN LUBRICATION

The chain consists of many parts which work against each other. If the chain is not maintained properly, it will wear out rapidly. Form the habit of periodically servicing the chain. This service is especially necessary when driving in dusty conditions.

1. Use any of the many brands of spray type chain lubricant. First, remove dirt and mud from the chain with a brush or cloth and then spray the lubricant between both rows of side plates and on all center rollers.
2. To clean the entire chain, first remove the chain from the machine, dip it in solvent and clean out as much dirt as possible. Then take the chain out of the solvent and dry it. After drying, lubricate the chain to prevent the formation of rust.

TIRE PRESSURE CHECK


Improper tire pressure affects the smoothness of the tire, traction, handling and the life of the tires. Always maintain the correct tire pressure.

Tire pressure:

Front	100 kPa (1.0 kgf/cm ² , 15 psi)
Rear	100 kPa (1.0 kgf/cm ² , 15 psi)

CHECK THE SPOKES


If the spokes are loose or bent, tighten or replace them. They should be checked before each use.

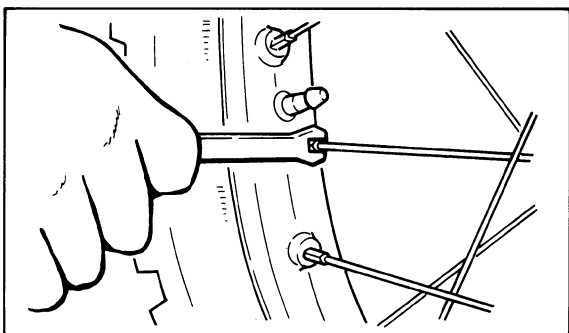

STEERING HEAD INSPECTION


Periodically inspect the condition of the steering. Worn out or loose steering bearings may be dangerous.

Place a suitable stand under the engine to hold the front wheel of the machine off the ground; then hold the lower end of the front fork and try to move forward and backward.

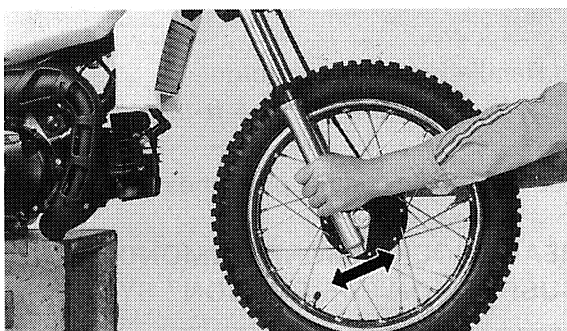

STEERING HEAD ADJUSTMENT

1. To adjust, loosen the steering shaft bolt.
2. Use the Ring Nut Wrench to tighten the ring nut.

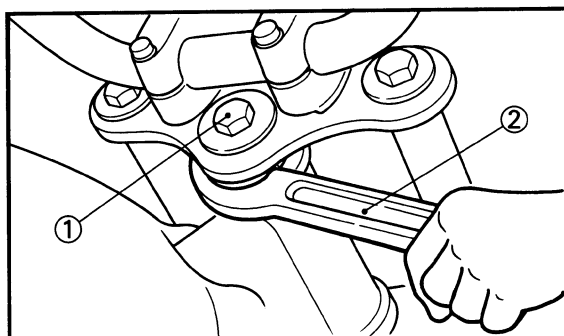

1. Steering shaft bolt 2. Ring Nut Wrench

CAUTION:

Forks must swing from lock to lock without binding or catching.

3. Tighten the steering shaft bolt.

Tightening torque:

42 Nm (4.2 m • kg, 30 ft • lb)

NOTE:


Steering head disassembly must be performed by a Yamaha dealer or other qualified mechanic.

FRONT FORK OIL CHANGE

⚠ WARNING


1. Fork oil leakage can cause loss of stability and safe handling. Have any problem corrected before operating the machine.
2. Support the machine securely so there is no danger of it falling over.

1. Elevate the front wheel by placing a suitable stand under the engine.
2. Remove the brake cable clamp.

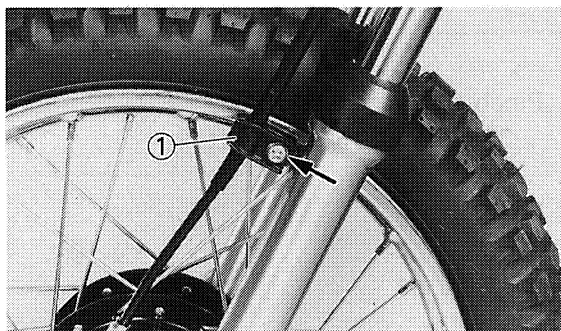


1. Brake cable clamp

- Remove the number plate.

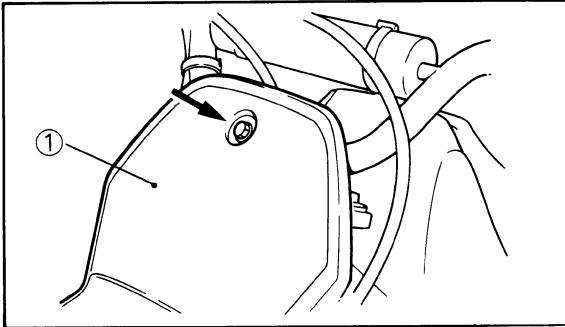

1. Number plate

- Remove the handlebar.
- Remove the front wheel. (Refer to page 32.)
- Remove the cap bolt from the inner tube.
- Loosen the pinch bolt.

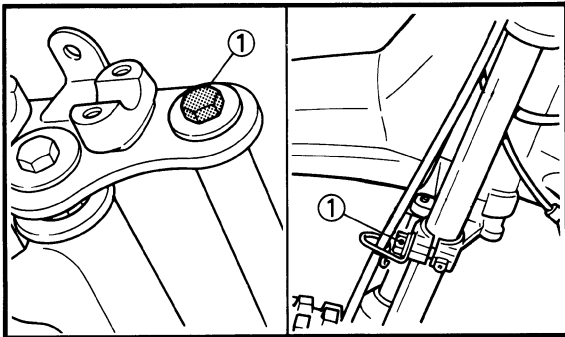

1. Cap bolt

1. Pinch bolt

- Remove the front fork.
- Drain the fork oil.
- Installing the front fork on the machine. Bring up the front fork to the correct position and partially tighten the underbracket pinch bolt.

Pour specified amount of oil into the inner tube through the upper end opening.

Recommended oil:
Yamaha fork oil 15 wt or equivalent
Capacity per leg:
60 cm³ (2.1 Imp oz, 20 US oz)

Pinch bolt torque:
33 Nm (3.3 m·kg, 24 ft·lb)

NOTE: _____

Select the weight oil that suits local conditions and your preference (lighter for less damping; heavier for more damping).


- After filling, slowly pump the outer tube up and down to distribute the oil.

NOTE: _____

Adjust the oil levels in both right and left front forks so they are even.

- Inspect O-ring on fork cap bolt and replace if damaged. Install the fork cap bolt and torque to specification.

Fork cap bolt torque:
40 Nm (4.0 m·kg, 29 ft·lb)

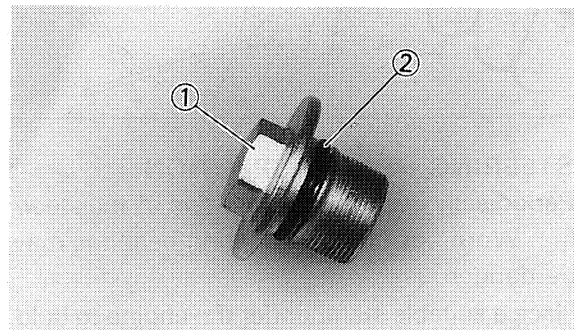

1. Cap bolt

2. O-ring

- Install the front wheel. (Refer to page 32.)
- Install the handlebar.

Handle holder upper torque:
13 Nm (1.3 m·kg, 9.4 ft·lb)

- Install the number plate and the brake cable clamp.

REAR SHOCK ABSORBER (MONOCROSS SUSPENSION "DE CARBON" SYSTEM)

⚠ WARNING _____


This shock absorber contains highly compressed nitrogen gas.

Read and understand the following information before handling the shock absorber. The manufacturer cannot be held responsible for property damage or personal injury that may result from improper handling.

1. Do not tamper with or attempt to open the cylinder assembly. Injury may result.
2. Do not subject shock absorber to an open flame or other high heat. This may cause the unit to explode due to excessive gas pressure.
3. Do not deform or damage the cylinder in any way. Cylinder damage will result in poor damping performance.
4. Handle it with great care, for a score or scratch in the piston rod sliding portion will cause oil leakage.

NOTES ON DISPOSAL (YAMAHA DEALERS ONLY)

Gas pressure must be released before disposal of shock absorber. To do so, drill a 2 ~ 3 mm (0.08 ~ 0.12 in) hole ① through the cylinder wall at a point 10 ~ 15 mm (0.4 ~ 0.6 in) ② above the bottom of the cylinder.

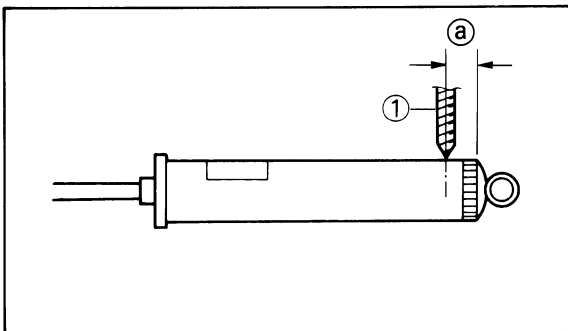

CAUTION:

Wear eye protection to prevent eye damage from escaping gas and/or metal chips.


WARNING

To dispose of a damage or wornout shock absorber, take the unit to your Yamaha dealer for this disposal procedure.

REAR SHOCK ABSORBER SPRING PRE-LOAD ADJUSTMENT

1. Remove the rear shock absorber.
(Refer to page 34.)

2. Remove the spring guide.

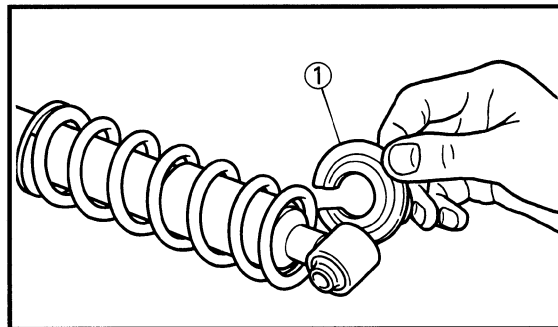

1. Spring guide


NOTE:

While compressing the spring, remove the spring guide.

3. To stiffen the spring preload, install the circlip into the groove ②. To soften the spring preload, install the circlip into the groove ③.

NOTE:

Do not spread the circlip too much.

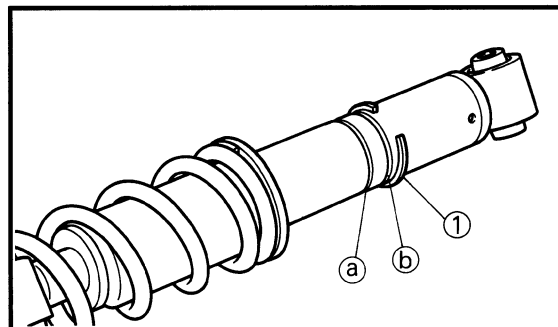

1. Circlip



Standard installation position.
Groove ③

4. Install the spring guide.

NOTE:

While compressing the spring, install the spring guide.

5. Install the rear shock absorber.
(Refer to page 35.)


MAINTENANCE AND MINOR REPAIRS

PREPARATION FOR SERVICE

1. Before servicing the machine, be sure to clean machine exteriors.
2. Place the removed parts, always on a tray in the order of removal.
3. When replacing parts, always use genuine Yamaha parts to maintain better performance, durability and safety.
4. All gaskets and seals should be replaced when an engine is overhauled. All gasket surfaces must be cleaned.
5. Properly oil all mating engine and transmission parts during assembly.
6. All circlips should be inspected before assembly. Replace distorted circlips.
7. Always replace cotter pins and piston pin clips after one use.
8. When installing parts, apply grease or oil to them, as required, and following the torque chart. (Refer to "Maintenance and Lubrication Schedule Chart.")
9. For assembly, reverse the procedure for removal.


ENGINE

CARBURETOR

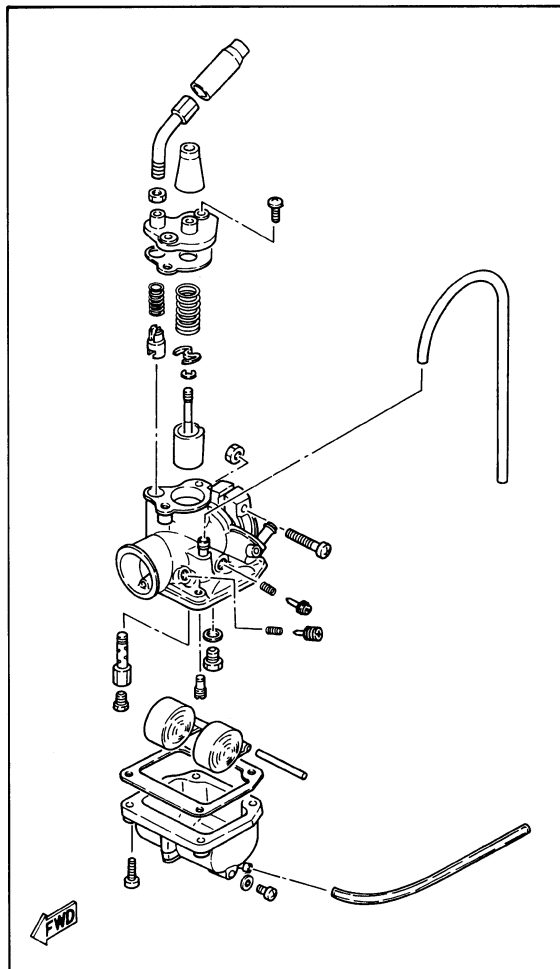


Replacement of main jet

1. Turn fuel cock lever to the "OFF".
2. Disconnect the fuel hose and oil delivery pipe.
3. Loosen the carburetor joint screw and air cleaner joint screw.

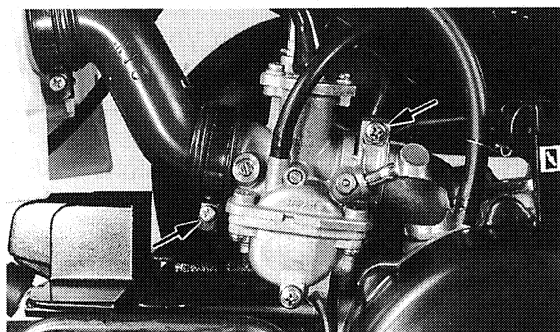

4. Rotate the carburetor, remove the mixing chamber top, and carburetor assembly.

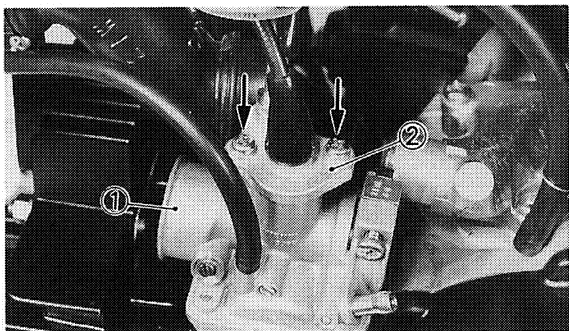

1. Carburetor 2. Mixing chamber top

5. Remove the float chamber body and main jet.


Standard main jet: #125

IMPORTANT:

The Carburetor has been set for normal sea level conditions. The standard setting is the result of extensive testing and does not usually require changing. However, under conditions of high atmospheric pressure or heavy load (deep sand or mud) the standard main jet should be replaced with another main jet. If the carburetor requires any other setting changes to suit local conditions of altitude, weather, etc., the change must be made with great care. Improper carburetor setting changes will cause poor engine performance and possible engine damage. Please consult a Yamaha dealer or other qualified mechanic about any carburetor setting changes before actually going about them.

Inspection

1. Examine carburetor body and fuel passages. If contaminated, wash carburetor in petroleum based solvent. Do not use caustic carburetor cleaning solutions. Blow out all passages and jets with compressed air.
2. Examine condition of floats. If floats are leaking or damaged, they should be replaced.
3. Inspect inlet needle valve and seat for wear or contamination. Replace these components as a set.

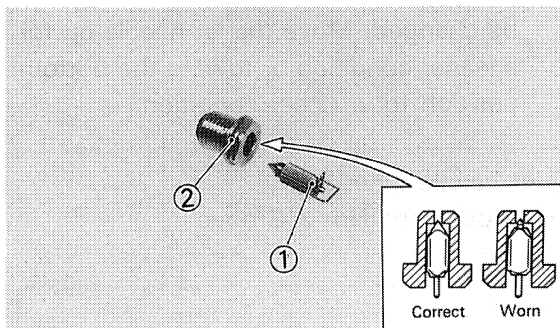


1. Needle valve 2. Valve seat

Adjustment

1. Float height
 - a. Checking

Hold the carburetor in an upside down position. Incline the carburetor at 60° ~ 70° (so that the end of the float valve does not hang down of float weight), and measure the distance from the mating surface of the float chamber (gasket removed) and carburetor to the top of the float using a gauge.

Float height:
20.8 ~ 22.8 mm (0.82 ~ 0.90 in)
Level with carburetor base

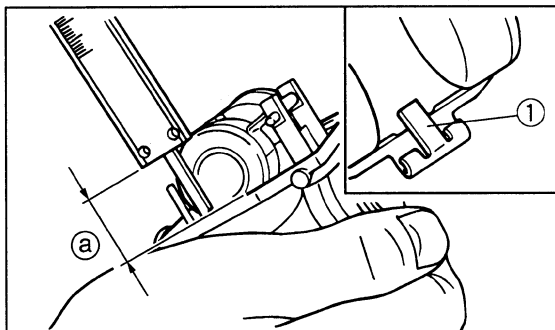

1. Tang a. Float height

b. Adjustment

CAUTION:


Check the needle valve and valve seat for wear before adjustment.

Make the adjustment by bending the tang on the float arm.


2. Jet needle

The mid-range air/fuel supply is affected by the position of the needle in the needle jet. If it is necessary to alter the mid-range air/fuel mixture characteristics of the machine, the jet needle position may be changed. Move the jet needle up for a leaner condition or toward the bottom position for a richer condition.

Jet needle type: 3E3
Clip position: No. 3 Groove

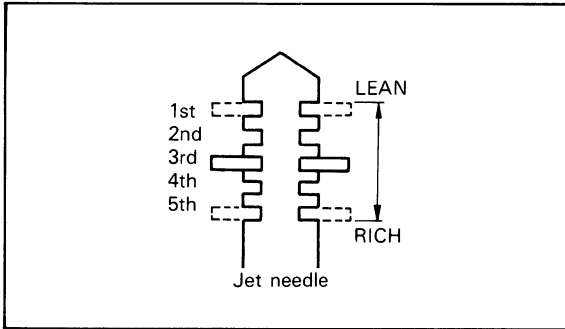

REED VALVE

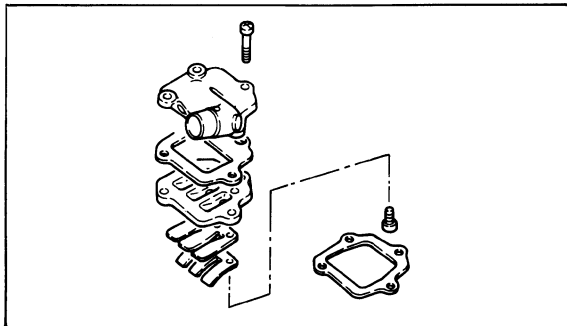


Inspection

1. Inspect rubber intake manifold for signs of weathering, checking or other deterioration.
2. Inspect reed petals for signs of fatigue and cracks. Reed petals should fit flush or nearly flush against neoprene seats. If in doubt as to sealing ability, apply suction to carburetor side of assembly. Leakage should be slight to moderate.

3. The valve stopper controls the movement of the valve. Check the valve stopper height.


Valve stopper height (a):
7.4 ~ 7.8 mm (0.291 ~ 0.307 in)

If the valve stopper height is not within specification, replace the valve stopper.

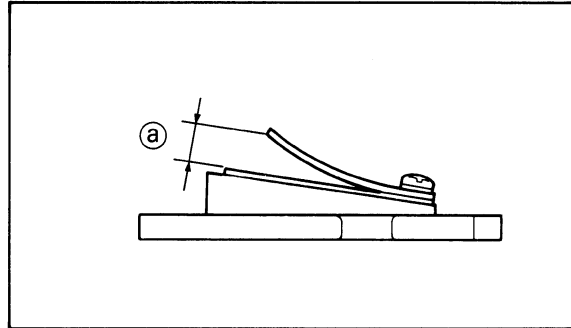


4. Check reed valve for bending. If beyond tolerance, replace reed valve.

Reed valve bending limit:
0.2 mm (0.008 in)

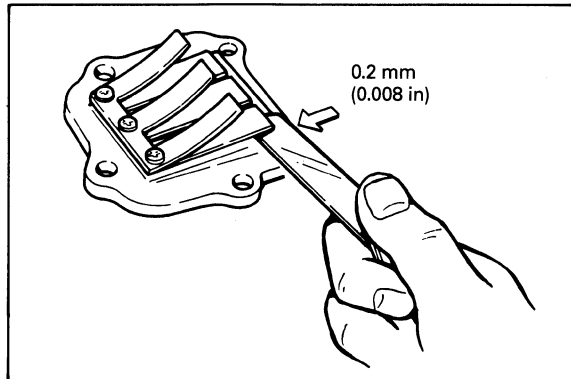

5. Manifold:
Check the distortion of manifold surface. If the distortion is out of limit, resurface it on the #600 wet sandpaper.

Distortion limit: 0.1 mm (0.004 in)

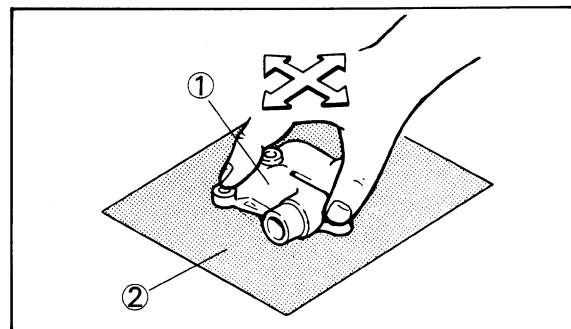

1. Manifold 2. Sandpaper (#600)

MUFFLER


With the carburetor removed, proceed as follows:

⚠WARNING


Be sure the exhaust pipe and muffler are cool before cleaning the spark arrester.

Removal

1. Remove the two nuts and remove seat.

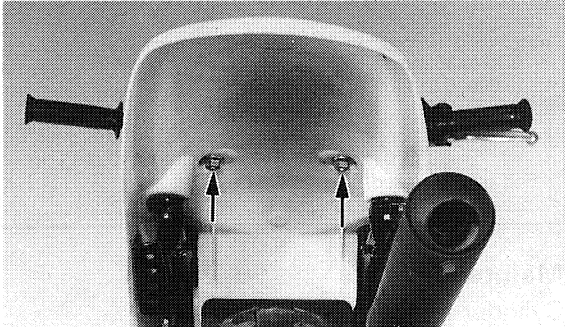


2. Remove the three bolts from the side cover assembly and two bands.

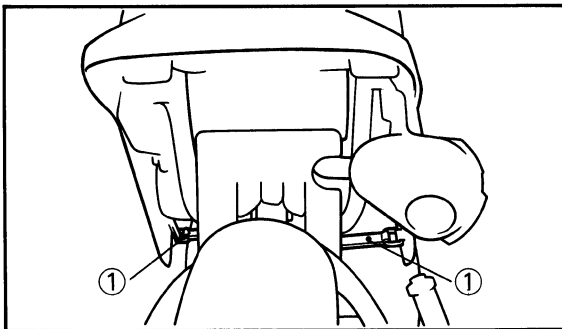

1. Band

3. Remove the muffler mounting bolts from the cylinder and remove the silencer mounting bolts.

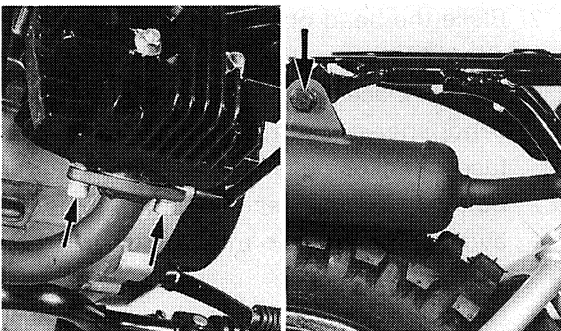


Maintenance

⚠WARNING

- Always let the exhaust system cool prior to touching exhaust components.
- Do not start the engine when cleaning the exhaust system.

1. Muffler

- a. Using a rounded scraper, remove excess carbon deposits from manifold area of exhaust pipe.

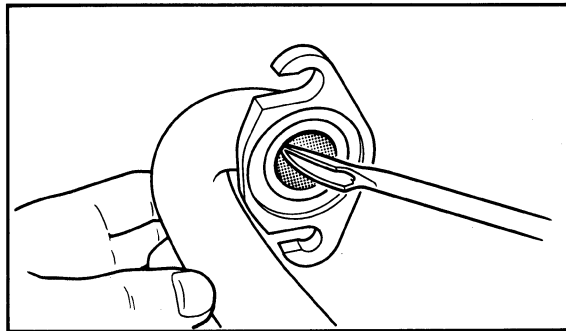


- b. Check muffler gasket condition. The gasket seat is located around the cylinder exhaust port.

2. Spark arrester cleaning

- a. Remove the bolt ①.
- b. Remove the tailpipe ② by pulling out of the muffler.
- c. Use a wire brush to remove any carbon deposits from the spark arrester portion of the tailpipe ②.
- d. Tap the tailpipe ② lightly and remove the carbon deposits from the outside portion of the tailpipe.
- e. Insert the tailpipe into the muffler and align the bolt hole.
- f. Install the bolt ① and tighten it.

Tightening torque:

8 Nm (0.8 m·kg, 5.8 ft·lb)

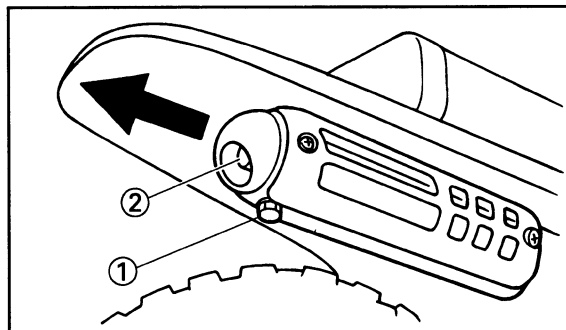

1. Bolt

a. Tailpipe



TOP END

Removal

1. Remove spark plug cap and spark plug.
2. Remove the cylinder head securing nuts (4 nuts).
Remove cylinder head and gasket.

NOTE:



Break each nut loose (1/4 turn) prior to removing.

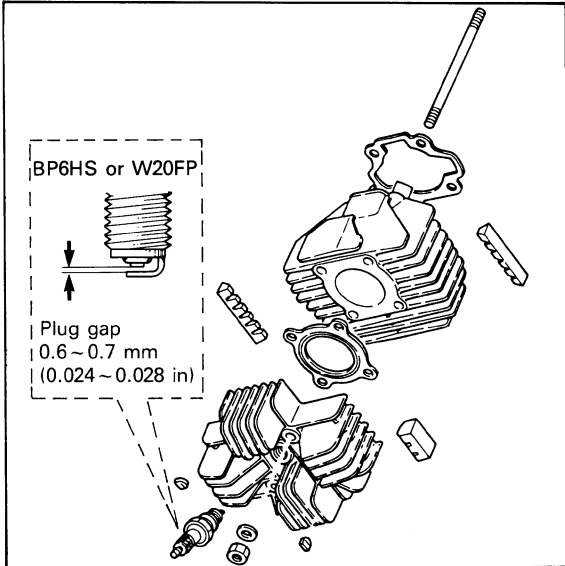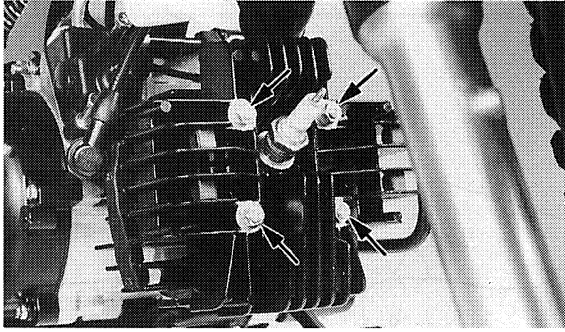

3. With the piston at top dead center, raise the cylinder until the cylinder skirts clear crankcase. Stuff a clean shop rag into crankcase cavity, around rod, to prevent dirt and other foreign particles from entering. Remove cylinder.
4. Remove the piston pin clip from the piston. Push the piston pin out from opposite side. Remove the piston.

NOTE:


If the pin hangs up, use a piston pin puller. Do not hammer on pin as damage to rod, piston and bearing will result.

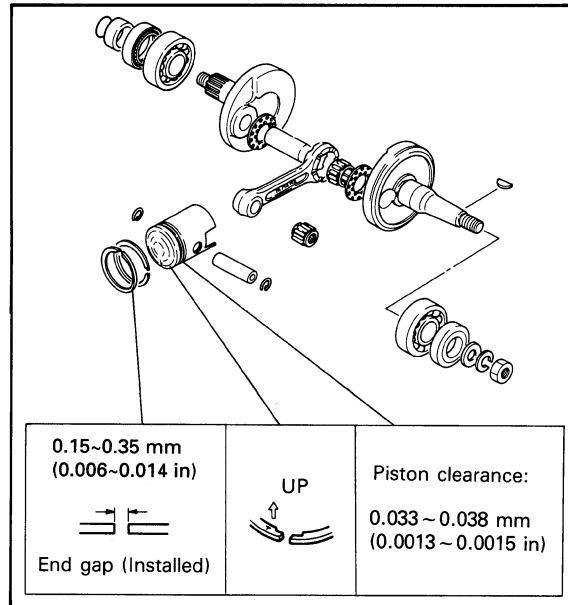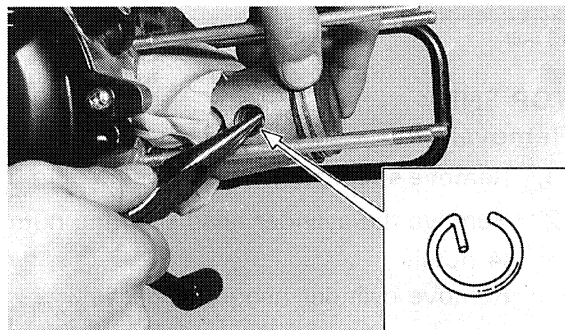

Maintenance

Cylinder head


1. Using a rounded scraper, remove carbon deposits from combustion chamber. Take care to avoid damaging the spark plug threads. Do not use a sharp instrument. Avoid scratching the metal surface.

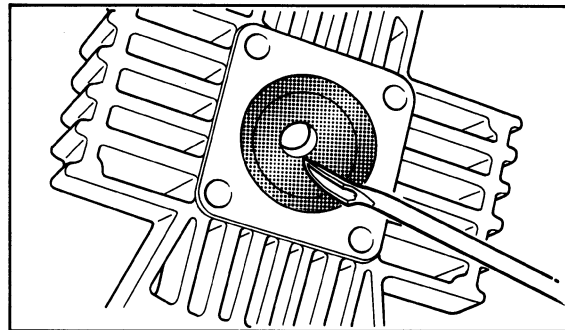

2. Place the head on a surface plate. There should be no warpage. Correct by resurfacing. Place 400 ~ 600 grit wet emery sandpaper on surface plate and re-surface head using a figure-eight sanding pattern. Rotate head several times to avoid removing too much material from one side.
3. Clean the spark plug gasket mating surface thoroughly.

Cylinder


1. Using a rounded scraper, remove carbon deposits from exhaust port.

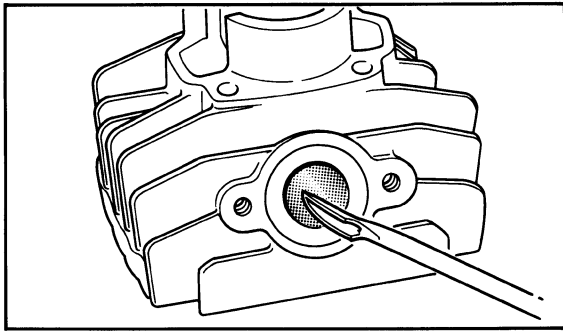


2. Check cylinder bore. Using a cylinder hone, remove any scoring. Hone lightly, using smooth stones. Hone no more than required to avoid excess piston clearance.

Piston

1. Using a scraper, remove carbon deposits from piston crown.
2. Break a used piston ring in two. File end square. De-burr edges to avoid scratching ring groove and clean carbon deposits from ring grooves.

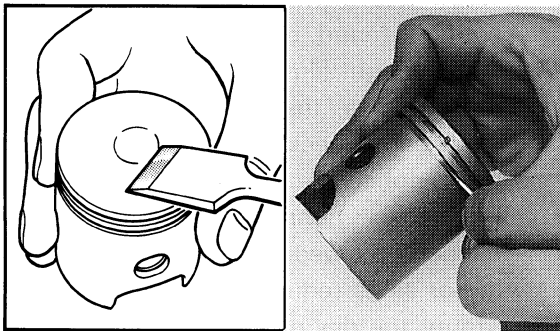


3. Using 400 ~ 600 grit wet sandpaper, lightly sand score marks and lacquer deposits from sides of piston. Sand in a crisscross pattern. Do not sand excessively.

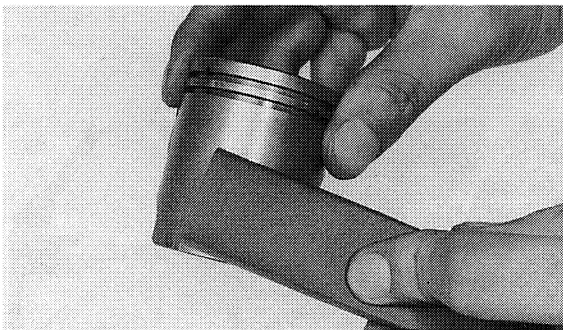


Piston clearance

1. Cylinder bore measurement
Using a cylinder gauge set to standard bore size, measure the cylinder. Measure front-to-rear and side-to-side at top,

center and bottom just above exhaust port. Compare minimum and maximum measurements. If over tolerance and not correctable by honing, rebores to next oversize.

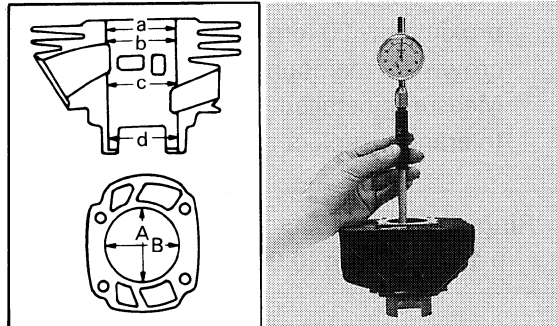

2. Piston outside diameter measurement
Using an outside micrometer, measure piston diameter. The measuring point is at right-angles to the piston pin holes, about 5 mm (0.2 in) from the bottom of the piston skirts.
3. Make a correct calculation of the piston clearance using the following formula.

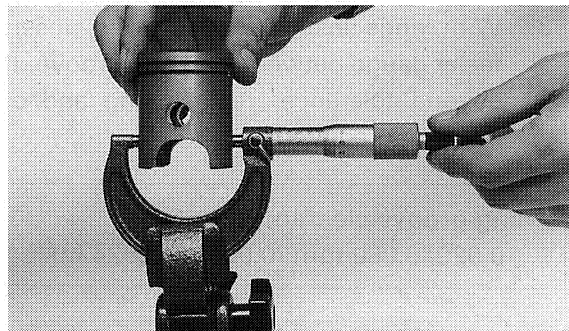

- **PISTON CLEARANCE**
= Minimum Cylinder Diameter
– Maximum Piston Diameter

EXAMPLE:

PISTON CLEARANCE
= 47.000 mm – 46.965 mm = 0.035 mm
(1.8504 in – 1.8490 in = 0.0014 in)


Normal piston clearance
0.033 ~ 0.038 mm (0.0013 ~ 0.0015 in)

If beyond tolerance replace piston or rebore cylinder as required.

Piston rings


1. Remove ring from piston.
2. Insert ring into cylinder. Push down approximately 20 mm (0.79 in) using piston crown to maintain right-angle to bore. Measure installed end gap. If beyond tolerance, replace.

Ring end gap installed (top and 2nd):
0.15~0.35 mm (0.006~0.014 in)

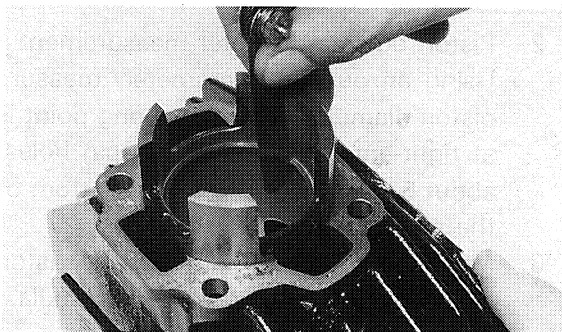

3. With rings installed in grooves, insert feeler gauge between ring and groove. If beyond tolerance, replace ring and/or piston as required.

Ring groove clearance:
0.020~0.060 mm (0.0008~0.0024 in)

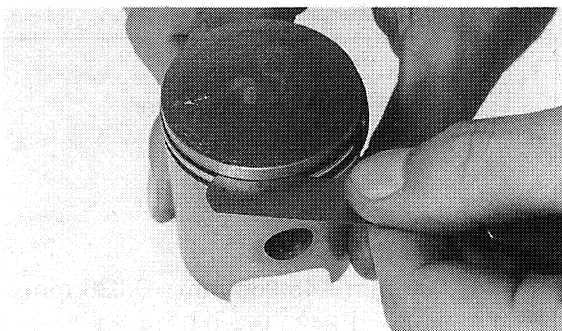

4. Holding cylinder towards light, check for full seating of ring around bore. If not fully seated, check cylinder. If cylinder is not out-of-round, replace piston ring.
5. During installation, make sure ring ends are properly fitted around ring locating pin in piston groove. Apply liberal coating of two-stroke oil to ring.




NOTE:

New rings require break-in. Follow first portion of new machine break-in procedure.

Piston pin bearing and connecting rod


1. Check the pin for signs of wear. If any wear is evident, replace pin and bearing.
2. Check the pin and bearing for signs of heat discoloration. If excessive (heavily blued), replace both.
3. Check the bearing cage for excessive wear. Check the rollers for signs of flat spots. If found, replace pin and bearing.
4. Apply a light film of oil to pin and bearing surfaces. Install in connecting rod small end. Check for play. There should be no noticeable vertical play. If play exists, check connecting rod small end diameter for wear. Replace pin and bearing or all as required.
5. Mount the dial gauge at right angles to connecting rod small end holding the bottom of rod toward the dial indicator, rock top of rod and measure axial play.

Connecting rod axial play:
1.0 mm (0.04 in)

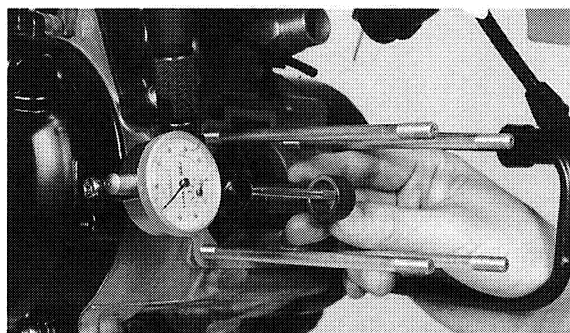


- Remove the dial gauge and slide the connecting rod to one side. Insert a feeler gauge between the side of the connecting rod big end and the crank wheel. Measure clearance.


Connecting rod/crank side clearance:
0.30~0.80 mm (0.012~0.031 in)

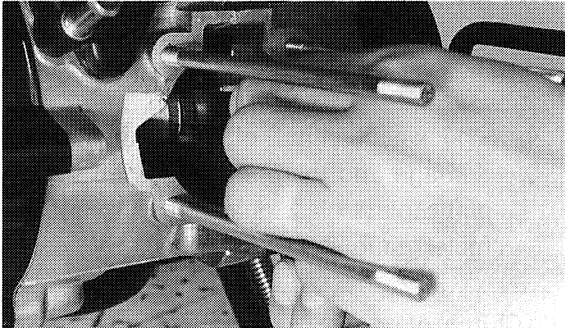

- If any of the above measurements exceed tolerance, crankshaft repair is required. Take the machine to your authorized dealer.
- During reassembly apply a liberal coating of two-stroke oil to the piston pin and bearing. Apply several drops of oil to the connecting rod big end. Apply several drops of oil into each crankshaft bearings oil delivery hole.

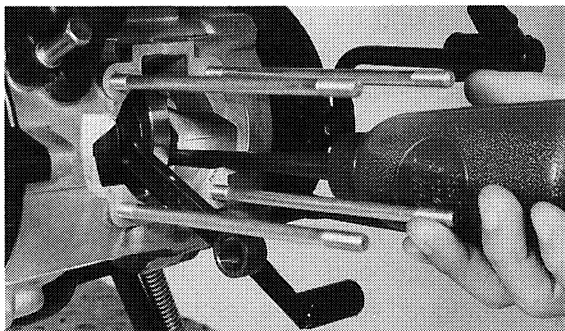

CLUTCH

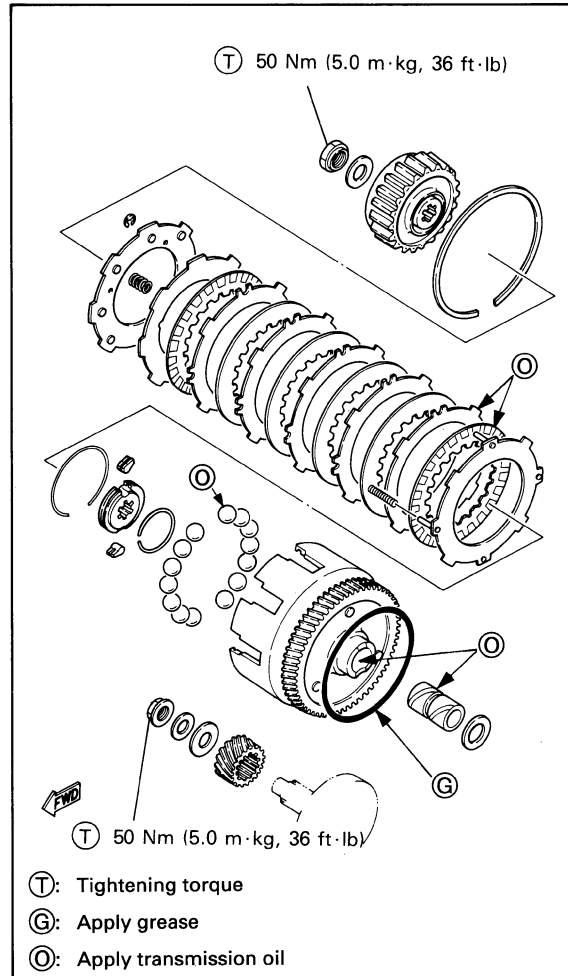


Removal


- Remove the kick starter.
- Remove the pan head screws holding the case cover in place and remove the cover. Note the position of the dowel pins.

NOTE:

Drain transmission oil before removing cover.

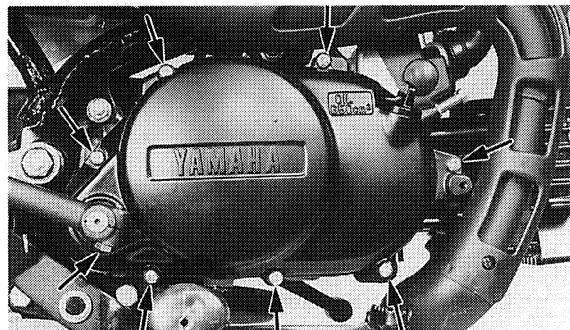


- Using the Rotor Holder, remove the clutch securing nut and lock washer. Remove the clutch boss and driven gear (clutch housing).

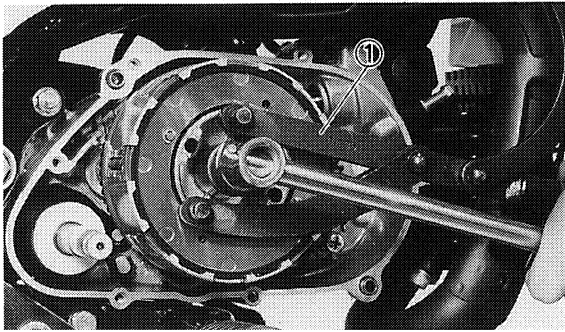

1. Rotor Holder


4. Remove the circlip, pressure plate, clutch plates, friction plates, one-way clutch, and clutch boss from the clutch housing.

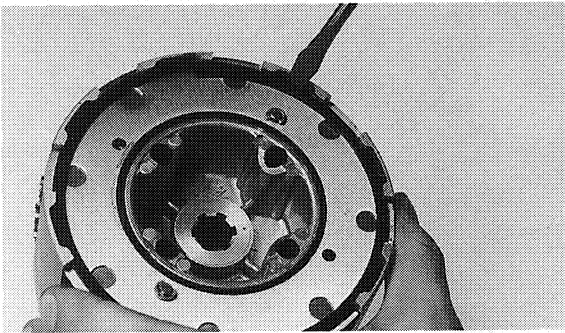

Inspection


1. Measure each clutch spring and off spring. If beyond tolerance, replace.

	New	Minimum
OFF spring free length	30.5 mm (1.20 in)	28.5 mm (1.12 in)
Clutch spring free length	12.9 mm (0.51 in)	11.9 mm (0.47 in)

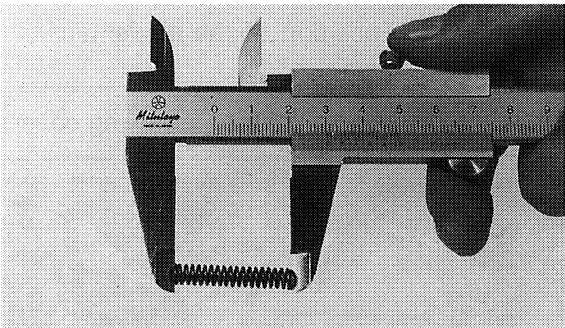

2. Check the plates for signs of warpage and heat damage, replace as required.
3. Measure the friction plates at three or four points. If their minimum thickness exceeds tolerance, replace.

	New	Wear limit
Friction plate thickness	3.0 mm (0.118 in)	2.7 mm (0.106 in)

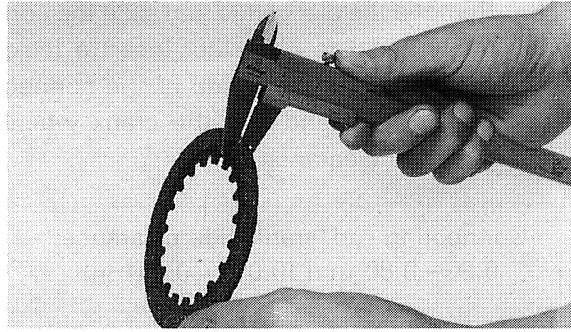


NOTE:


For optimum performance, if any plate requires replacement, it is advisable to replace the entire set.



4. Check each clutch plate for signs of heat damage and warpage. Place on surface plate (plate glass is acceptable) and use feeler gauge.

Clutch plate warp allowance:
0.1 mm (0.004 in)

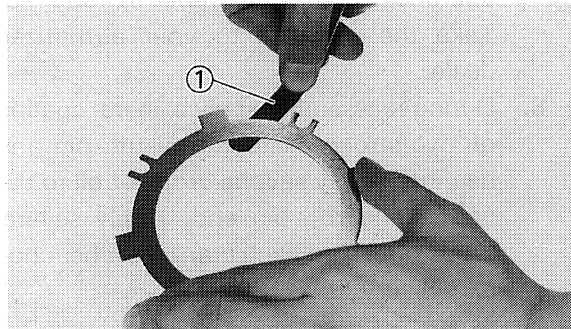

5. Checking the ball
Check balls for excessive wear or damage. If such wear is found, replace balls.
6. Checking the ratchet mechanism
Check for damage or wear on each pawl and dog. If damaged or worn to excess, replace it. Check the pawl-spring for damage and tension. If damaged or fatigued to excess, replace it.

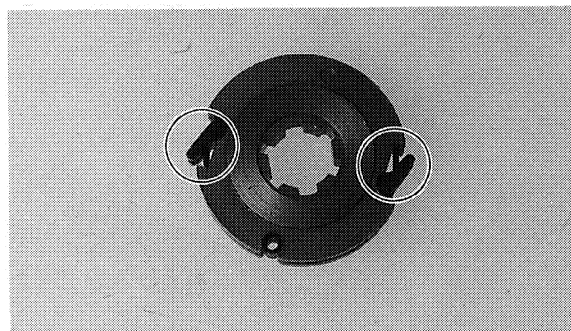

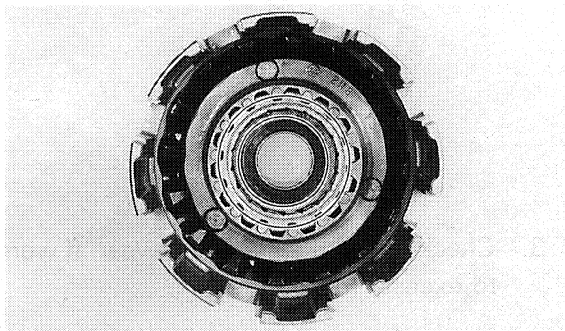
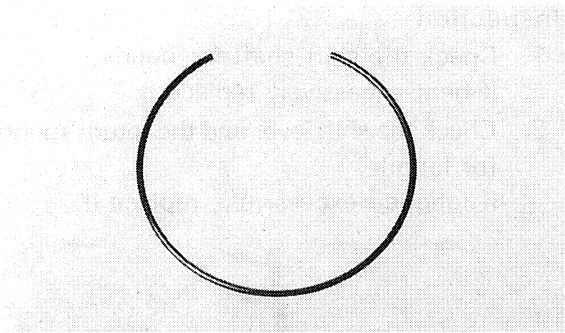


7. Measure the gap between the friction plate and pressure plate with a thickness gauge.

If the gap is found incorrect, it should be properly adjusted by changing the thickness of the clutch plate.

Thickness:
1.2, 1.4 or 1.6 mm
(0.047, 0.055, 0.063 in)


Clutch adjustment gap (a):
1.40 ~ 1.75 mm (0.055 ~ 0.069 in)

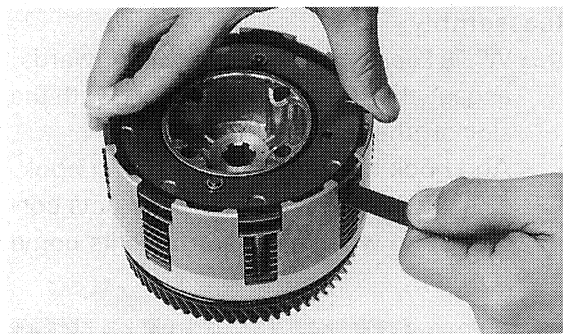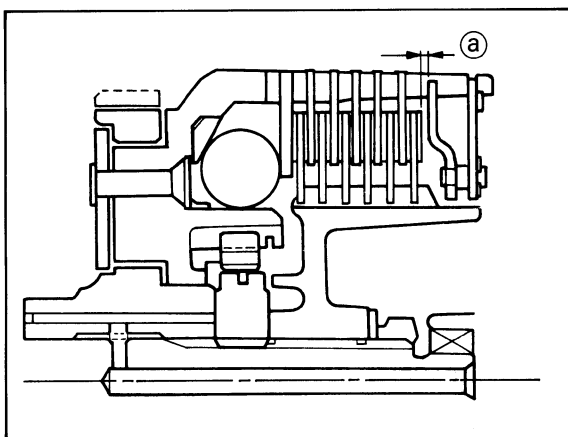

KICK STARTER


Removal

1. Unhook the kick spring from its post in the crankcase. Allow it to relax. Then remove the kick axle assembly by rotating the shaft counterclockwise and then pulling out the entire assembly. Check the gear teeth for wear and breakage.

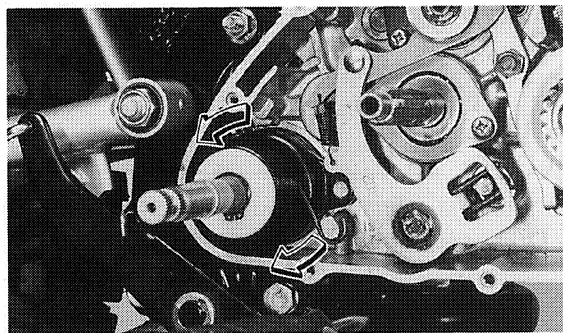

Inspection


1. The kick clip friction force is 0.9 ~ 1.5 kg (2.0 ~ 3.3 lb). If above pressure is too strong, spring wear and kick starter slipping will result. If it is too weak, the same slippage will occur particularly at low temperatures. Do not try to bend the clip.

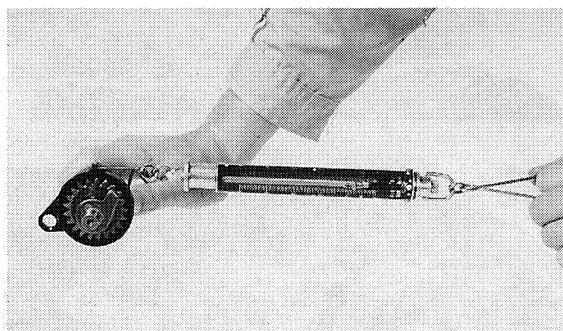

2. Check the clip for damage and wear, and determine whether or not, it should be replaced.

Reassembly

1. While keeping the kick stopper upwards, engage the kick axle return spring with the slot on the end of the kick axle. And hook the spring to the spring hook. Check whether the kick starter acts correctly and whether it returns to its home position.

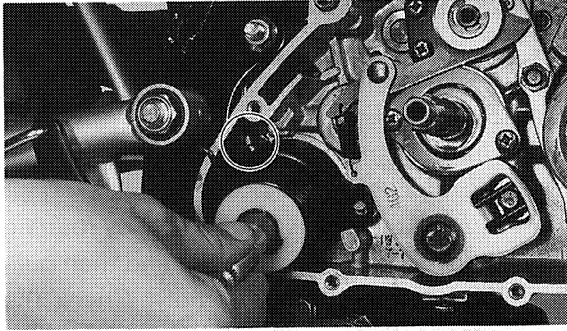


2. After installing the kick assembly be sure to check whether it operates smoothly or not.

SHIFTER NOTE:


Shifter maintenance should be performed with clutch assembly removed.

Removal

1. Remove the shift lever assembly and stopper lever.

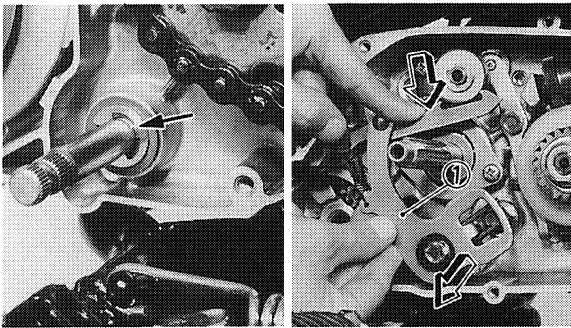


1. Shift lever assembly

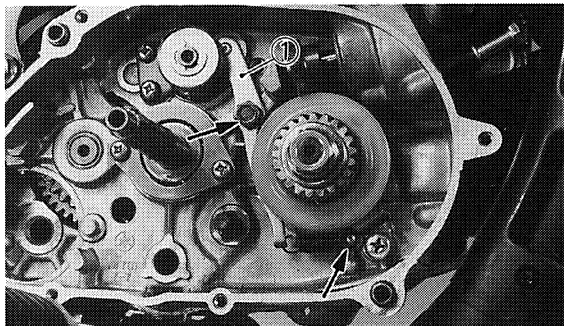


1. Stopper lever

Inspection


1. Check the shift shaft for bends. If bent excessively replace it.
2. Check the shift lever and the return spring for fatigue. If fatigued excessively, replace it.

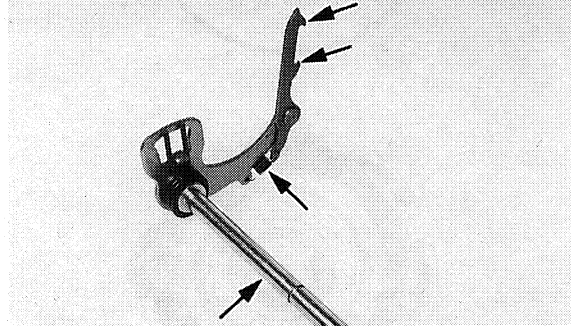

3. Check the stopper lever for wear. If worn to excess, replace it.

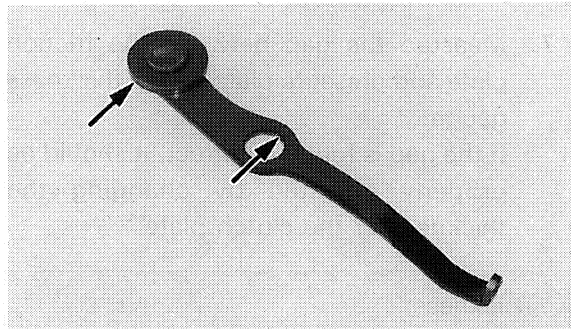

4. After installation of the shift shaft, check the clearances A and A' (between the prongs of shift lever 1 and shift drum pins) are equal.

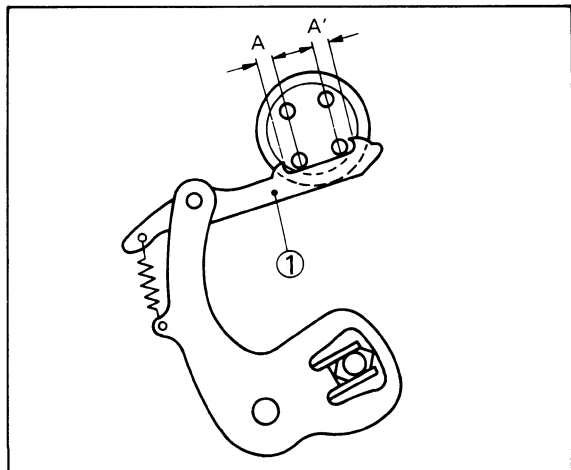


1. Shift lever 1


Installation

1. Before installation, grease the shift shaft oil seal.
2. Be sure to install the stopper lever first, and then shift shaft assembly.


C.D.I MAGNETO

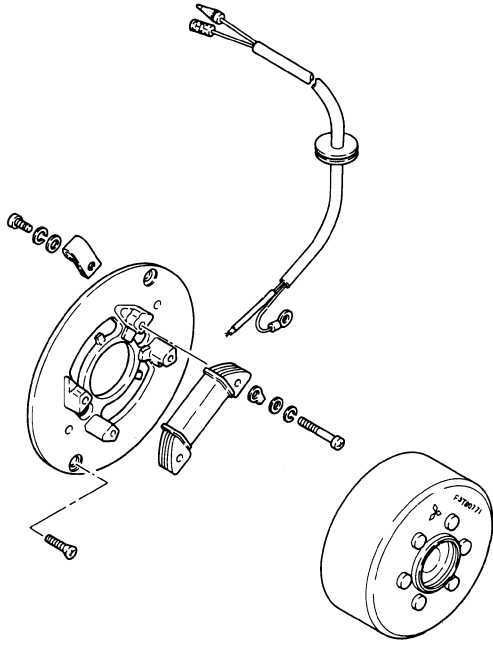


CRANKCASE

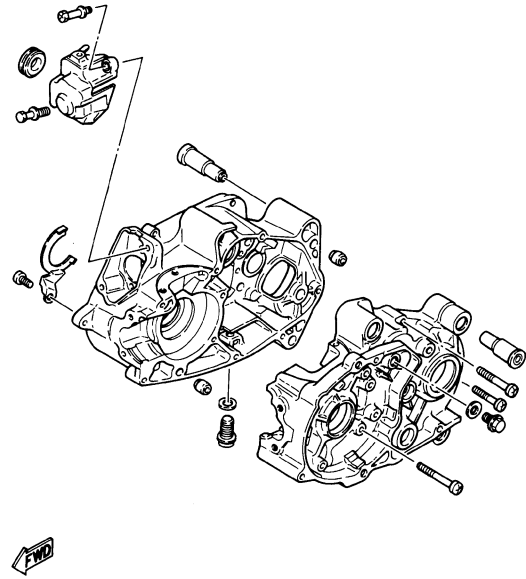

TRANSMISSION

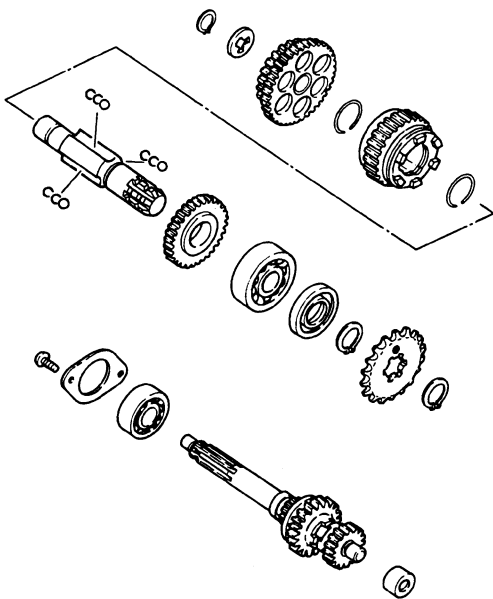


KICK STARTER

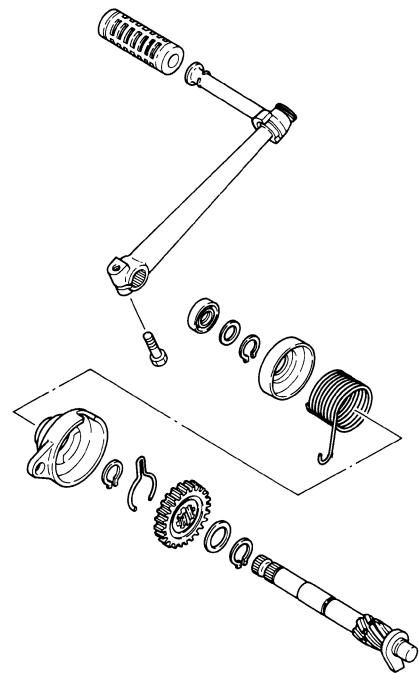


CHASSIS

FRONT WHEEL

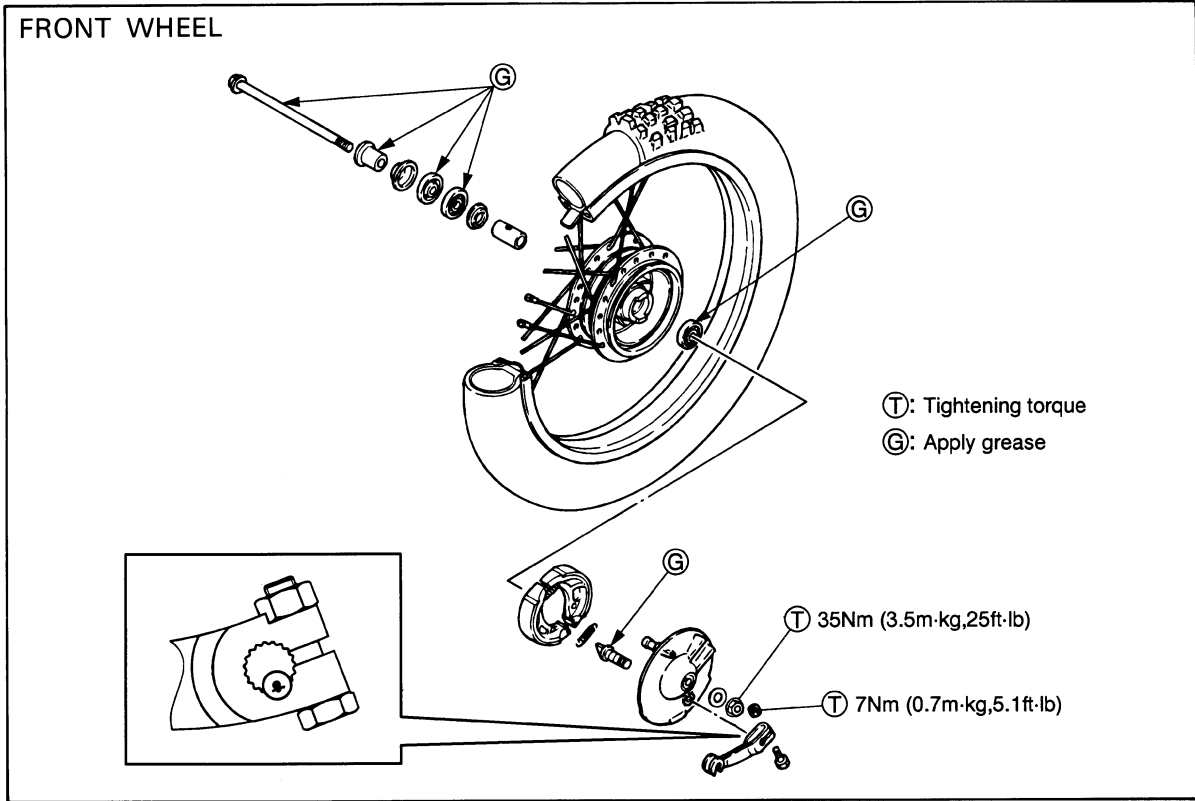


REAR WHEEL

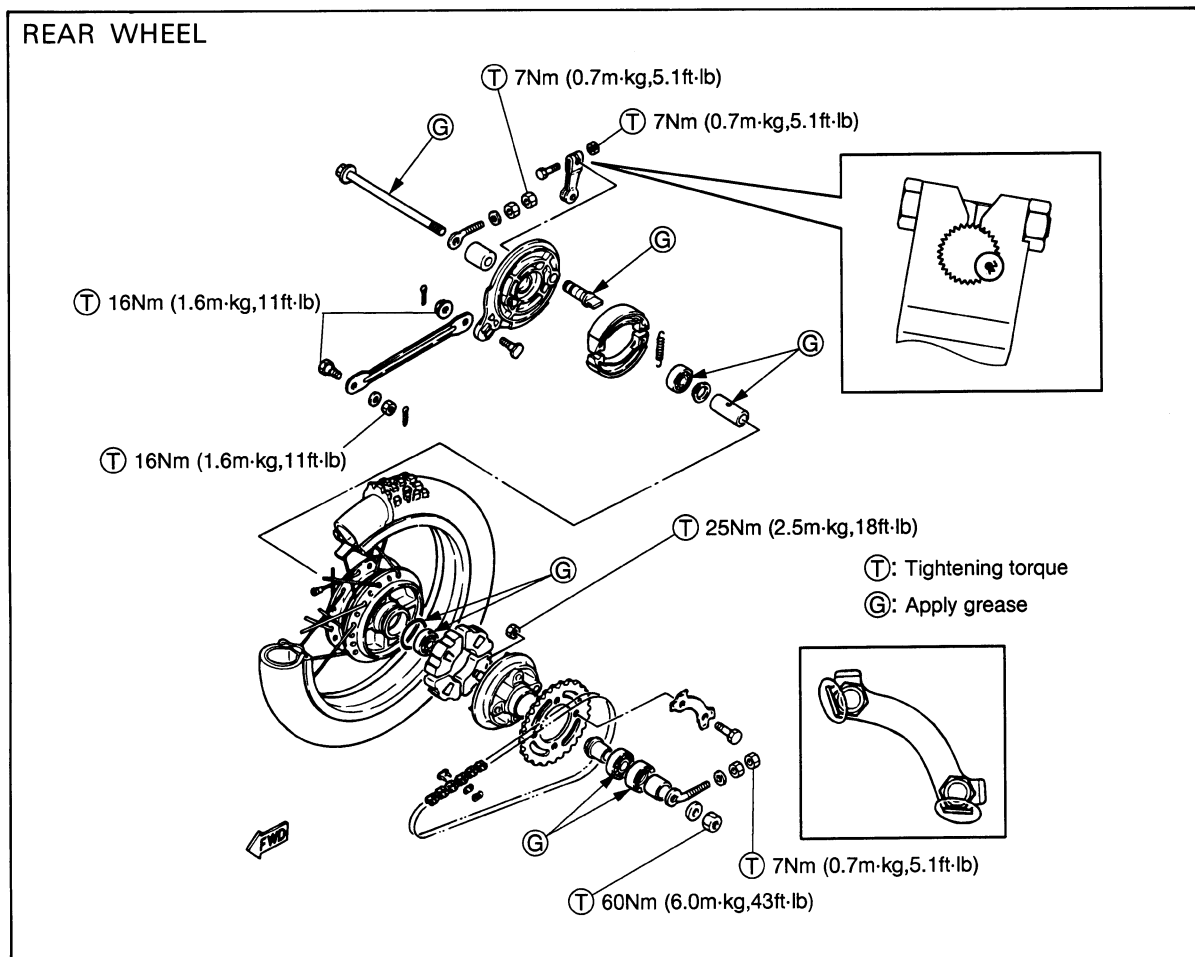

FRONT WHEEL

Removal

1. Elevate the front wheel by placing a suitable stand under the engine.
2. Remove the brake cable: Loosen all cable adjuster screws and remove cable from handle lever holder. Then remove cable from cam lever at front brake shoe plate.
3. Remove the axle nut ① and the washer ②.

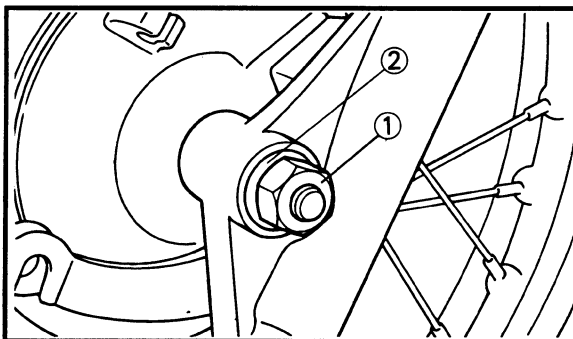


1. Axle nut 2. Washer

4. Turn and pull out the front wheel axle; the wheel assembly can now be removed.

Installation

When installing front wheel, reverse the removal procedure taking the following steps:

1. Check for proper engagement of the boss on the outer fork tube with the locating slot on the brake shoe plate.

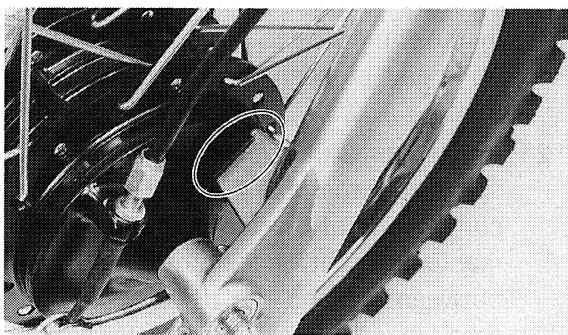


2. Tighten the axle nut.

Axle nut torque:
35 Nm (3.5 m · kg, 25 ft · lb)

REAR WHEEL

Removal

1. Elevate the rear wheel by placing a suitable stand under the engine.
2. Remove the tension bar and the brake rod from the brake shoe plate. The tension bar can be removed by removing the cotter pin and nut from the tension bar bolt. The brake rod can be removed by removing the adjuster.
3. Disconnect the drive chain.
4. Loosen the lock nuts and chain slack adjusting nuts on both sides.
5. Remove the axle nut and washer.

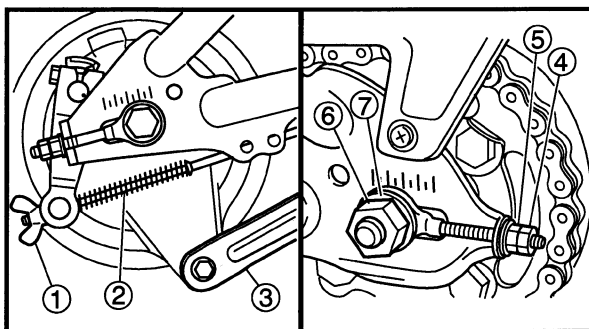


1. Adjuster 4. Lock nut 7. Washer
2. Brake rod 5. Adjusting nut
3. Tension bar 6. Axle nut

6. The rear wheel assembly can be removed from the machine by pulling the wheel axle.

Installation

The rear wheel can be installed by reversing the removal procedure. Take the following steps.

1. When connecting the chain, make certain closed end of master link clip is facing direction of rotation.

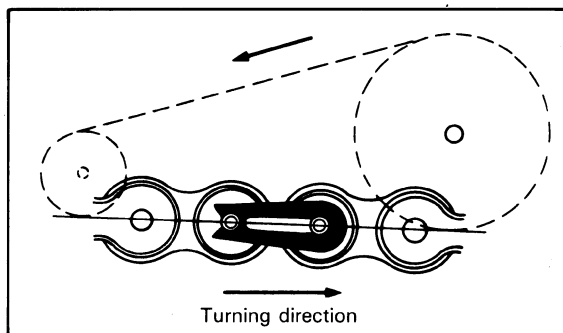

2. Be sure to adjust the chain slack. (Refer to "Drive chain slack adjustment".)

3. Tighten the axle nut and tension bar nut.

Axle nut torque:
60 Nm (6.0 m•kg, 43 ft•lb)
Tension bar nut:
16 Nm (1.6 m•kg, 11 ft•lb)

4. Insert the new cotter pin into the tension bar bolt.

⚠ WARNING

Always use a new cotter pin.


5. Bend the end of the cotter pin.

BRAKE SHOE INSPECTION

Measure the outside diameter of the brake shoe set with slide calipers.

If they measure less than replacement limit, replace them. Smooth out any rough spots on shoe surface with sandpaper.

	Front	Rear
Brake shoe diameter	95 mm (3.74 in)	110 mm (4.33 in)
Replacement limit	92 mm (3.62 in)	107 mm (4.21 in)

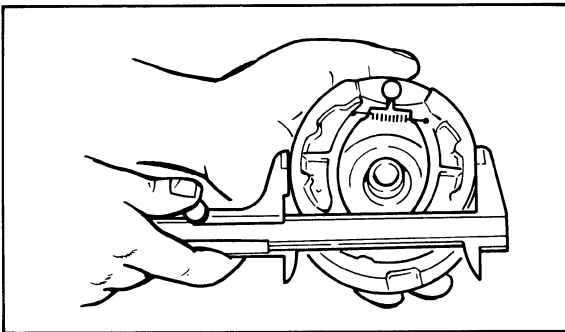

BRAKE DRUM INSPECTION

Check the inner surface of the brake drum and remove any scratches with emery cloth. Remove any oil with a cloth dipped in solvent. If damage is more extensive, have a Yamaha dealer or other qualified mechanic replace the wheel hub.

TIRE

Removal and repair

1. Remove the wheel from the machine.
2. Remove the lock nut from valve stem and release as much air as possible from the tire.
3. Push both tire beads away from the edges of the rim.

4. Starting opposite the valve stem on one side, use two round-ended tire irons to work the bead off the rim.

NOTE:

Use a tire removal lubricant and be careful not to pinch the tube with the tire irons.

5. Remove the valve stem from its hole and remove the tube.
6. If the tire is to be changed, remove the second bead from the rim using the tire irons and tire lubricant.

Inspection

1. Use a cloth to check for nails or other sharp objects in the tire.

CAUTION:

Always use a cloth to avoid cutting your hand.

2. Check for faults in the side wall. If there is any fault, the tire should be replaced as a damaged tire may burst at high speeds, which is extremely dangerous.
3. Inflate the tube with air and check the valve stem and the tube for damage and leakage, replace as required. Some leaks can be patched in an emergency, but it is best to replace tube.

Reassembly

1. Install one tire bead on the rim using tire irons and lubricant and then install the tube.
2. Inflate tube with air to about one-third the specified pressure. Hit the outer circumference of the tire with a soft hammer to make certain the tube is not caught between tire and rim. Release air from tube.
3. Inspect rim band and replace if damaged.
4. Install second tire bead starting opposite the valve stem using the irons and tire mounting lubricant.
5. Inflate tire to approximately 294 kPa (3 kgf/cm², 42 psi) and then reduce pressure to specified setting.

CAUTION

Check the valve stem; it must be pointing directly at center of wheel hub. If angled in any direction, release air and adjust tube position.


REPLACING WHEEL BEARINGS

If the bearings allow excessive play in the wheel or if they do not turn smoothly have your dealer replace the wheel bearings.

CHECKING RIM

1. Check for cracks, bends or warpage of rim. If a rim is deformed or cracked, it must be replaced.
2. Check the wheel run-out.
If deflection exceeds tolerance, check wheel bearing or replace wheel as required.



Rim run-out limits:
Vertical — 2.0 mm (0.08 in)
Lateral — 2.0 mm (0.08 in)

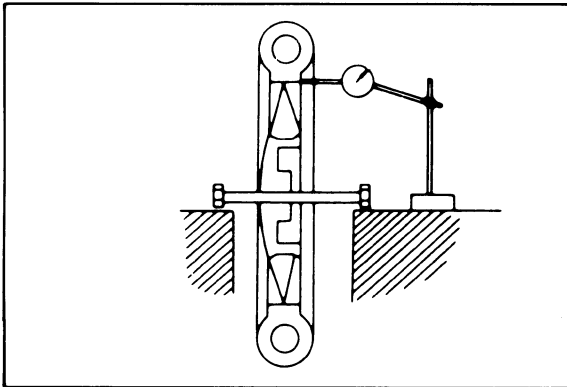


REAR SHOCK ABSORBER (MONOCROSS SUSPENSION)

Removal


1. Remove the seat and side cover assembly.

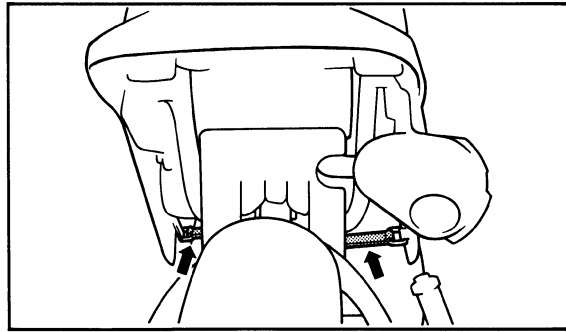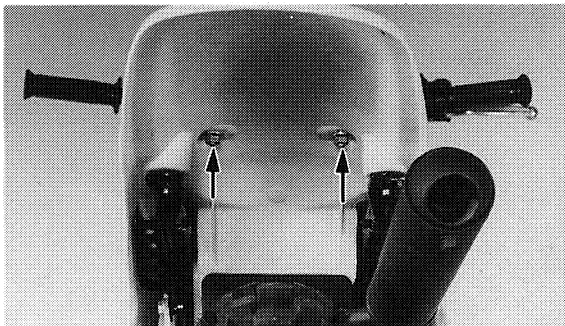


2. Turn the fuel cock to "OFF" and disconnect the fuel pipe.
3. Remove the fuel tank mounting bolt and holding band from fuel tank. Lift rear of the fuel tank up and pull back to clear frame mounts. Remove tank.

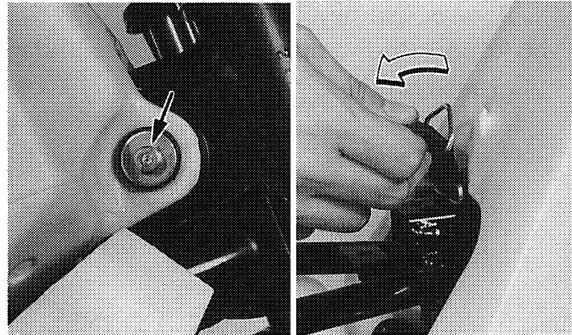


4. Elevate rear wheel by placing a suitable stand under the engine.
5. Remove the cotter pin and remove the pin from the frame.

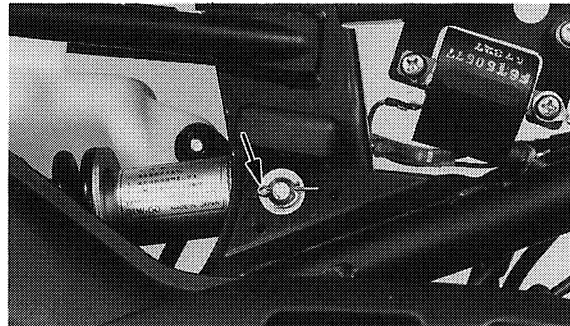



6. Remove the cotter pin and remove the pin from the swingarm.

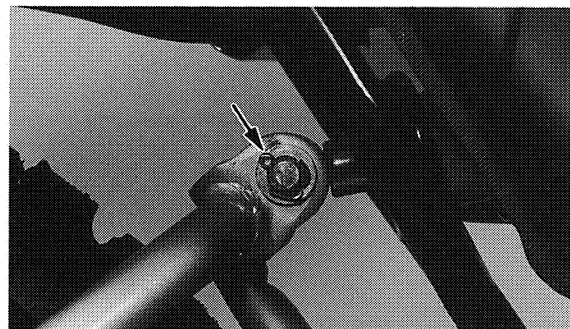

7. Remove the rear shock absorber from the machine. (To remove, pull the rear shock backward while lifting up the frame.)

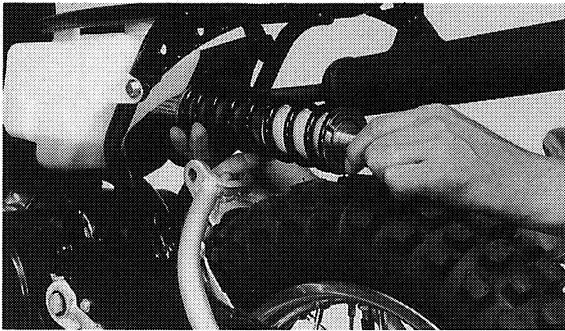



8. When reassembling, reverse the removal procedure taking care of the following points:
 - a. Always use new cotter pins.
 - b. Apply the molybdenum disulfide grease on the pins.

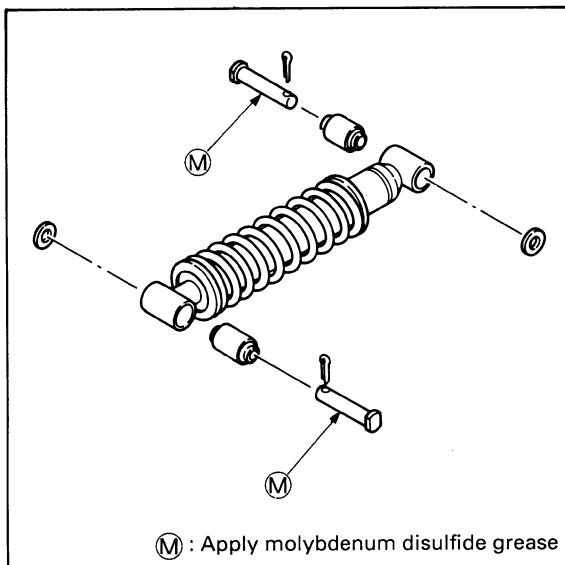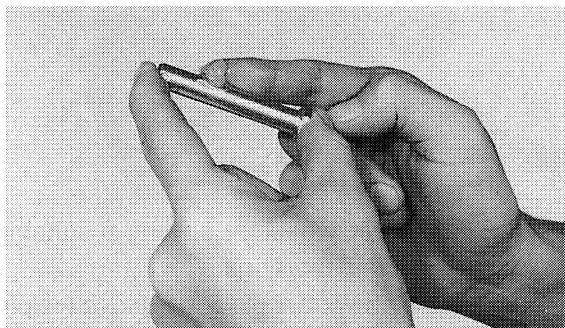

SWINGARM INSPECTION

1. With shock absorber removed, grasp the ends of the swingarm and move them from right to left to check for free play.

Swingarm free play: 1.0 mm (0.04 in)

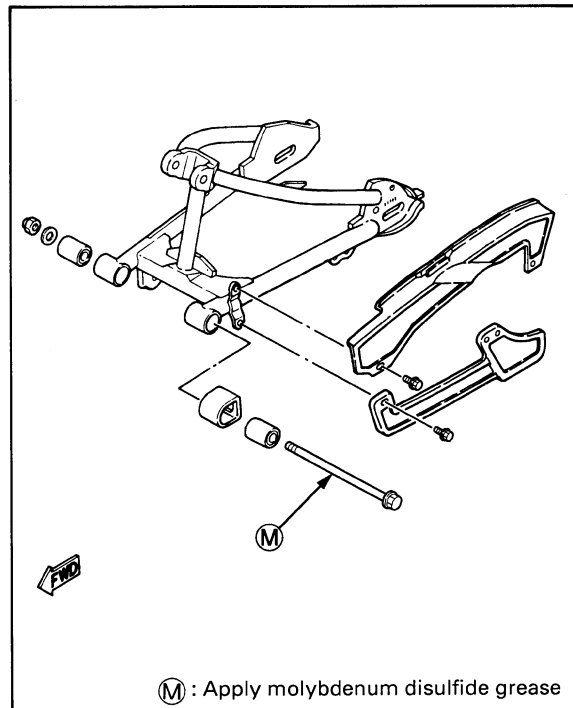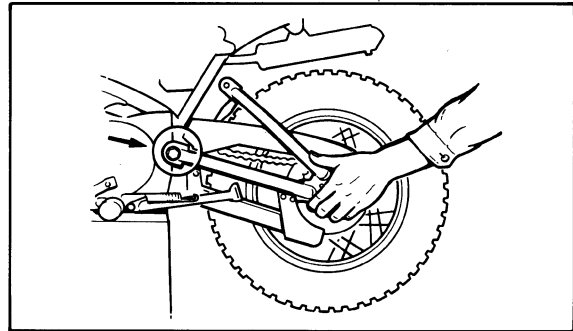

LUBRICATION OF LEVER, PEDALS, ETC.

1. Lubricate the pivoting parts of the brake lever with Yamaha Chain and Cable Lube or SAE 10W30 motor oil.
2. Lubricate the shaft of the brake pedal with lithium base grease.



CABLE INSPECTION AND LUBRICATION

1. Damage to the outer housing of the various cables, may cause corrosion and often free movement will be obstructed. An unsafe condition may result so replace as soon as possible.
2. If the inner cables do not operate smoothly, lubricate or ask a Yamaha dealer or other qualified mechanic to replace them.

Recommended lubricant:
Yamaha Chain and Cable Lube or
SAE 10W30 motor oil

THROTTLE CABLE AND GRIP LUBRICATION

The throttle twist grip assembly should be greased at the time that the cable is lubricated, since the grip must be removed to get at the end of the throttle cable. Two screws clamp the throttle housing to the handlebar. Once these two are removed, the end of the cable can be held high to pour in several drops of lubricant. With the throttle grip disassembled, coat the metal surface of the grip assembly with a suitable all-purpose grease to cut down friction. (See lubrication chart.)

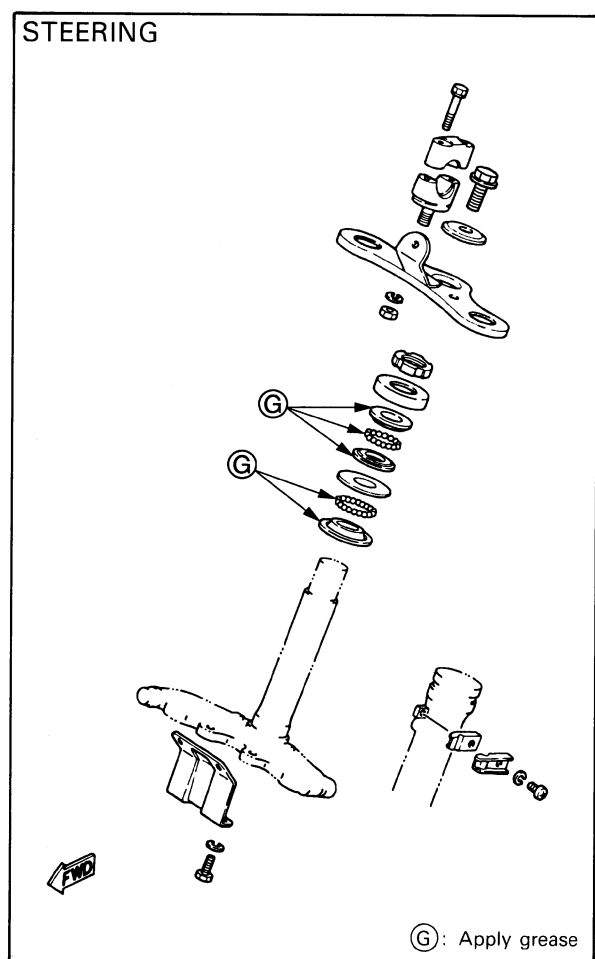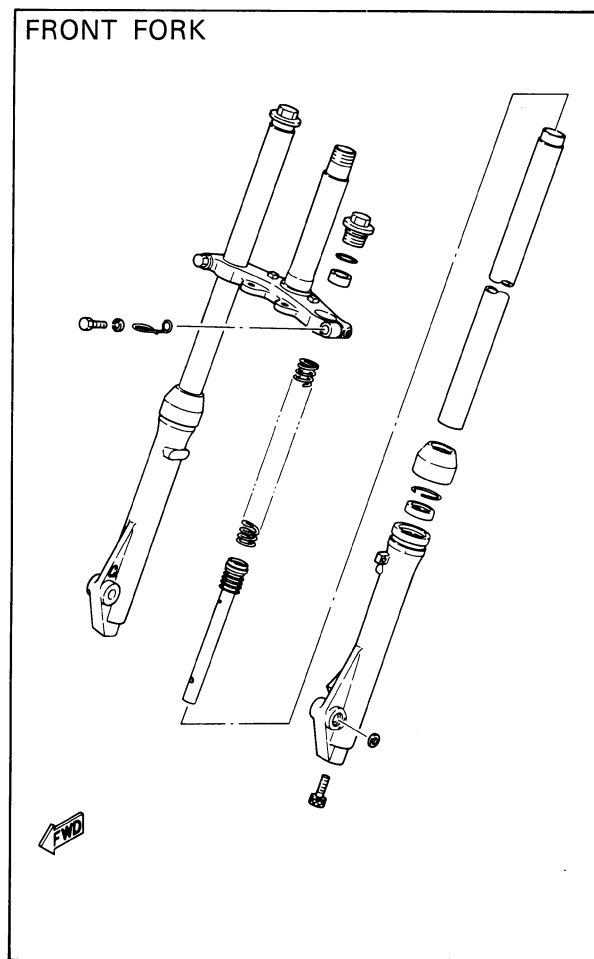

MISCELLANEOUS


ELECTRICAL COMPONENTS AND WIRING DIAGRAM

ELECTRICAL COMPONENTS


- ① CDI unit
- ② "ENGINE STOP" switch
- ③ Ignition coil
- ④ Spark plug
- ⑤ CDI magneto

COLOR CODE

- B..... Black
- O..... Orange
- B/R..... Black/Red
- B/W..... Black/White

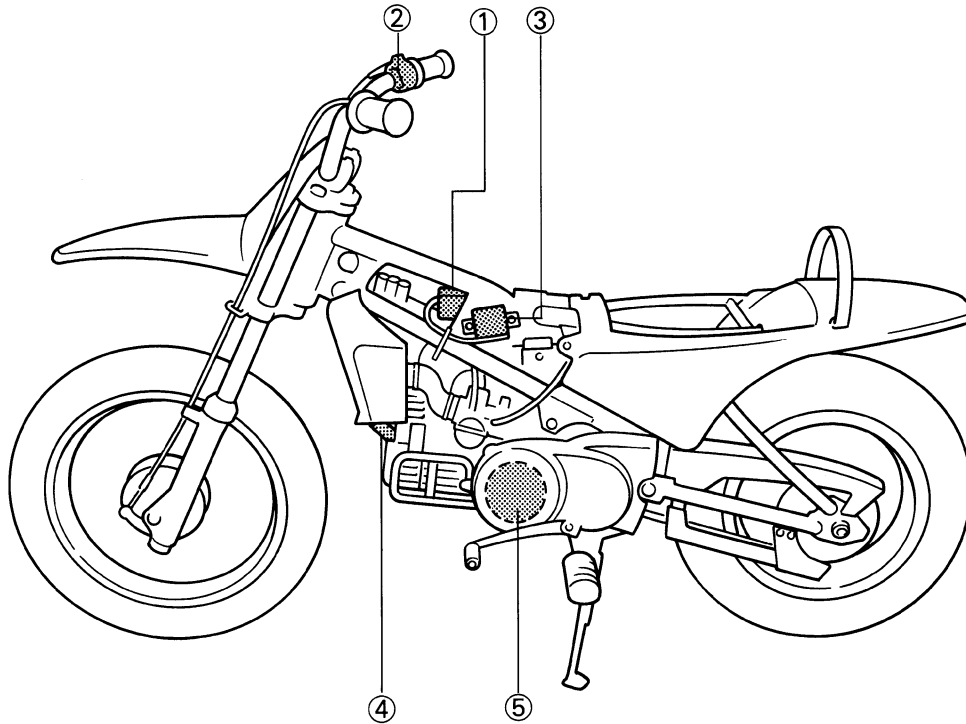


WIRING DIAGRAM

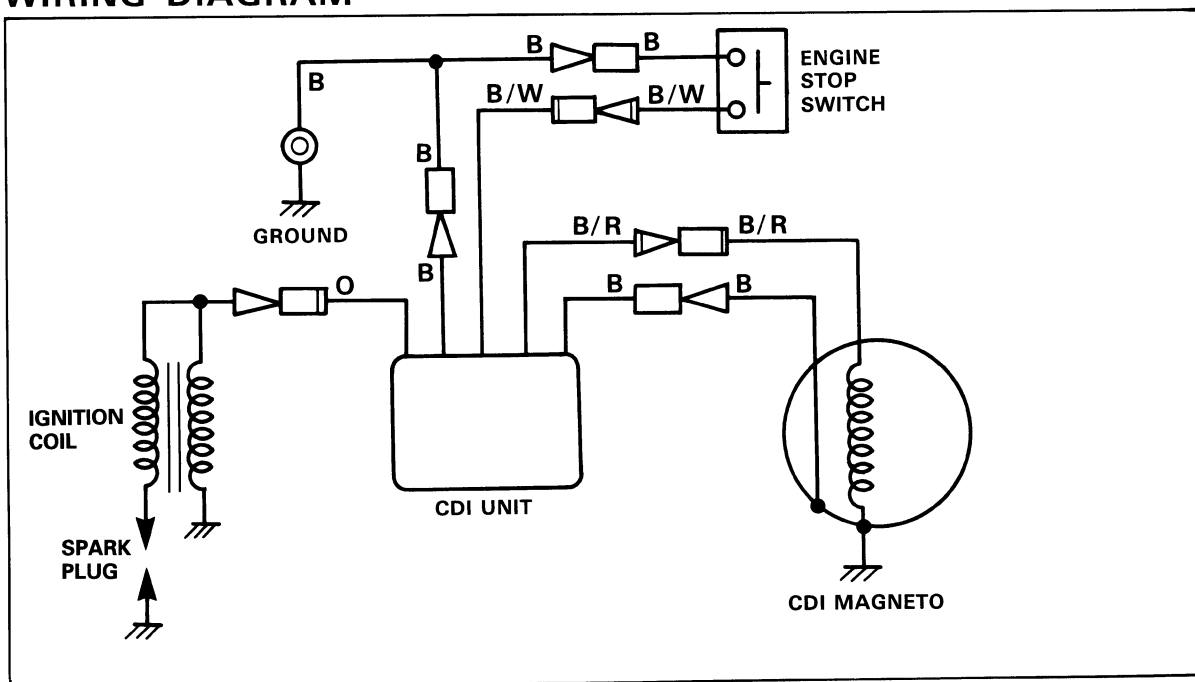


TROUBLESHOOTING

1. No spark is produced or weak.

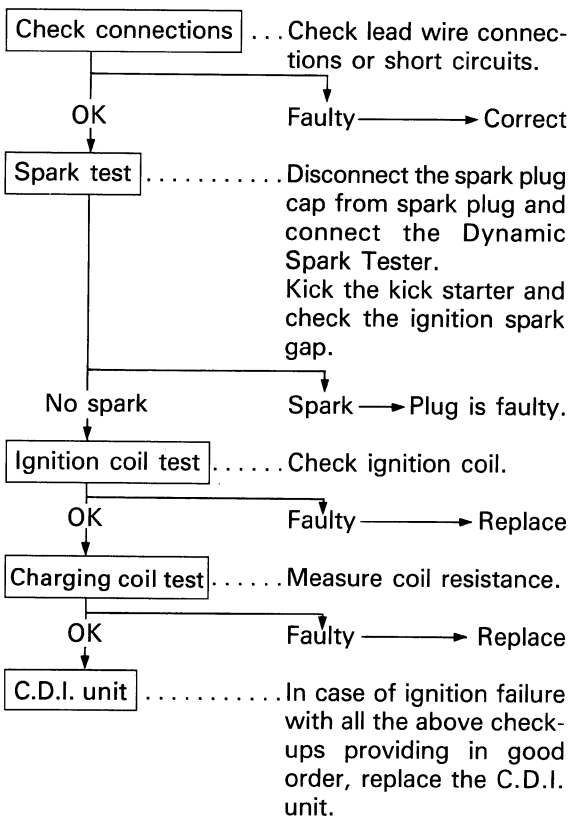


2. The engine starts but will not pick up speed.

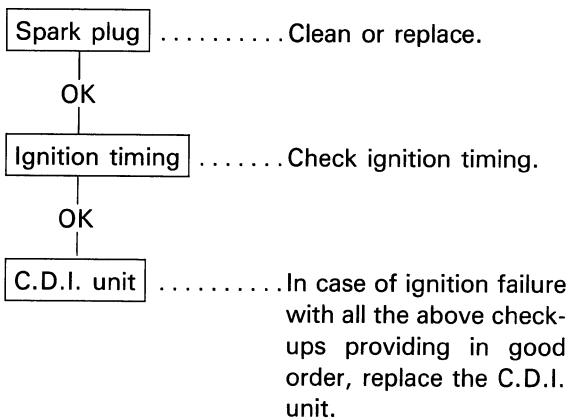

SPARK GAP TEST

1. Disconnect the spark plug cap from spark plug.
2. Connect the Dynamic Spark Tester ① as shown.

- ② Spark plug cap
- ③ Spark plug

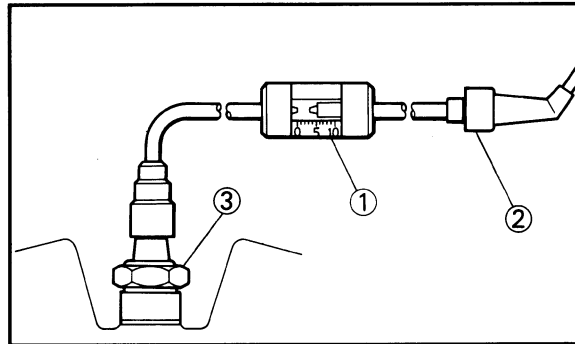


3. Kick the kick starter.
4. Check the ignition spark gap.
5. Start engine, and increase spark gap until a misfire occurs.

Minimum Spark Gap:
6.0 mm (0.24 in)

"ENGINE STOP" SWITCH INSPECTION

1. Inspect:
 - "ENGINE STOP" switch conduct

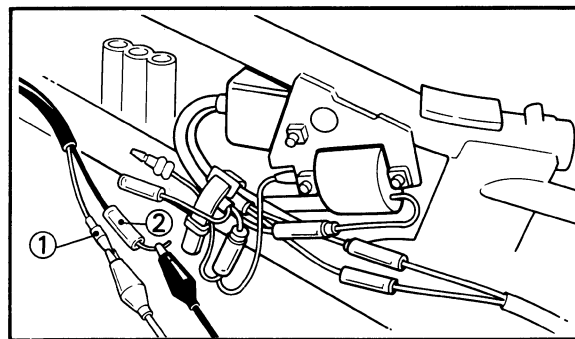


Tester (+) lead → Black/White lead ①
Tester (-) lead → Black lead ②

	B/W ①	B ②	Tester selector position
OFF	○	○	Ω × 1
RUN			

No continuity in the "OFF" position → Replace.
Continuity in the "RUN" position → Replace.

IGNITION COIL INSPECTION

- Inspect:
 - Primary coil resistance
Out of specification → Replace.

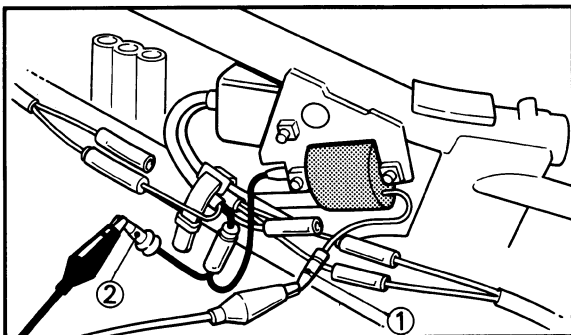


Tester (+) lead → Orange lead ①
 Tester (-) lead → Black lead ②

Primary Coil Resistance	Tester Selector Position
0.32 ~ 0.48 Ω at 20°C (68°F)	Ω × 1

CDI MAGNETO INSPECTION


- Inspect:
 - Charging coil resistance
Out of specification → Replace.

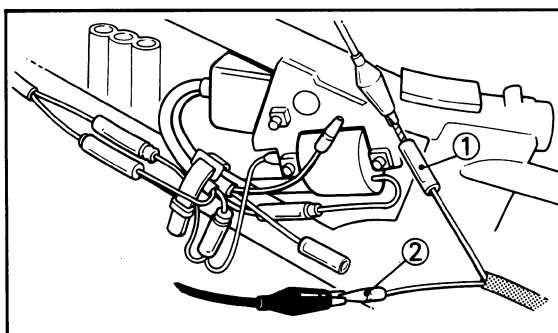

Tester (+) lead → Black/Red lead ①
 Tester (-) lead → Black lead ②

Charging Coil Resistance	Tester Selector Position
200 ~ 300 Ω at 20°C (68°F)	Ω × 100

- Inspect:
 - Secondary coil resistance
Out of specification → Replace.

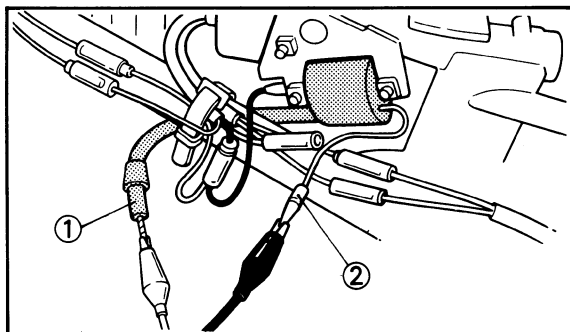

Tester (+) lead → Spark plug lead ①
 Tester (-) lead → Orange lead ②

Secondary Coil Resistance	Tester Selector Position
5.68 ~ 8.52 kΩ at 20°C (68°F)	kΩ × 1

TROUBLESHOOTING

Although Yamaha machines are given a rigid inspection before shipment from the factory, trouble may occur in operation. If this happens, check the machine in accordance with the procedures given in the troubleshooting chart below. If repair is necessary, ask a Yamaha dealer.


The skilled technicians at a Yamaha dealer provide excellent service. For replacement parts, use only genuine Yamaha parts. Imita-

tion parts are similar in shape but often inferior in quality of materials and workmanship; consequently, service life is shorter and more expensive repairs may be necessitated. Any fault in the fuel, compression or ignition system can cause poor starting or loss of power while riding. The troubleshooting chart describes quick and easy procedures for checking these systems.

Troubleshooting chart

⚠ WARNING

Never check the fuel system while smoking or in the vicinity of an open flame.

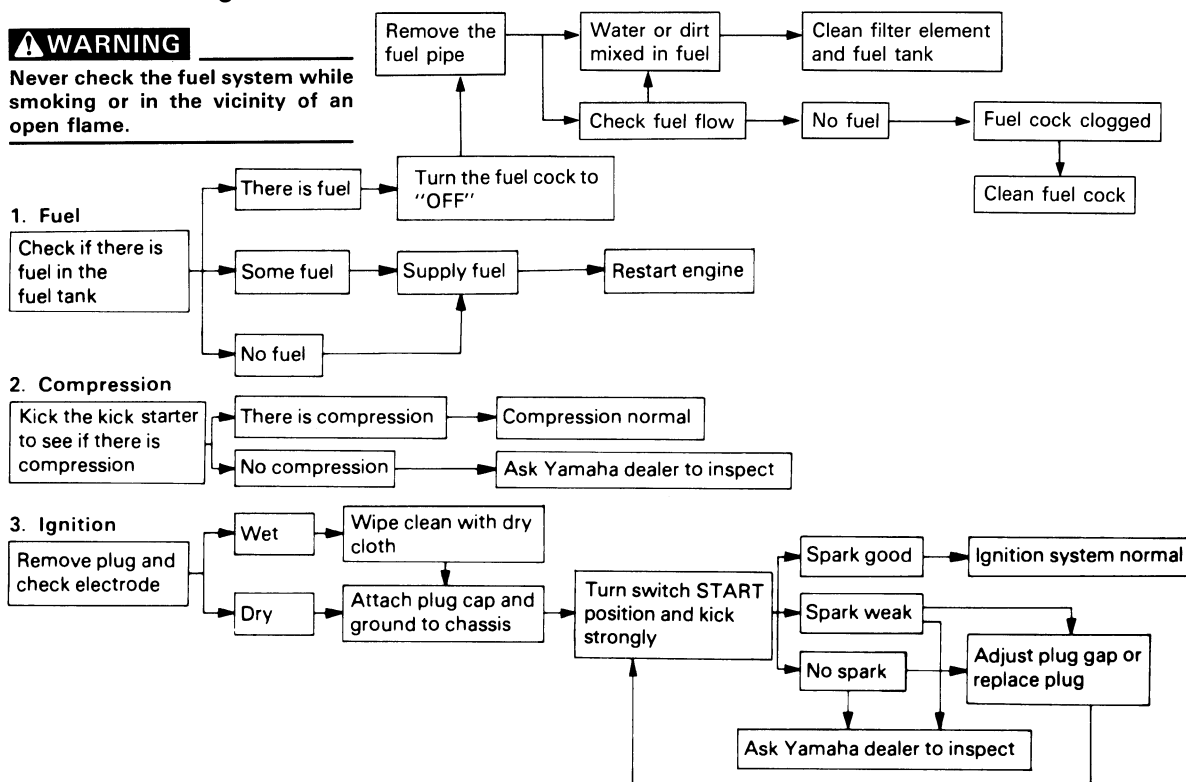

CLEANING AND STORAGE

Cleaning

Frequent thorough cleaning of your machine will not only enhance its appearance but will improve general performance and extend the useful life of many components.

1. Before cleaning the machine:
 - a. Block off end of exhaust pipe to prevent water entry; a plastic bag and strong rubber band may be used.
 - b. Remove air cleaner or protect it from water with plastic covering.
 - c. Make sure spark plug(s), fuel tank cap, transmission oil filler cap are properly installed.
2. If engine case is excessively greasy, apply degreaser with a paint brush. Do not apply degreaser to chain, sprockets, or wheel axles.
3. Rinse dirt and degreaser off with garden hose, using only enough hose pressure to do the job.

CAUTION:

Excessive hose pressure may cause water seepage and contamination of wheel bearings, front forks, brakes, and transmission seals. Many expensive repair bills have resulted from improper high pressure detergent applications such as those available in coin-operated car washers.

4. Once the majority of the dirt has been hosed off, wash all surfaces with warm water and mild, detergent-type soap. An old tooth brush or bottle brush is handy to reach hard-to-get-to places.
5. Rinse machine off immediately with clean water and dry all surfaces with a chamois, clean towel, or soft absorbent cloth.
6. Immediately after washing, remove excess moisture from chain and lubricate to prevent rust.
7. Chrome-plated parts such as handlebars, rims, spokes, forks, etc., may be further cleaned with automotive chrome cleaner.
8. Clean the seat with a vinyl upholstery cleaner to keep the cover pliable and glossy.

9. Automotive-type wax may be applied to all painted and chrome-plate surfaces. Avoid combination cleaner-waxes. Many contain abrasive which may mar paint or protective finish on fuel and oil tanks.
10. After finishing, start the engine immediately and allow to idle for several minutes.

NOTE:

Water may enter the air cleaner case during washing the machine. Be sure to remove the grommet attached to the lower left part of the case and drain the water, as required.

Storage

Long term storage (60 days or more) of your motorcycle will require some preventive procedures to insure against deterioration. After cleaning machine thoroughly, prepare for storage as follows:

1. Drain fuel tank, fuel lines, and carburetor float bowl(s).
2. Remove the empty fuel tank, pour a cup of SAE 10W30 oil in tank, shake the tank to coat inner surfaces thoroughly and drain off excess oil. Reinstall the tank.
3. Remove spark plug(s), pour about one tablespoon of SAE 10W30 oil in spark plug hole(s) and reinstall spark plugs. Kick engine over several times (with ignition off) to coat cylinder walls with oil.
4. Remove drive chain. Clean thoroughly with solvent and lubricate. Re-install chain or store in a plastic bag (tie to frame for safe-keeping).
5. Lubricate all the control cables.
6. Block up frame to raise both wheels off ground.
7. Tie a plastic bag over exhaust pipe outlet(s) to prevent moisture from entering.
8. If storing in humid or salt-air atmosphere, coat all exposed metal surfaces with a light film of oil. Do not apply oil to rubber parts or seat cover.

NOTE:

Make any necessary repairs before storing the machine.





SPECIFICATIONS



General

Item	PW80
Model: Code Number	3RVJ
Dimensions: Overall Length Overall Width Overall Height Seat Height Wheelbase Minimum Ground Clearance	1,540 mm (60.6 in) 640 mm (25.2 in) 880 mm (34.6 in) 635 mm (25.0 in) 1,055 mm (41.5 in) 185 mm (7.3 in)
Dry Weight: Without oil and fuel	57.0 kg (125.7 lb)
Engine: Engine Type Cylinder Arrangement Displacement: Bore × Stroke Compression a Ratio Starting System	Air cooled 2-stroke, gasoline, torque induction Single cylinder, forward inclined 79 cm ³ (2.78 Imp oz, 2.67 US oz) 47.0 × 45.6 mm (1.850 × 1.795 in) 6.6 : 1 Kick starter
Lubrication System:	Separate system (Yamaha Autolube)
Engine Oil: Oil Tank Capacity Oil Grade	0.95 L (0.84 Imp qt, 1.00 US qt) Yamalube 2-S or air-cooled 2-stroke engine oil
Transmission Oil: Periodic Oil Change Total Amount Oil Grade	0.65 L (0.57 Imp qt, 0.69 US qt) 0.75 L (0.66 Imp qt, 0.79 US qt) Yamalube 4 (10W30) or SAE 10W30 type SE motor oil
Air Filter:	Wet type element
Fuel: Type Tank Capacity Reserve Amount	UNLEADED GASOLINE ONLY 4.9 L (1.08 Imp gal, 1.29 US gal) 1.0 L (0.22 Imp gal, 0.26 US gal)
Carburetor: Type Manufacturer	VM15SC MIKUNI

Item	PW80
Spark Plug: Type/Manufacturer Gap	BP6HS/NGK, W20FP/DENSO 0.6 ~ 0.7 mm (0.024 ~ 0.028 in)
Clutch Type:	Wet, centrifugal automatic
Transmission: Primary Reduction System Primary Reduction Ratio Secondary Reduction System Secondary Reduction Ratio Transmission Type Operation Gear Ratio: 1st 2nd 3rd	Gear 66/ 21 (3.143) Chain drive 32/ 15 (2.133) Constant mesh, 3-speed Left foot operation 39/ 12 (3.250) 29/ 16 (1.812) 22/ 17 (1.294)
Chassis: Frame Type Caster Angle Trail	Steel tube backbone 26° 62 mm (2.44 in)
Tire: Type Size (F) Size (R)	With tube 2.50-14-4PR 3.00-12-4PR
Tire Pressure: Front Rear	100 kPa (1.0 kgf/cm ² , 15 psi) 100 kPa (1.0 kgf/cm ² , 15 psi)
Brake: Front Brake Type Operation Rear Brake Type Operation	Drum brake Right hand operation Drum brake Right foot operation
Suspension: Front Suspension Rear Suspension	Telescopic fork Swingarm (Monocross suspension)
Shock Absorber: Front Shock Absorber Rear Shock Absorber	Coil spring, Oil damper Gas, Coil spring, Oil damper
Wheel Travel: Front Wheel Travel Rear Wheel Travel	110 mm (4.3 in) 95 mm (3.7 in)
Electrical: Ignition System Generator System	C.D.I. Magneto Flywheel magneto

Engine

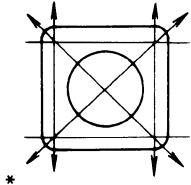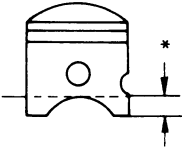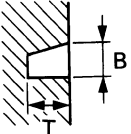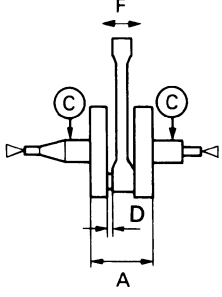Item	PW80
Cylinder Head: Warp Limit 	0.03 mm (0.0012 in) *Lines indicate straightedge measurement.
Cylinder: Bore Size Taper Limit Out of Round Limit	47.000~47.014 mm (1.8504~1.8509 in) 0.05 mm (0.0020 in) 0.01 mm (0.0004 in)
Piston: Piston Size/ Measuring Point* Piston Clearance Piston offset	 46.964~46.979 mm (1.8490~1.8496 in) / 5 mm (0.2 in) 0.033 ~ 0.038 mm (0.0013 ~ 0.0015 in) 0.2 mm (0.008 in), IN-side
Piston Ring: Sectional Sketch  End Gap (Installed) Side Clearance (Installed)	Top Ring/2nd Ring Keystone B = 2.0 mm (0.079 in) T = 2.0 mm (0.079 in) Top Ring/2nd Ring Top Ring/2nd Ring 0.15 ~ 0.35 mm (0.006 ~ 0.014 in) 0.020 ~ 0.060 mm (0.0008 ~ 0.0024 in)
Crankshaft:  Crank Width "A" Run Out Limit "C" Connecting Rod Big End Side Clearance "D" Small End Free Play "F"	 47.90 ~ 47.95 mm (1.886 ~ 1.888 in) 0.05 mm (0.0020 in) 0.30 ~ 0.80 mm (0.012 ~ 0.031 in) 1.0 mm (0.039 in)

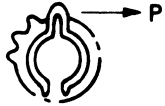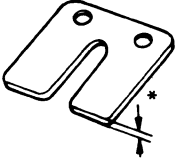Item	PW80
Clutch: Friction Plate Thickness/ Quantity Wear Limit Clutch Plate Thickness/ Quantity Warp Limit Clutch Spring Free Length/ Quantity	2.9 ~ 3.1 mm (0.114 ~ 0.122 in) 2.7 mm (0.106 in) 1.2~ 1.6 mm (0.047~0.063 in) × 5 0.1 mm (0.004 in) 12.9 mm (0.51 in) × 6
Shifter: Shifting Type	Cam drum and guide bar
Kick Starter Type: Kick Clip Friction Force 	Ratchet type P = 0.9~ 1.5 kg (2.0~3.3 lb)
Carburetor: Type/ Manufacturer/ Quantity I.D. Mark Main Jet (M.J.) Main Air Jet (M.A.J.) Jet Needle-clip Position (J.N.) Needle Jet (N.J.) Cutaway (C.A.) Pilot Jet (P.J.) Pilot Outlet Size (P.O.) Air Screw (turns out) (P.A.S.) Valve Seat Size (V.S.) Starter Jet (G.S.) Float Height (F.H.)	VM15SC/ MIKUNI/ 1 pc. 21W01 #125 ø2.5 3E3-3 E-4 2.5 #15 ø0.9 1-1/2 ø1.2 #30 20.8~ 22.8 mm (0.82~0.90 in)
Reed Valve: Material Thickness* Valve Stopper Height Valve Bending Limit 	G1N6 0.2 mm (0.008 in) 7.4~ 7.8 mm (0.291~0.307 in) 0.2 mm (0.008 in)

Tightening Torque

Part to be tightened	Thread size	Q'ty	Nm	m•kg	ft•lb
Spark plug	M14 × 1.25	1	25	2.5	18
Cylinder head (nut)	M 7 × 1.0	4	10	1.0	7.2
(stud)	M 7 × 1.0	4	8	0.8	5.8
Oil pump cover (upper)	M 6 × 1.0	1	7	0.7	5.1
(lower)	M 6 × 1.0	1	7	0.7	5.1
Oil pump	M 5 × 0.8	2	4	0.4	2.9
Carburetor joint	M 6 × 1.0	4	6	0.6	4.3
Reed valve	M 3 × 0.5	3	1	0.1	0.7
Exhaust pipe (front)	M 8 × 1.25	2	18	1.8	13
Silencer protector	M 5 × 0.8	2	4	0.4	2.9
Crankcase	M 6 × 1.0	10	7	0.7	5.1
Oil drain bolt	M12 × 1.5	1	20	2.0	14
Blind plug	M10 × 1.25	1	23	2.3	17
Crankcase cover (left)	M 6 × 1.0	4	7	0.7	5.1
Crankcase cover (right)	M 6 × 1.0	7	7	0.7	5.1
Kick starter	M 6 × 1.0	1	15	1.5	11
Primary drive gear	M12 × 1.0	1	50	5.0	36
Clutch boss	M16 × 1.0	1	50	5.0	36
Bearing plate cover	M 6 × 1.0	2	8	0.8	5.8
Shift guide	M 6 × 1.0	2	8	0.8	5.8
Torsion spring (shift shaft) stopper bolt	M 8 × 1.25	1	20	2.0	14
Stopper lever	M 6 × 1.0	1	10	1.0	7.2
Shift pedal	M 6 × 1.0	1	7	0.7	5.1
Rotor	M12 × 1.25	1	60	6.0	43
Stator	M 5 × 0.8	2	5	0.5	3.6

Chassis

Item	PW80
Steering System: Steering Bearing Type	Ball bearing
Front Suspension: Front Fork Travel Fork Spring Free Length Spring Rate Optional Spring Oil Capacity or Oil Level Oil Grade	110 mm (4.3 in) 425.1 mm (16.74 in) K = 3.5 N/mm (0.35 kg/mm, 19.6 lb/in) No 60 cm ³ (2.1 Imp oz, 2.0 US oz)/188.5 mm (7.42 in) (From top of inner tube fully compressed without spring) Yamaha fork oil 15wt or equivalent
Rear Suspension: Shock Absorber Travel Spring Free Length Spring Rate Optional Spring Enclosed Gas Pressure	48 mm (1.89 in) 169 mm (6.65 in) K = 42.3 N/mm (4.23 kg/mm, 237 lb/in) No 2,000 kPa (20 kg/cm ² , 284 psi)

Item	PW80
Swingarm: Swingarm Free Play Limit End	1.0 mm (0.04 in)
Wheel: Front Wheel Type Rear Wheel Type Front Rim Size/ Material Rear Rim Size/ Material Rim Runout Limit Vertical Lateral	Spoke Wheel Spoke Wheel 1.40 × 14/ Steel 1.60 × 12/ Steel 2.0 mm (0.08 in) 2.0 mm (0.08 in)
Drive Chain: Type/ Manufacturer Number of Links Chain Free Play	DID420M/ DAIDO 83 links + joint 40 ~ 53 mm (1.6 ~ 2.1 in)
Drum Brake: Type Front Rear Drum Inside Dia. Front Rear	Leading trailing Leading trailing 95 mm (3.74 in) Limit: 96 mm (3.78 in) 110 mm (4.33 in) Limit: 111 mm (4.37 in)
Brake Lever & Brake Pedal: Brake Lever Free Play Brake Pedal Position Brake Pedal Free Play	10 ~ 20 mm (0.39 ~ 0.79 in) 3 mm (0.12 in) 10 ~ 20 mm (0.39 ~ 0.79 in) (Vertical height below footrest top.)

Tightening Torque

Part to be tightened	Thread Size	Q'ty	Nm	m•kg	ft•lb
Front wheel axle	M10 × 1.25	1	35	3.5	25
Handle crown – Inner tube	M20 × 1.0	2	40	4.0	29
Under bracket – Inner tube	M10 × 1.25	2	33	3.3	24
Handle crown – Steering shaft	M10 × 1.25	1	42	4.2	30
Handle crown – Handle holder under	M10 × 1.25	2	40	4.0	29
Handle holder under – Handle holder upper	M 6 × 1.0	4	13	1.3	9.4
Steering ring nut	M25 × 1.0	1	1	0.1	0.7
Engine mount – Front	M 8 × 1.25	1	23	2.3	17
Engine mount – Under	M 8 × 1.25	1	26	2.6	19
Engine mount – Center	M 8 × 1.25	1	23	2.3	17
Rear wheel axle	M12 × 1.25	1	60	6.0	43
Lock nut (drive chain puller)	M 6 × 1.0	2	7	0.7	5.1
Nipple (spoke)	—	64	2	0.2	1.4
Sprocket wheel	M 8 × 1.25	4	25	2.5	18
Footrest – Frame (R)	M 8 × 1.25	1	26	2.6	19
Footrest – Frame (L)	M 8 × 1.25	1	26	2.6	19
Footrest – Sidestand	M 8 × 1.25	1	21	2.1	15
Front brake cam lever	M 6 × 1.0	1	7	0.7	5.1
Rear brake cam lever	M 6 × 1.0	1	7	0.7	5.1
Tension bar – Swingarm	M 8 × 1.25	1	16	1.6	11
Tension bar – Brake shoe plate	M 8 × 1.25	1	16	1.6	11
Starter lever	M11 × 1.25	1	1	0.1	0.7
Swingarm – Frame	M10 × 1.25	1	31	3.1	22
Fuel tank – Frame	M 6 × 1.0	2	10	1.0	7.2
Fuel tank – Fuel cock	M 6 × 1.0	2	7	0.7	5.1


Electrical

Item	PW80
Ignition System: Ignition Timing (B.T.D.C.) Advancer Type	20.6° at 4,000 r/min Electrical
C.D.I.: Model/ Manufacturer Charging Coil Resistance (Color) C.D.I. Unit-Model/ Manufacturer	4BC-00 / SHY 200 ~ 300 Ω at 20°C (68°F) (Black/Red – Black) 4BC-00 / SHY
Ignition Coil: Model/ Manufacturer Minimum Spark Gap Primary Winding Resistance Secondary Winding Resistance	4BC-00 / SHY 6 mm (0.24 in) 0.32 ~ 0.48 Ω at 20°C (68°F) 5.68 ~ 8.52 kΩ at 20°C (68°F)
Charging System:	Flywheel magneto

TORQUE SPECIFICATIONS

The list below covers those stud/bolt sizes with standard I.S.O. pitch threads. Torque specifications for components with thread pitches other than standard are given within the applicable chapter. Torque specifications call for dry, clean threads. Components such as the cylinder or cylinder head should be at room temperature prior to torquing. A cylinder head or any other item with several fasteners should be torqued down in a cross-wise pattern in successive stages until torque specification is reached. The method is similar to installing an automobile wheel and will avoid warping the component.

A (Nut)	B (Bolt)	General torque specifications		
		Nm	m · kg	ft · lb
10 mm	6 mm	6	0.6	4.3
12 mm	8 mm	15	1.5	11
14 mm	10 mm	30	3.0	22
17 mm	12 mm	55	5.5	40
19 mm	14 mm	85	8.5	61
22 mm	16 mm	130	13	94


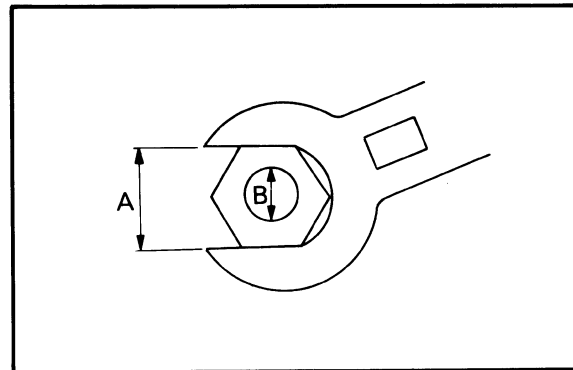


A. Distance across flats
B. Outside thread diameter


DEFINITION OF UNITS



Unit	Read	Definition	Measure
mm cm	millimeter centimeter	10^{-3} meter 10^{-2} meter	Length Length
kg	kilogram	10^3 gram	Weight
N	Newton	$1 \text{ kg} \times \text{m}/\text{sec}^2$	Force
Nm m · kg	Newton meter Meter kilogram	$\text{N} \times \text{m}$ $\text{m} \times \text{kg}$	Torque Torque
Pa N/mm	Pascal Newton per millimeter	N/m^2 N/mm	Pressure Spring rate
L cm^3	Liter Cubic centimeter	—	Volume or Capacity
r/min	Revolution per minute	—	Engine Speed

CABLE ROUTING

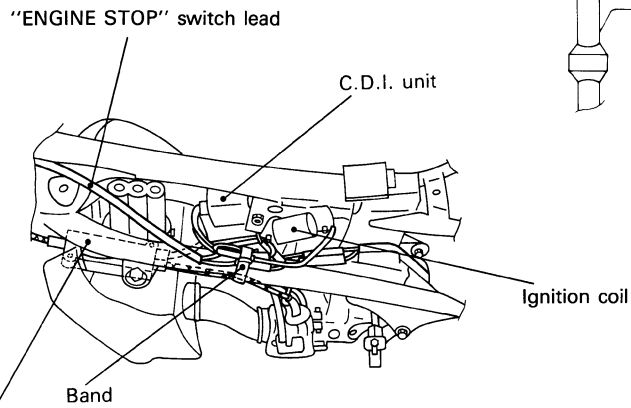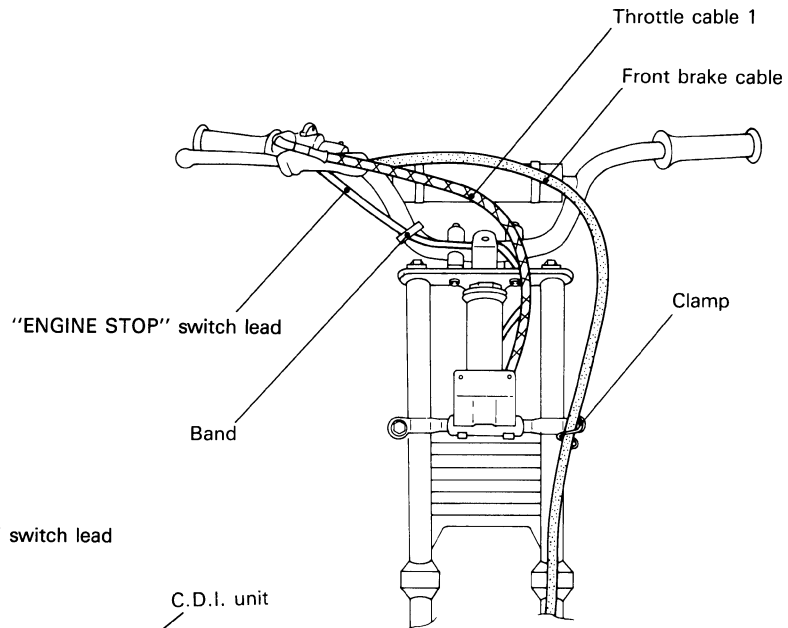

Cable cylinder
 Install the cable cylinder between the cleaner case and down-tube.

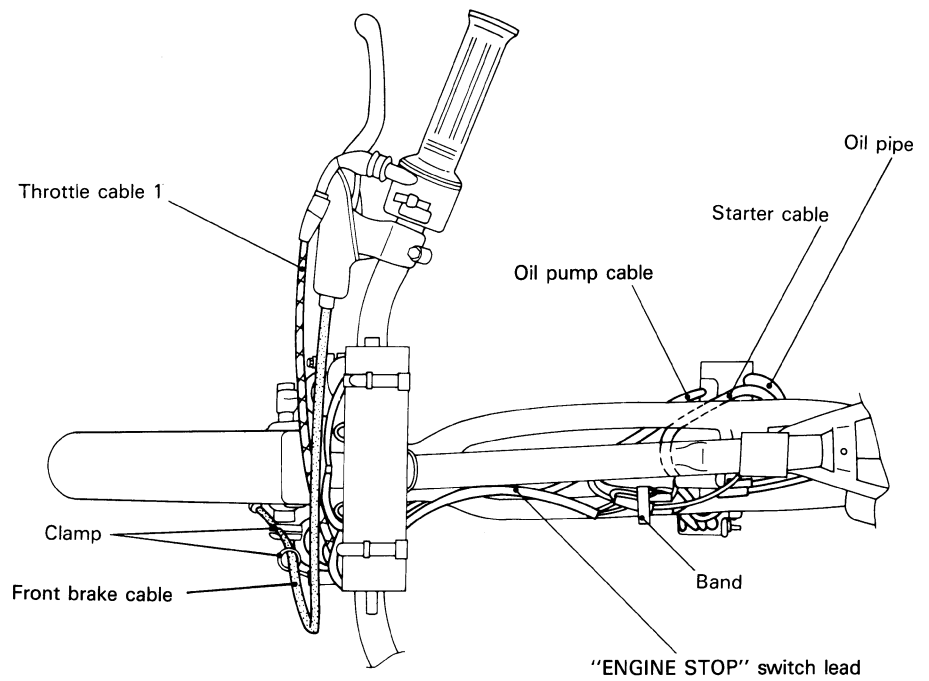

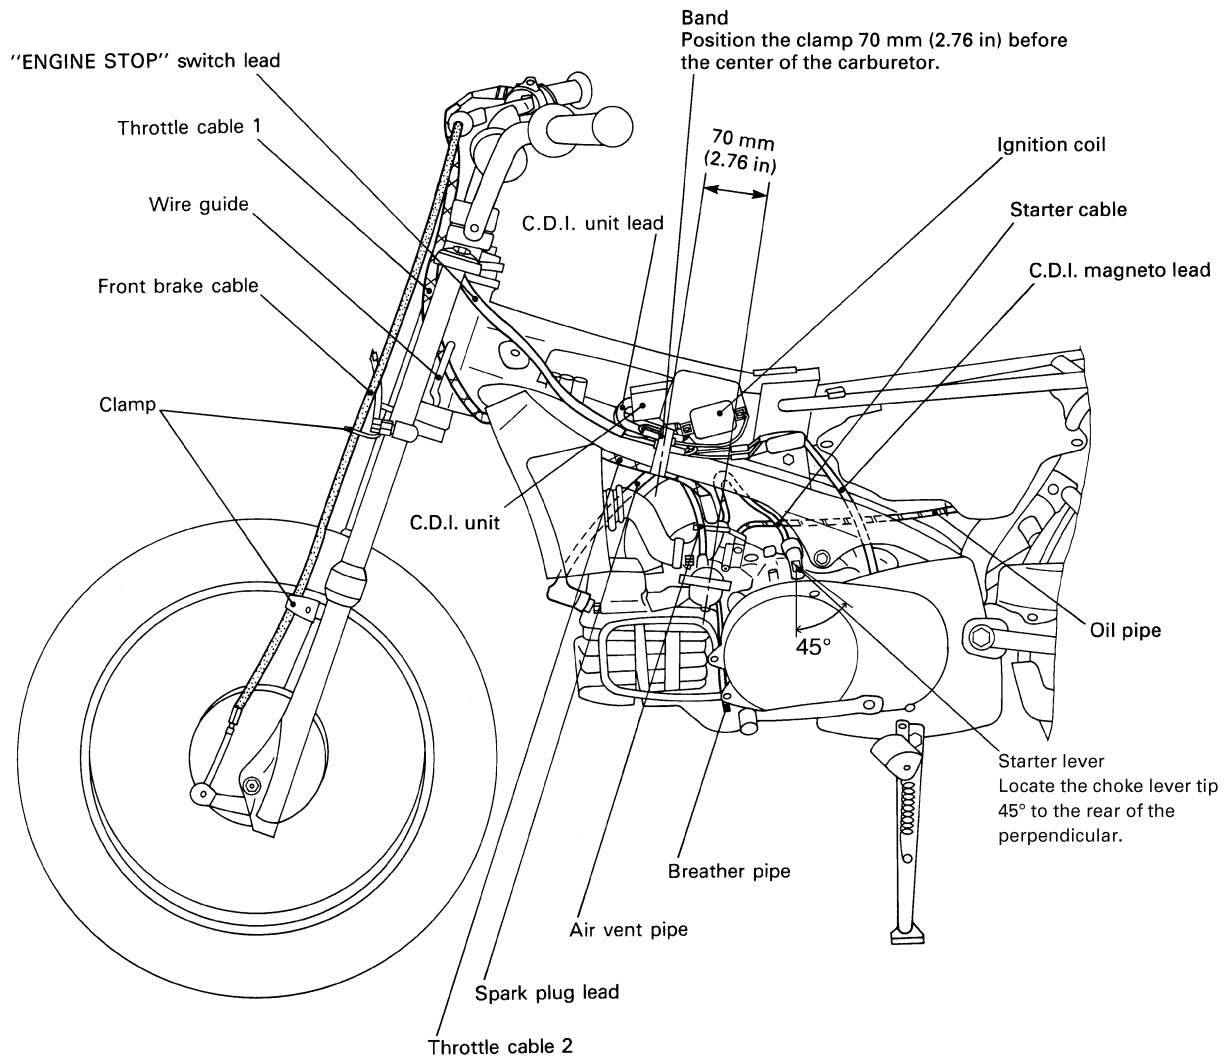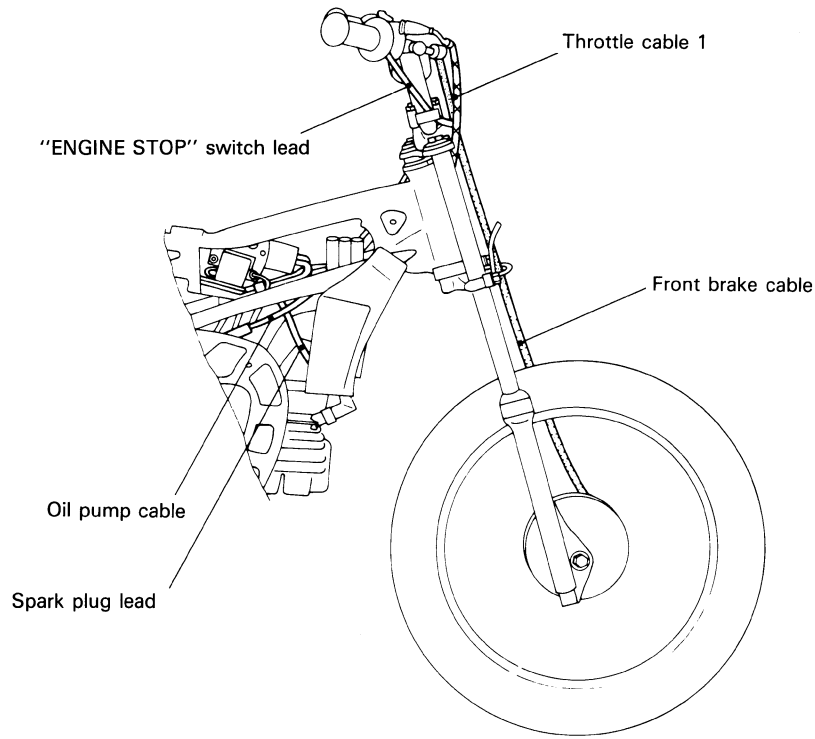

NOISE REGULATION

TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED:

Federal law prohibits the following acts or the causing thereof: (1)

The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

“AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE ACTS LISTED BELOW.”

These acts include tampering with the following systems; i.e., modification, removal, etc.

Exhaust system	Muffler Exhaust pipe Silencer
Intake system	Air cleaner case Air cleaner element Intake duct

MAINTENANCE RECORD

Copies of work orders and/or receipts for parts you purchase and install will be required to document maintenance done in accordance with the emission warranty. The chart below is printed only as a reminder to you that the maintenance work is required. It is not acceptable proof of maintenance work.

MAINTENANCE INTERVAL	DATE OF SERVICE	MILEAGE	SERVICING DEALER NAME AND ADDRESS	REMARKS
1 Month				
4 Months				
7 Months				
13 Months				
19 Months				
25 Months				
31 Months				
37 Months				
43 Months				
49 Months				
55 Months				
61 Months				